

# Full Bed Conversion Kit

1 low profile foot board

1 slate roll

2 side rails

2 "L" Brackets

8 screws

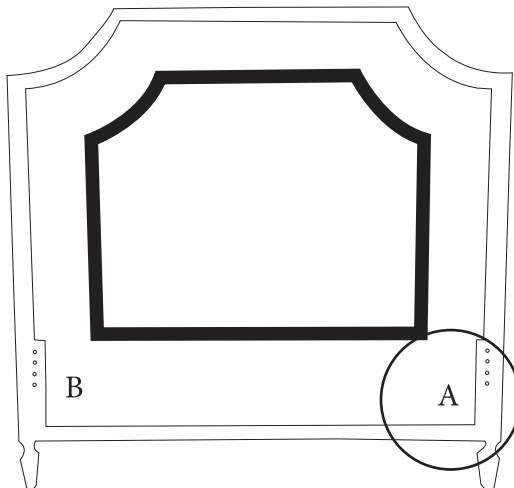


Figure 1

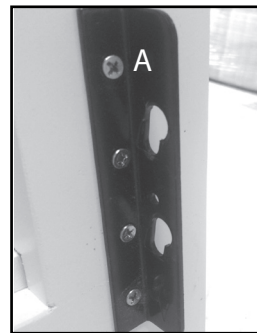


Figure 2



Figure 3

## Directions

Step 1: When you're ready to convert your crib to a full size bed, take apart the crib by removing front gate and side gates.

Step 2: Once the crib is taken apart, flip the headboard to the backside. There are marks where you will drill in the "L" brackets. (see figure 1)

Step 3: The "L" brackets are labeled B and A. The B bracket goes on the left side and the A bracket goes on the right side. Make sure the "L" bracket is positioned as it is in figure 2.

Step 4: Once the "L" brackets are drilled in headboard, place side rail into bracket. The side rails already have flat brackets attached, which will connect with the "L" brackets on the headboard. It's best to use a rubber mallet to make sure the brackets are securely connected.

Step 5: Take the low profile foot board and connect it to the other side and slide in the brackets.

Step 6 : After the bed is assembled, place the 4 wooden slats horizontally across length of bed. You now have a full bed that can be cherished for years to come.

**Never place mattress on top of slats without Bunkie Board or a Box Spring.  
Newport Cottages recommends the use of a Bunkie Board on low profile beds.**