

Toddler Guardrail Installation Diagram for Devon cribs

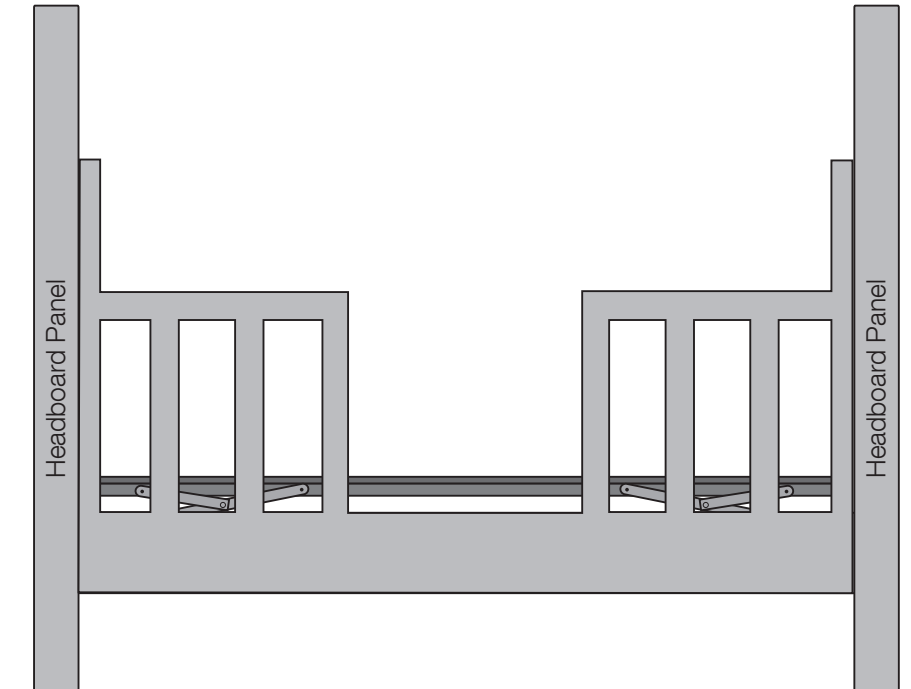


Figure 1



Figure 2

1. Remove mattress support from existing crib gate by unfastening all four 5/8" bolts. (See Figure 1)
2. Uninstall existing crib gate by removing the four allen bolts with the allen wrench (provided).
3. Replace with your new Toddler Guardrail.
4. Ensure that the lock washers are placed on all four Allen bolts. (See Figure 2)
5. Insert all four Allen bolts through the Toddler Guardrail pre-drilled holes and into the holes in the headboard. Do not tighten until all bolts are in place.
6. Reattach mattress support to crib using the four 5/8" bolts, ensuring that all bolts are fastened at the same height.