


Easy 2 Step Crib Setup

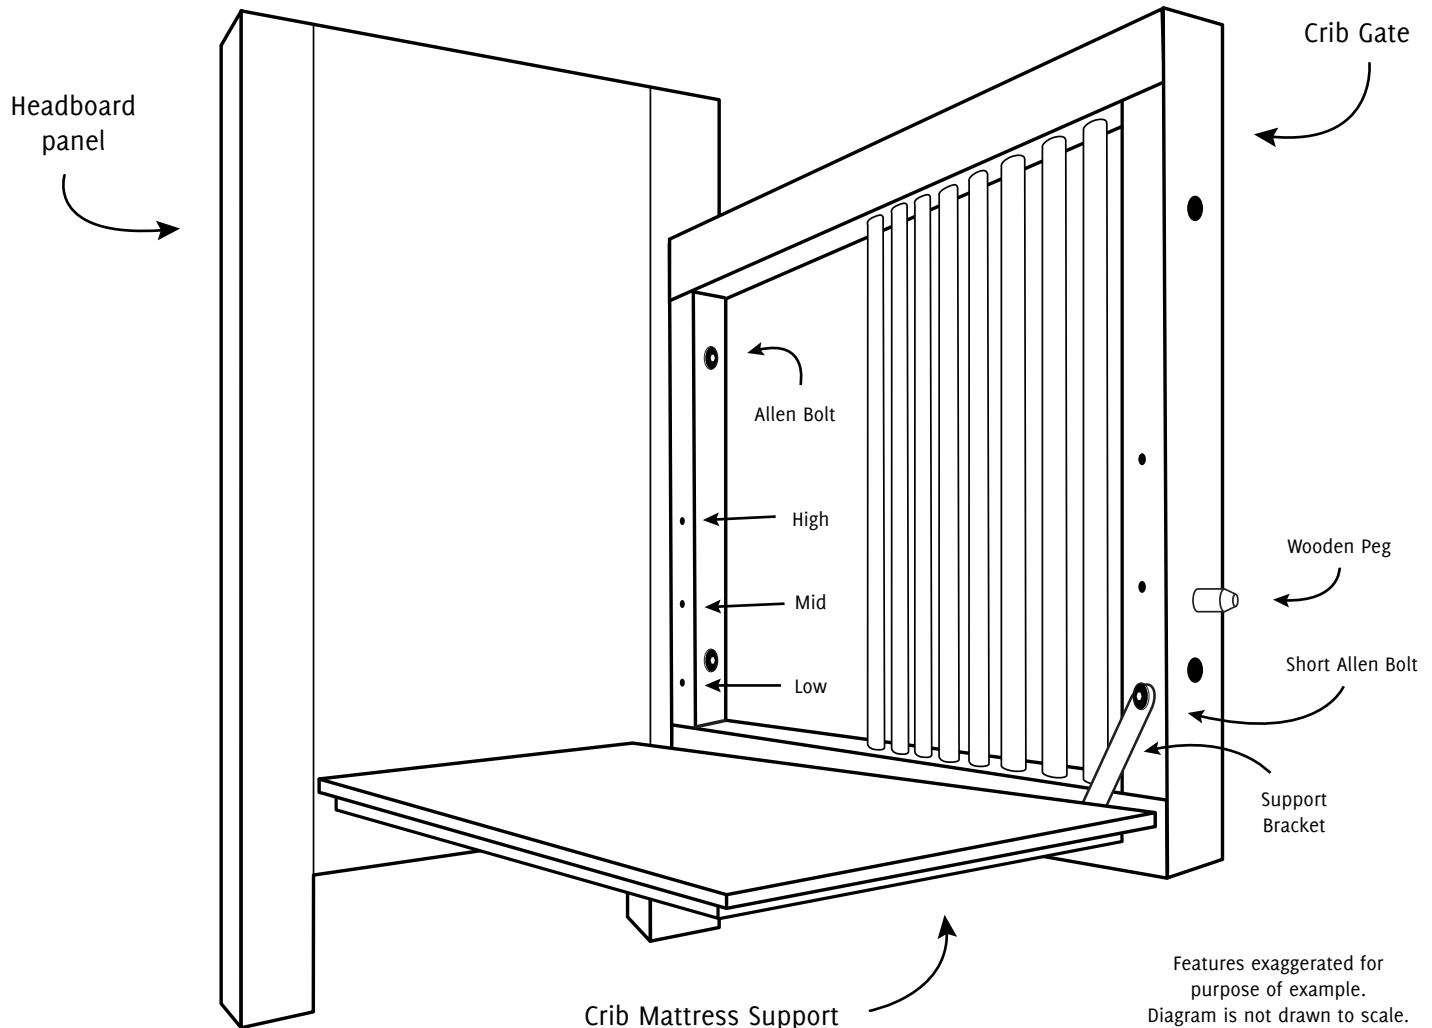

Step 1

Attach both crib gates to headboard panels using 8 long Allen bolts and lock washers, ensuring that the wooden pegs in the gates match up with the recessed holes in the headboard panels.

Step 2

Attach crib mattress support to gates at desired level (High 21", Mid 15", or Low 9") using 4 short Allen bolts and lock washers to connect the support brackets to crib gate.

It's that easy!