
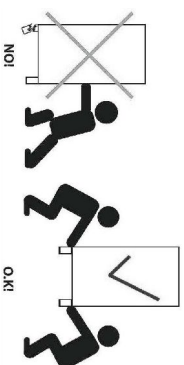



PRIMO

PK107

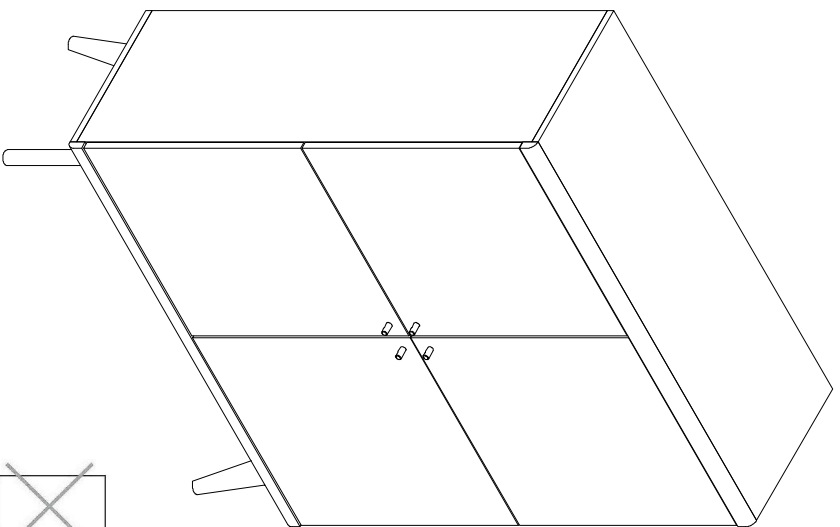


14.10.2016

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiunile de montaj
- RU** Инструкции по монтажу


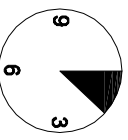


20 min.






1


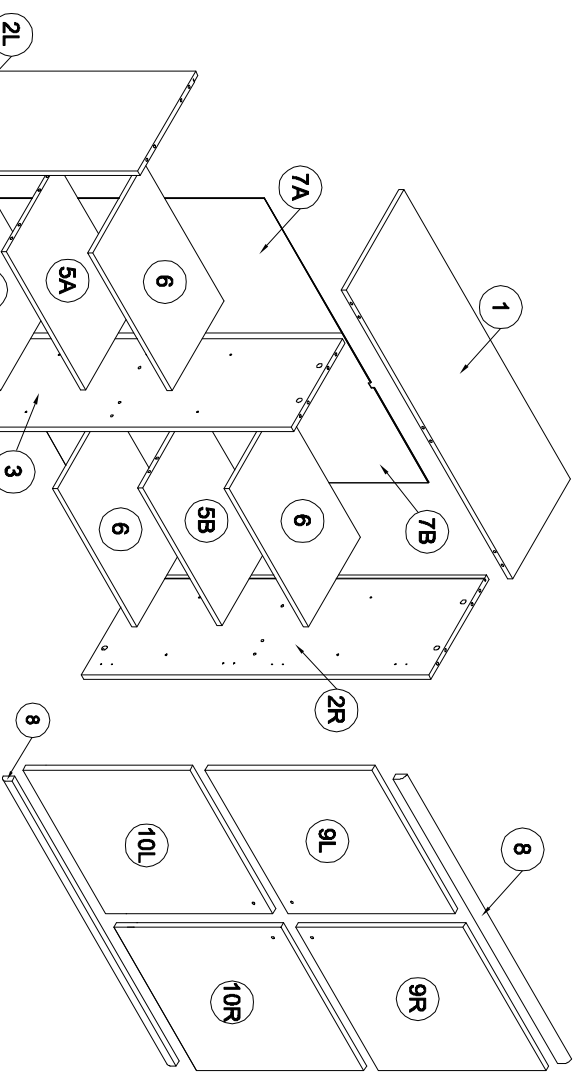


B x26	PC x8	A 8x32 x26	R x8	H 6.3x13 x16	M M4x22 x4	ZC x8	W3 x4	NA 4x13 x17	Z x16
TA x1	TA x1	N 3x20 x16	X x16	TA x1	HD x8	TA x1	HD x8	NGD x4	Z x26
TB x1	TA x1	X x16	C x26	Z x4	NGD x4	Z x26	Z x26	Z x26	Z x26


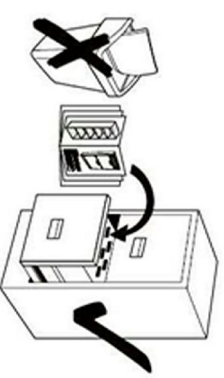
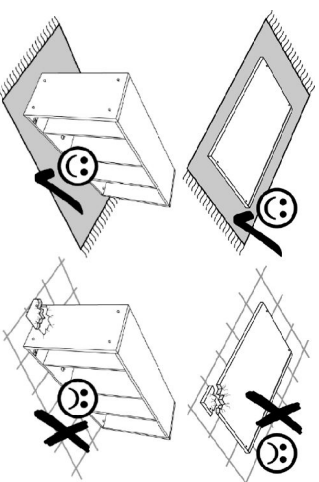


2

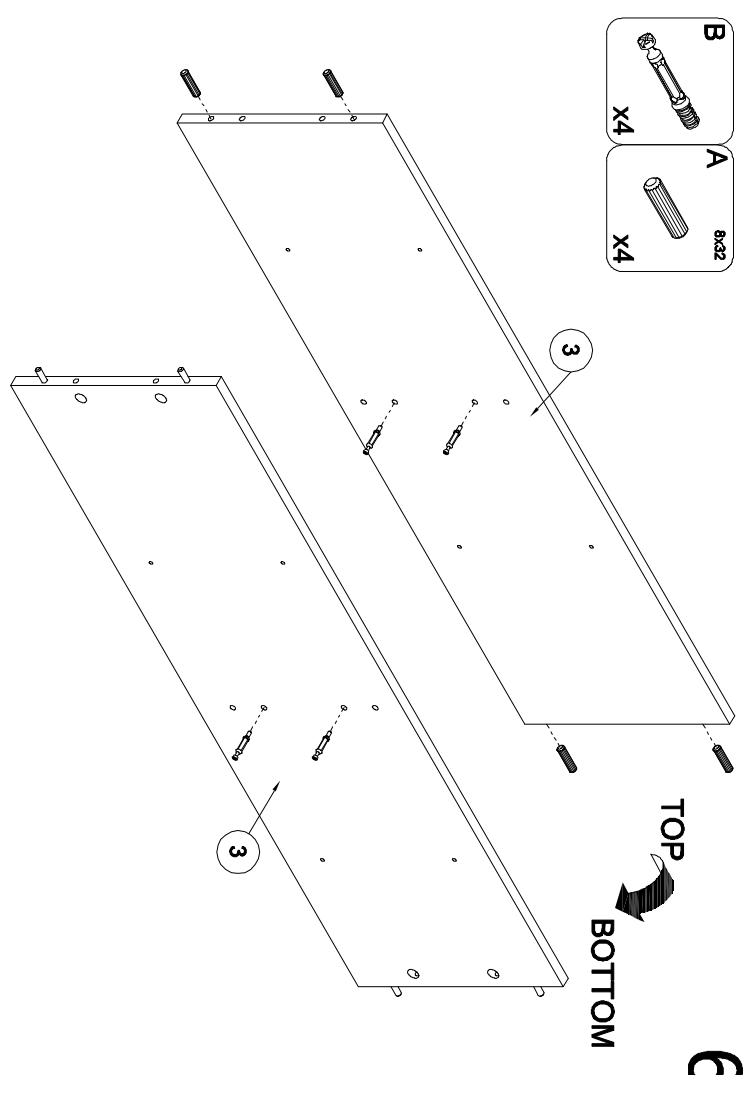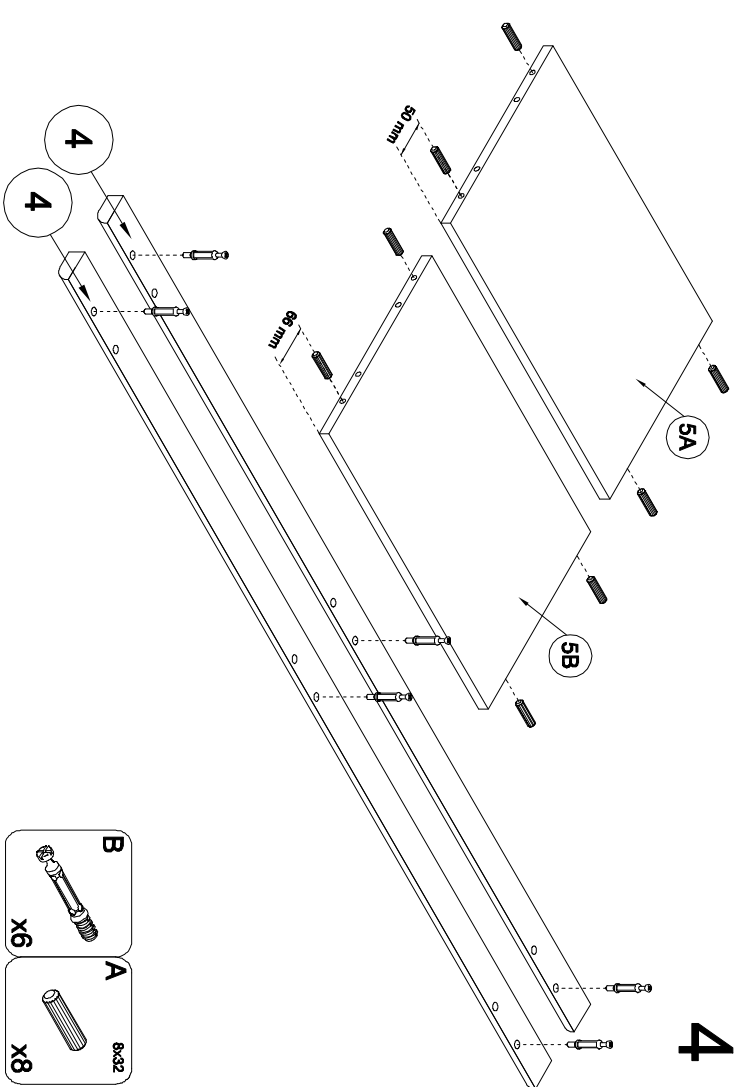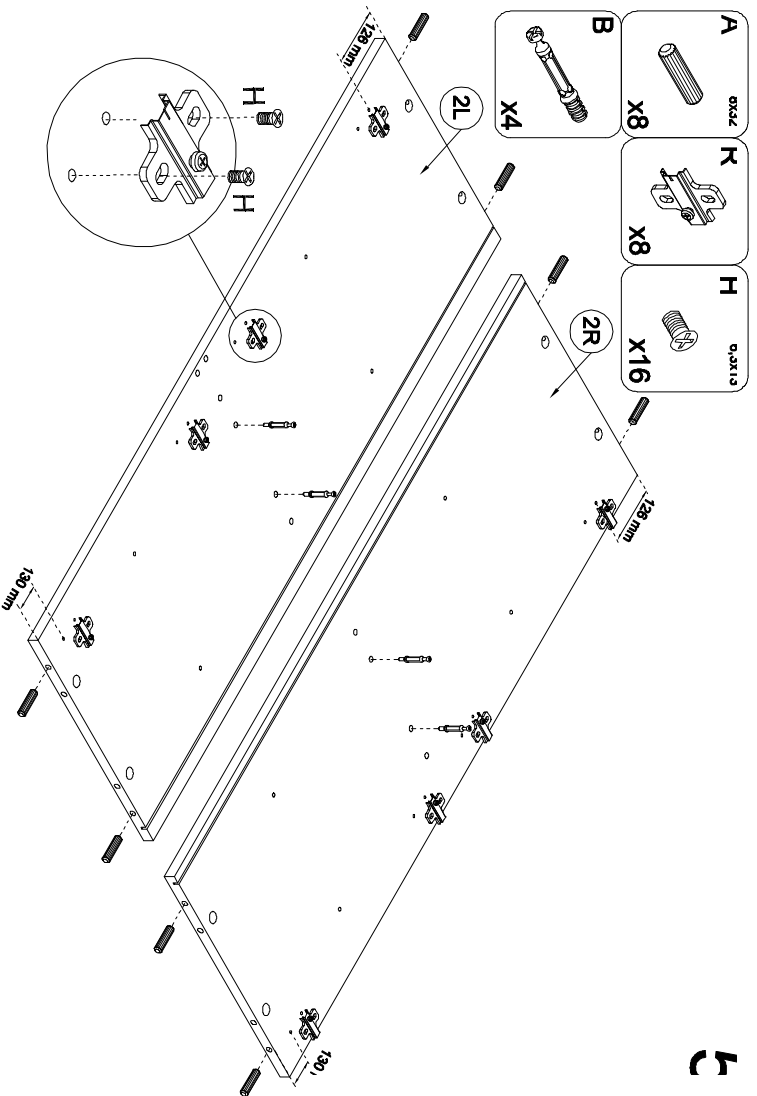
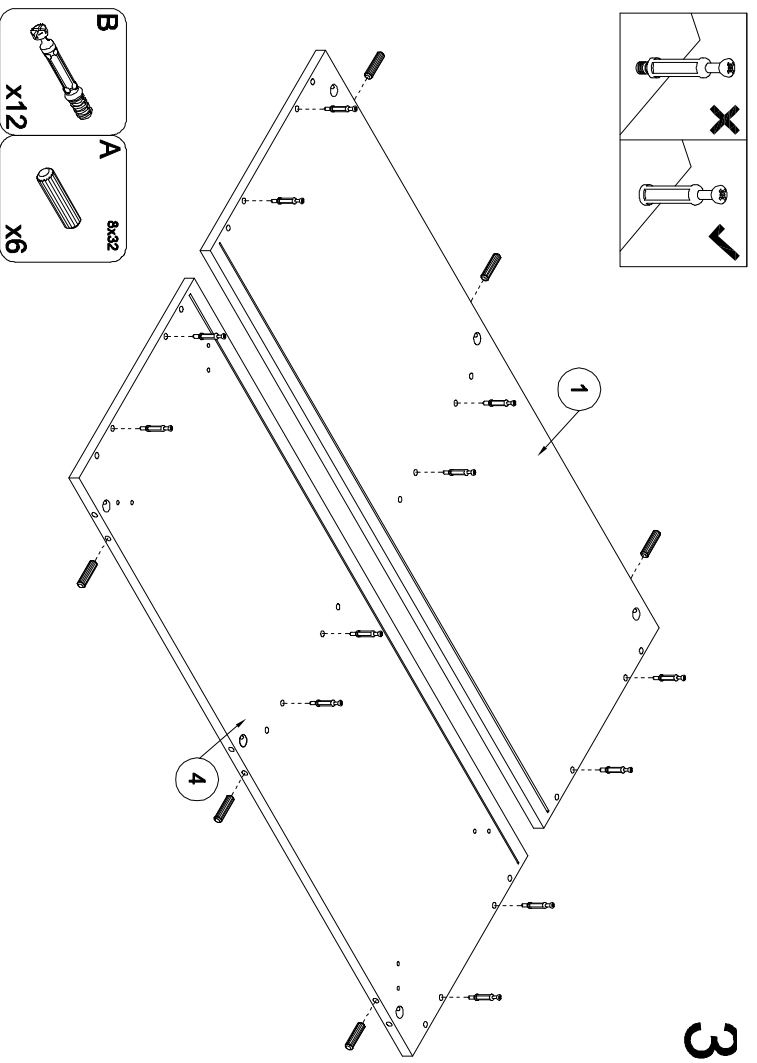
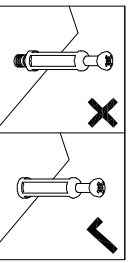


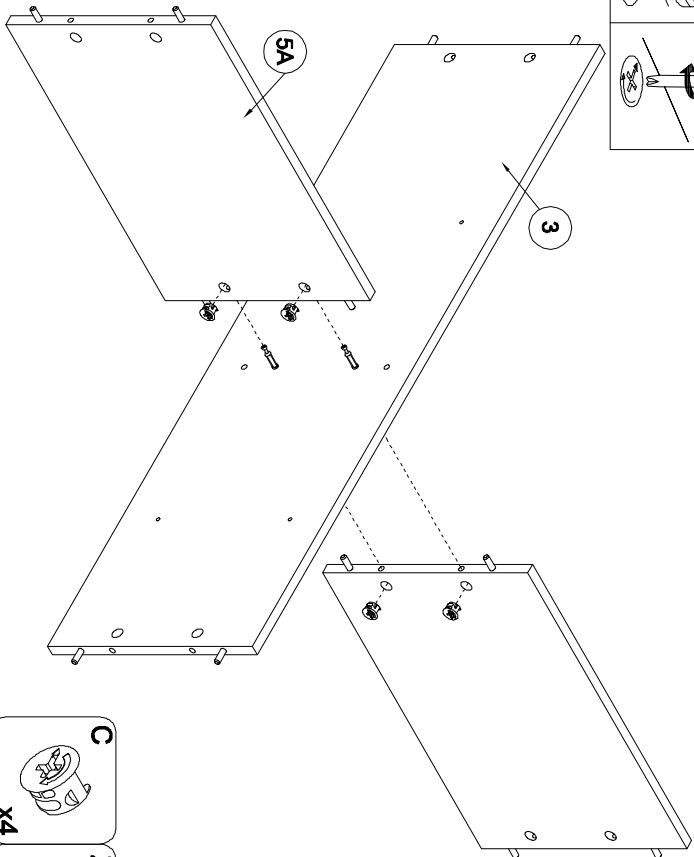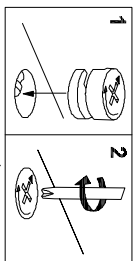




7

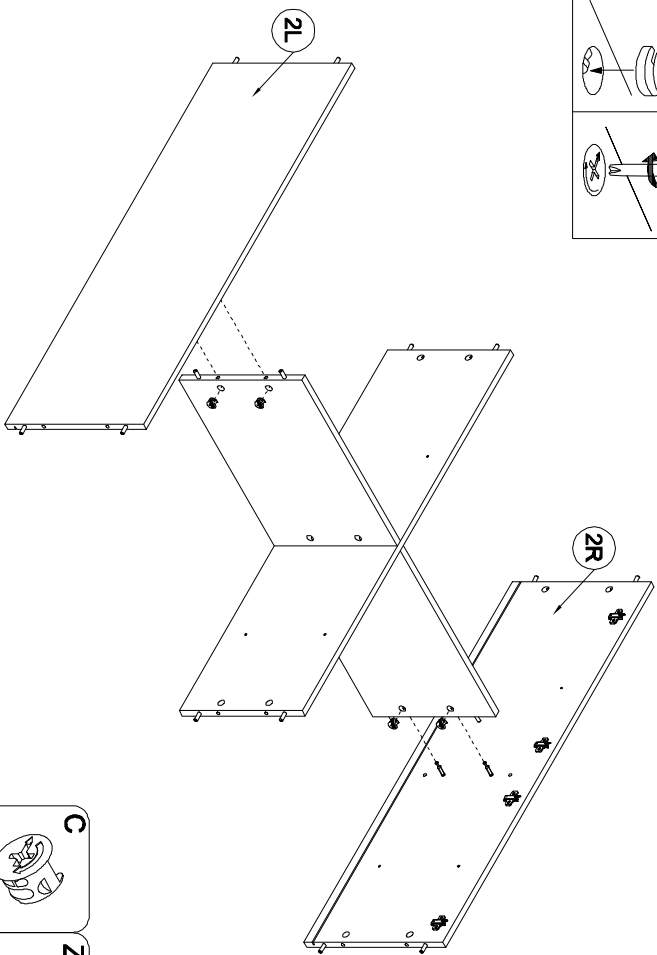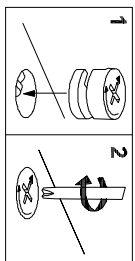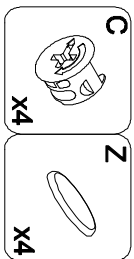


8

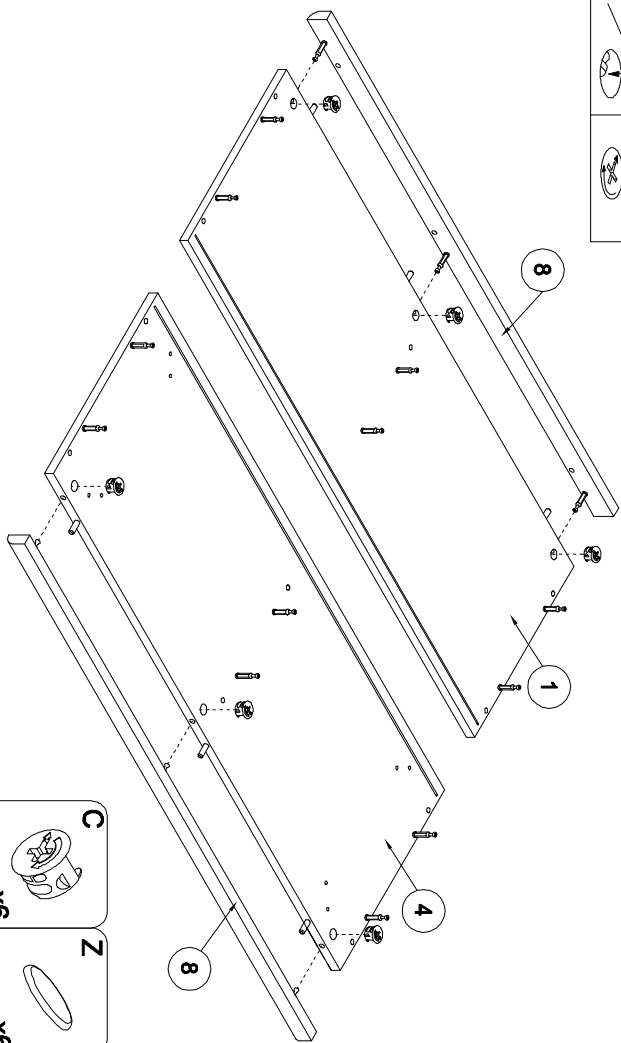
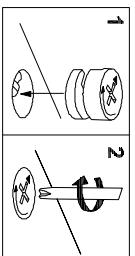
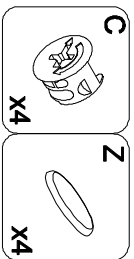


9

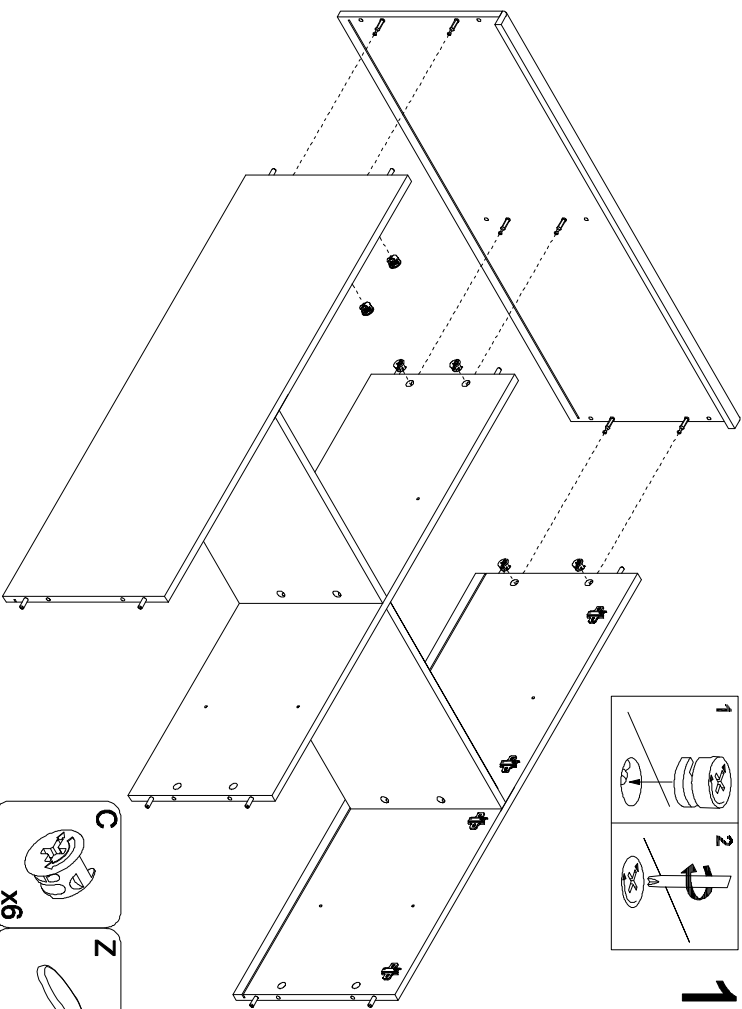
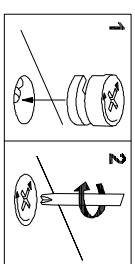
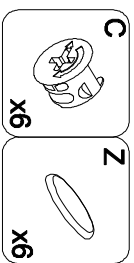


10

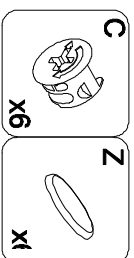

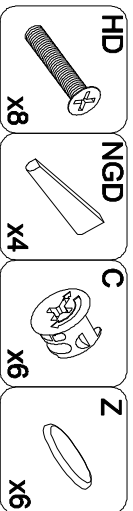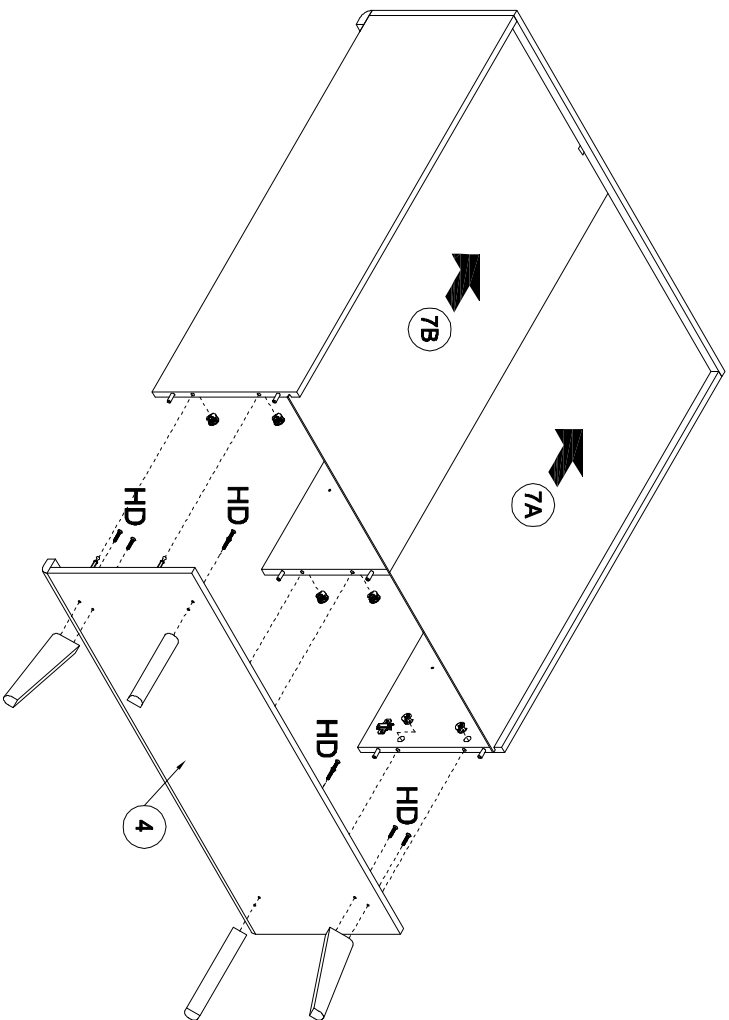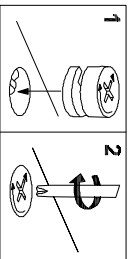






11

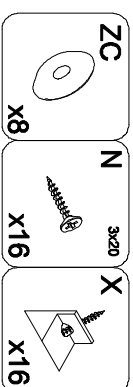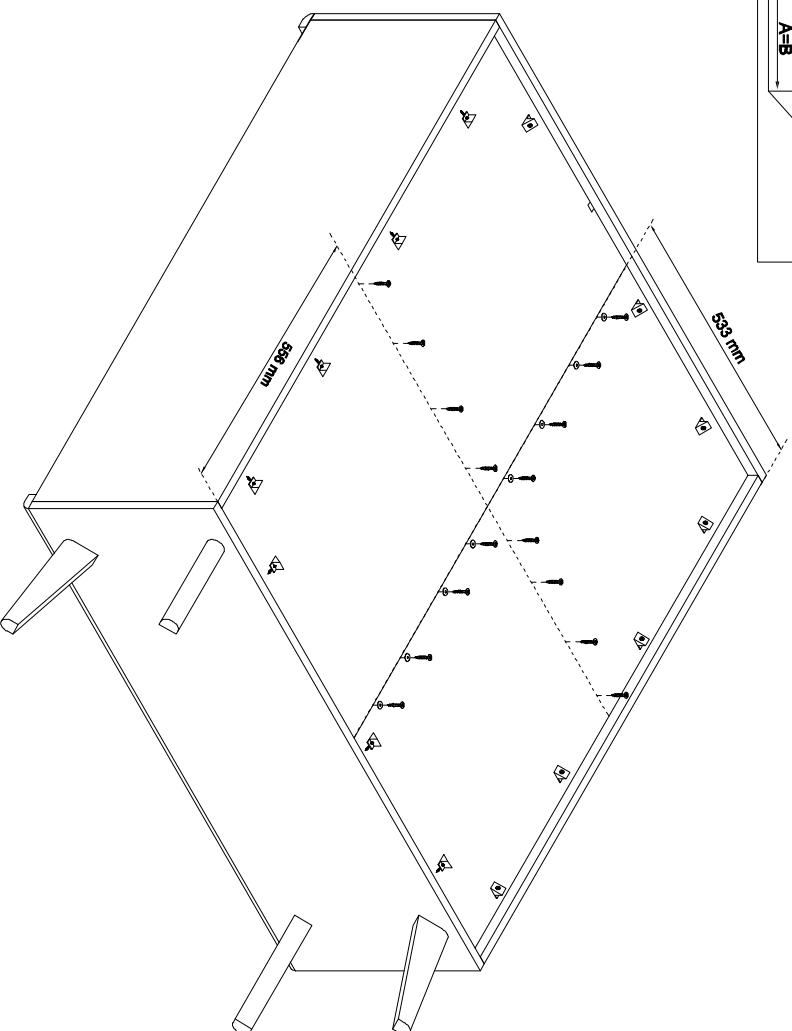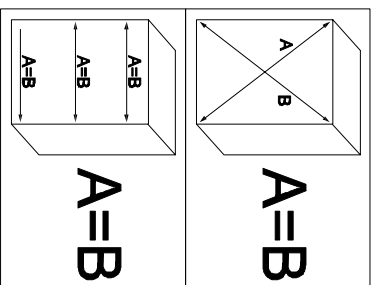

12

- W3**
X4
- M**
M4x22
X4
- NA**
4x13
X4
- PC**
X16
X8

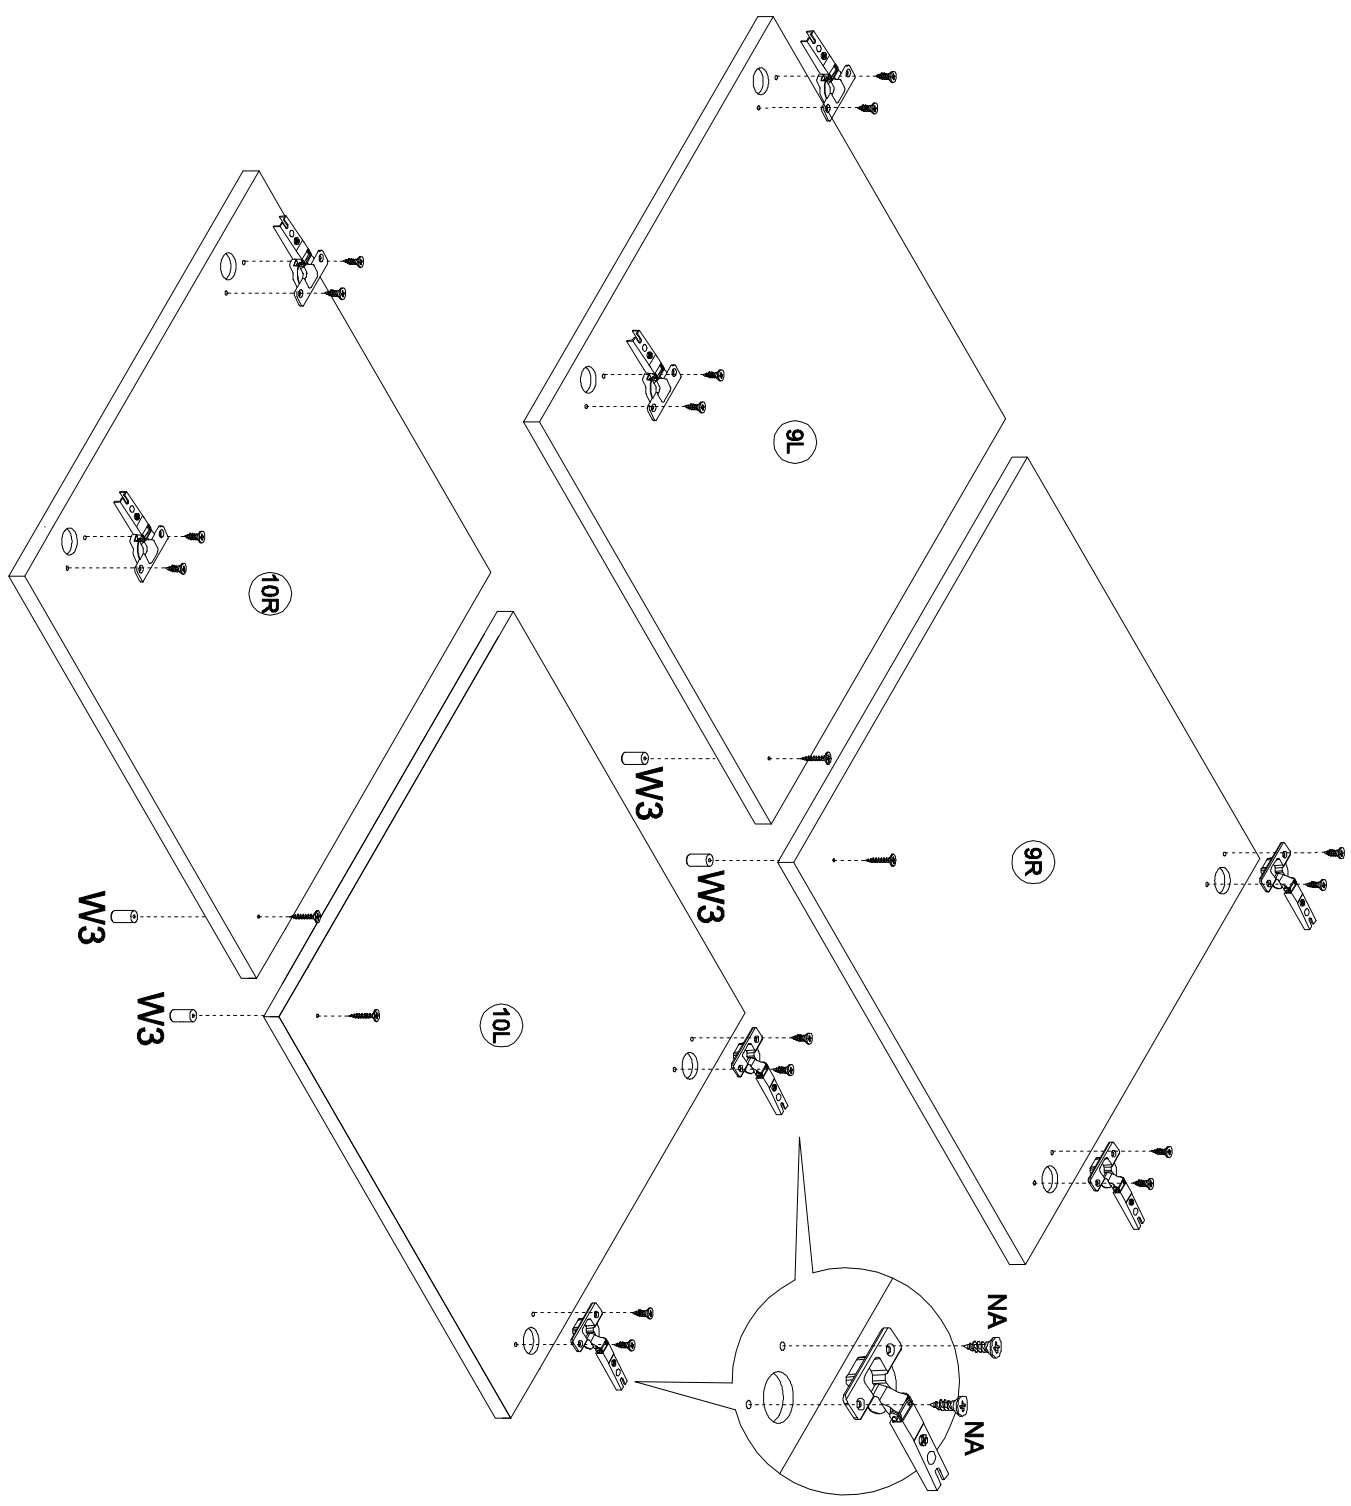

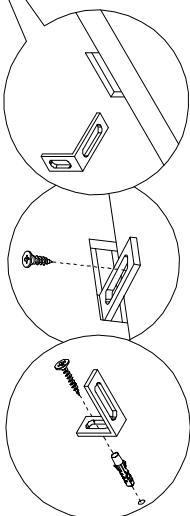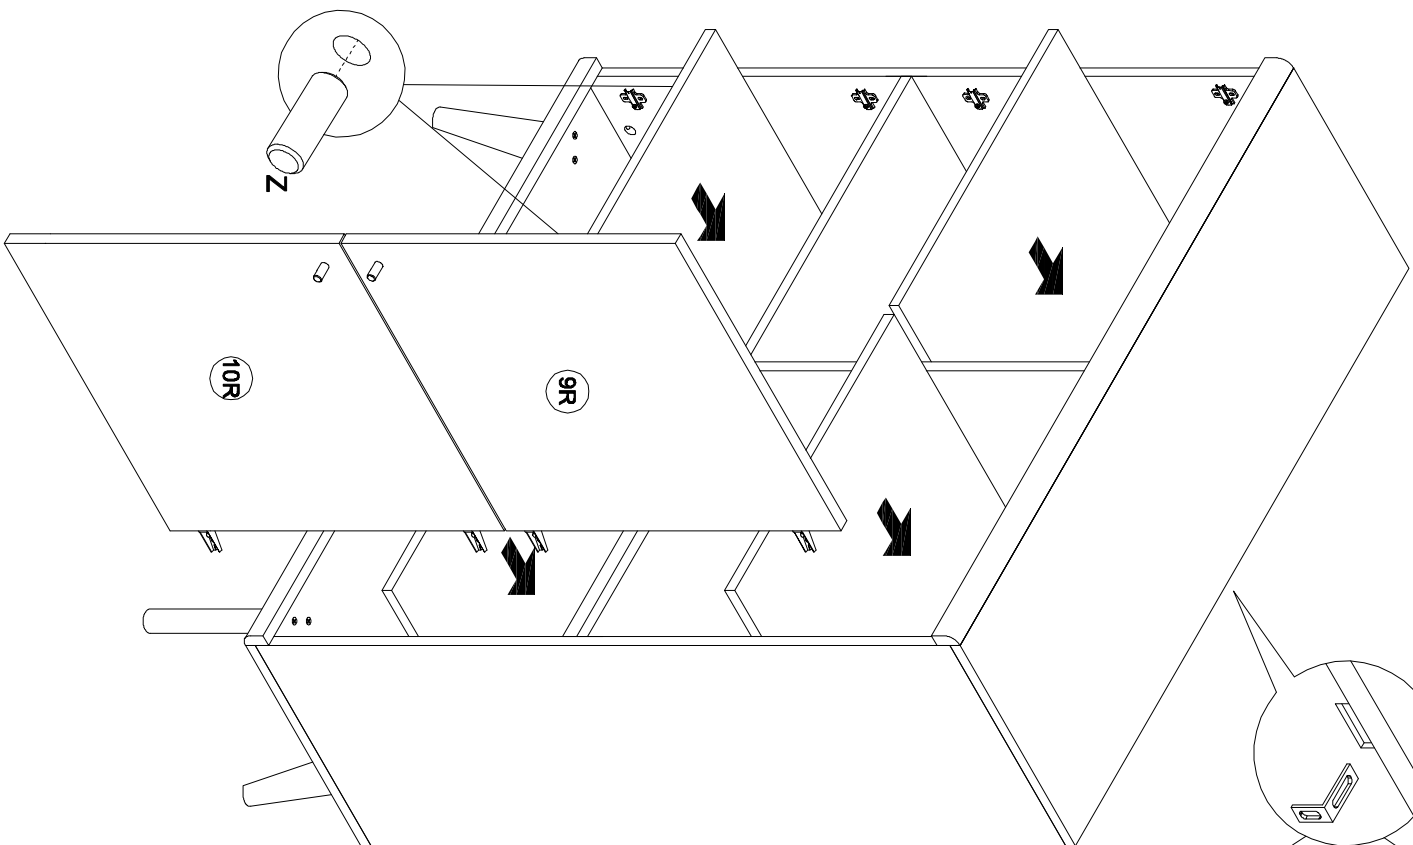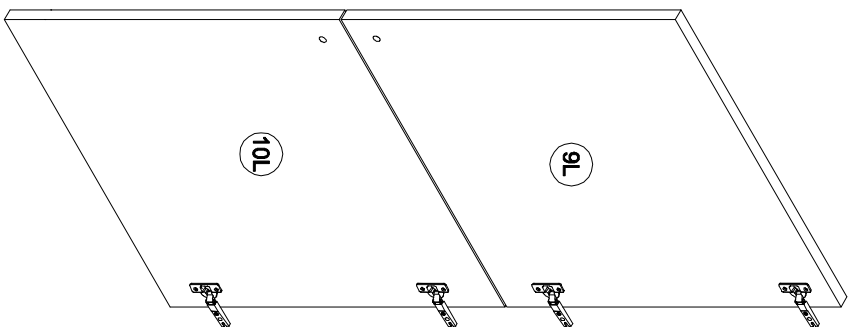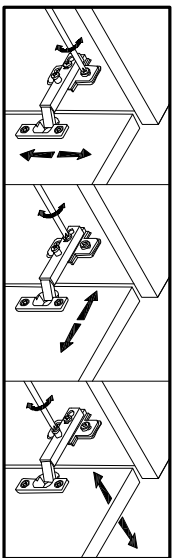

- x1
TB
- x1
TA
- x1
NA
4x13
- x16
Z