

# NEWTON COMMERCIAL

## CK8047 – MOULDED REAR COCKPIT CARPET FITTING INSTRUCTIONS

WE RECOMMEND READING THROUGH THESE INSTRUCTIONS BEFORE COMMENCING WORK. THIS WILL GIVE YOU AN IDEA OF WHAT IS INVOLVED & THE SEQUENCE OF EVENTS.




RAISE THE CONVERTIBLE TOP IN ORDER TO HAVE ACCESS TO ALL THE FIXING CLIPS AROUND THE REAR CARPET.



THE LEFT PICTURE SHOWS THE SOFT TOP OFF THE CAR FOR BEST VIEW. USING TRIM TOOL (RIGHT) OR A NAIL/STAPLE REMOVER, TAKE OUT ALL PLASTIC CLIPS FROM AROUND THE TOP EDGE, THE SINGLE CLIP AT THE REAR CENTRE & THE FIVE CLIPS ACROSS THE FRONT. ALSO UNSCREW THE TWO HOOD FRAME BUMP STOPS. (SEE ARROWS)



THE NEW MOULDED CARPET COMES COMPLETE WITH 5 FIXING STUDS ALREADY ATTACHED, (TONNEAU COVER ANCHORAGE) CLOTH BOUND EDGES, ALL CLIP HOLES PUNCHED & NEW PLASTIC CLIPS SUPPLIED. (SEE RIGHT)

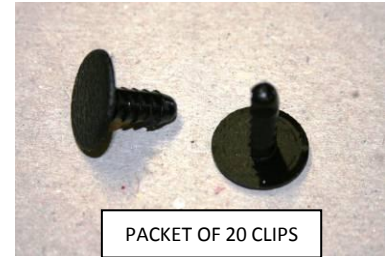

PACKET OF 20 CLIPS



WITH THE SOFT TOP IN THE UP POSITION FOR EASE OF ACCESS. ENSURE THE UNDERFELT IS GLUED IN PLACE. THEN;  
**OPTION 1)** PUSH A PLASTIC CLIP IN THE CENTRAL HOLE (SEE ARROW) TO FILL IT. THIS MEANS NO CLIP THROUGH THE CARPET ((THIS CAN BE UNSIGHTLY WITH A LIGHTER COLOURED CARPET).  
**OR OPTION 2)** DO NOT FIT THE CLIP AT THIS STAGE.



INSERT THE CARPET INTO THE CAR. PUSH IT FULLY REARWARDS SO THAT THE BOUND EDGE SITS LEVEL WITH THE METAL LIP. LINE UP THE CLIP HOLES & INSERT THE PLASTIC CLIPS ALL THE WAY ROUND.



THIS PICTURE SHOWS THE REAR COCKPIT CARPET FULLY FITTED. THE FRONT EDGE SITS OVER THE TOP OF THE REAR BULKHEAD CARPET. LINE UP THE CLIP HOLES IN BOTH CARPETS WITH THE CORRESPONDING HOLES IN THE BODY & INSERT THE FIVE PLASTIC CLIPS. RE-FIT THE TWO HOOD FRAME STOPS. IF YOU WISH TO FIT THE CENTRAL CLIP, IT CAN BE DONE AT THIS STAGE. LOCATE THE HOLE USING A THIN BRADAWL; MAKE A SMALL CROSS CUT & PUSH THE CLIP IN PLACE. YOUR REAR COCKPIT CARPET FITTING IS NOW COMPLETE.

HAPPY MOTORING