


DAIMLER SP250 – ‘DART’

WINDSTOP FITTING INSTRUCTIONS



1. Remove lower hood attachment screw and use it to fix the windstop brackets to the vehicle as shown.

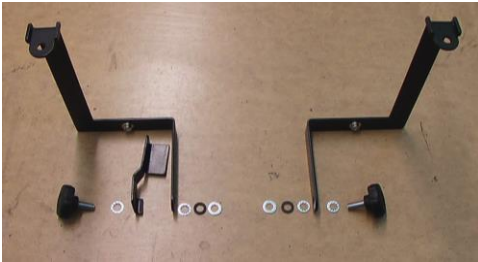

2. View of all brackets and fittings laid out in order. (The windstop is situated in the middle.) The left hand assembly includes the added small bracket to prevent the windstop tipping forwards onto the back of the driver's head at high speed.



3. Looking from the rear of the car at the left hand side showing the anti-tipping bracket in place and tightening up the plastic adjusting wheel.
4. By loosening off this wheel, the anti-tipping bracket can be disengaged so that when the seats are tilted forward, this allows the windstop to be folded down behind the seats, so allowing the tonneau cover to be fitted in the normal way.



Windstop folded down.



In normal driving position showing hood cover fitted as normal