


**Newton Commercial**  
**Mini Mk1 and Mk2**  
**Door Pocket / Storage Bin Liner**  
**DP 3023 - FITTING INSTRUCTIONS**

**RH LINER**

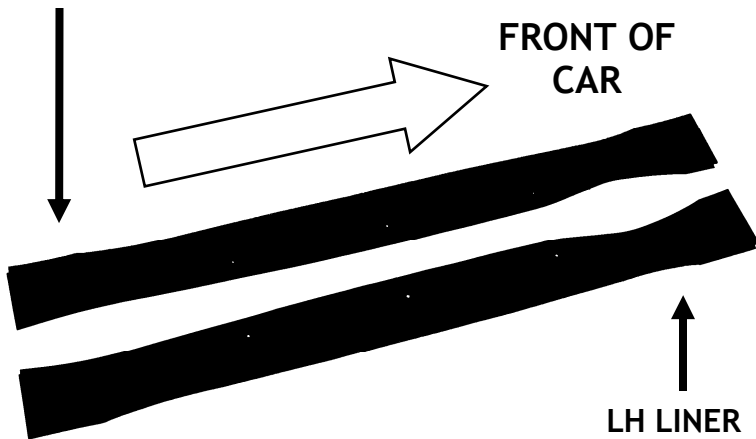


These fibreboard items are supplied as a pair- they are handed pieces, and need to be carefully identified as LH or RH.

It will be seen from the picture here that one side of the board has an edge that is more scalloped than the other. This is at the front end of the pocket, and is designed to clear the front drainpipe which runs inside the door.

The following three pictures illustrate the easiest way of getting the liners into the pockets. We show a RH liner being fitted into a standard RH Mk1/2 Mini door. It has already been refitted with our own door and fillet panels.

**1:** Take the liner and lay it facing side up. Bend it in the manner shown, it should not crease or fold if it is held lightly.

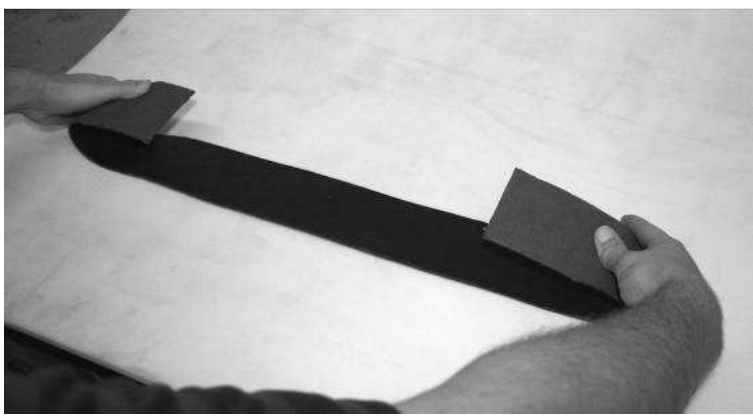

**2:** Holding the liner in the same position, lower it into the pocket.



**3:** Release the liner once it is inside the pocket, and push it down to the bottom. It will have some movement so that it can be eased into the position you are happy with. The ends of the liner will spring out and hold it firmly in place when you have finished.



Happy Motoring!

Newton Commercial 2012