

# VW GOLF MK.II HATCHBACK SALOON BOOT COMPARTMENT CARPET SET

## FITTING INSTRUCTIONS

Tools required – Philips screwdriver-scissors-sharp knife-aerosol adhesive -3mm drill – spike and necessary spanners to remove all other fittings.

May we suggest you read these instructions to give yourself an idea of the sequence of fitting? We are assuming that you have removed the rear seats, seat belts etc.

Step One – Fitting the moulded rear wheel arch carpet – this piece is moulded to fit exactly over the metal wheel arch with holes cut accordingly. From the picture you will see a small black Christmas tree plastic stud holds the rear of the carpet to the body. The end of the carpet will slip under the lip of the body above the rear lights. We suggest that you apply glue to the lower edges of the carpet to hold it in place. Refit the various plastic caps and fittings as shown here.



Step Two – Included in the kit are two pieces of felt which can be fitted now with adhesive to the bottom of the spare wheel carrier. The hardboard circular spare wheel cover is also in the kit.




The rear bulkhead carpet assembly, as you will see from the photograph is held in place by black Christmas tree plastic studs. The holes are already drilled in the hardboard and the holes in the bodywork are under a slight lip. Push these studs into the bodywork holes. You will

note that we have sewn Velcro to the underside of the carpet- this will attach itself automatically to the end of the moulded wheel arch cover and help hide the washer bottle and rear light clusters. Adjust the carpet to fit nicely above these light clusters.



Step Three – The tailgate carpet panel- you will see from the photographs that five clips that will secure this panel to the tailgate. The holes in the tailgate are already there. Position these clips so that they are 90 degrees to the panel as shown here. Offer the panel to the tailgate and locate the clips in to the holes. Five self-tapping screws hold the top of the panel. You will need to drill holes in the tailgate. Using a pointed spike mark the centre of the hole through the carpeted panel. Remove the panel and drill. Replace the panel and fit screws accordingly.

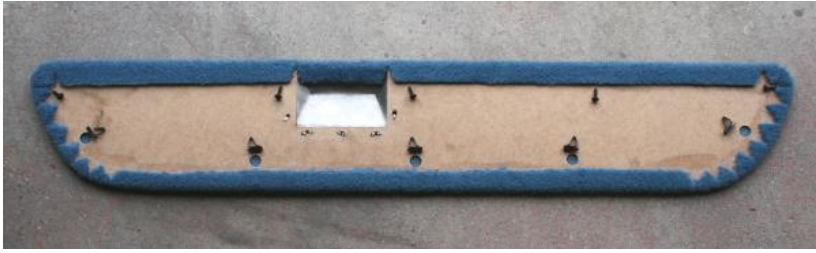

Step Four – The last job is to lay the rear floor carpet in place and refit the seat belts and rear seat assembly.



Happy motoring.

Copyright Newton Commercial 2009