


# NEWTON COMMERCIAL

## SF4008

### FRONT SEAT SQUAB PADDING KIT HERALD 1200 & 12/50 / VITESSE 6

#### FITTING INSTRUCTIONS

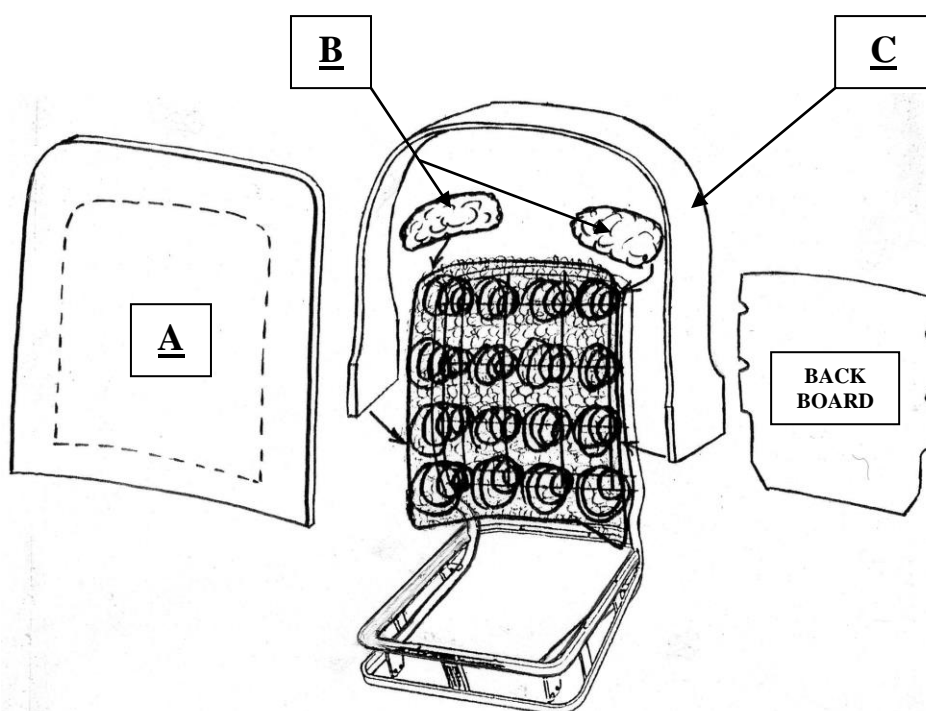

#### **A=MAIN PAD**

This piece has a calico backing – the calico should face the spring case to minimise wear. Place main pad A over the front of the spring case – outer edge of case shown dotted. Fold all edges over front wire of the spring case and tuck under springs keeping foam tight over the central area at the front.

#### **B=WADDING**

Fold the two pieces of wadding to a size of approximately 7"x4", then push into the corners of the spring case. This will support the top corners of the seat cover.

#### **C=TOP ROLL**

Fold in half and mark the centre of the foam. Mark the centre of the seat frame on the top edge. Glue the top roll onto edge of main pad and seat frame using a contact adhesive. At the position marked on the drawing, the top roll is tucked inside the spring case. Push the fibreboard backboard supplied into position and you are now ready to fit the seat covers.

