

NEWTON COMMERCIAL
PRODUCTION
SPECIFICATION

PART NUMBER

ST3001

DESCRIPTION

MINI Mk1 &2
FACTORY RECLINER
SQUAB STRAP KIT (FOR 1 SEAT)

NOTE:

THIS STRAP KIT REPLACES THE ORIGINAL STRAPS & DIAPHRAGM.


THE SIDE STRAPS USE EXISTING HOOK HOLES, BUT FOUR CENTRE HORIZONTAL STRAPS REPLACE THE ORIGINAL ONE PIECE DIAPHRAGM.

(WHICH IS NO LONGER AVAILABLE)

THE LOWER HOLES FOR EACH HORIZONTAL STRAP ARE THE ORIGINAL ONES ALREADY IN THE FRAME. YOU WILL NEED TO DRILL A NEW UPPER HOLE FOR EACH STRAP.

(INSERT A HOOK IN THE LOWER HOLE FOR EACH STRAP & MARK THE UPPER HOLE POSITIONS THEN DRILL ALL THE UPPER HOLES)

INSERT ALL STRAPS AS SHOWN IN THE DIAGRAM.

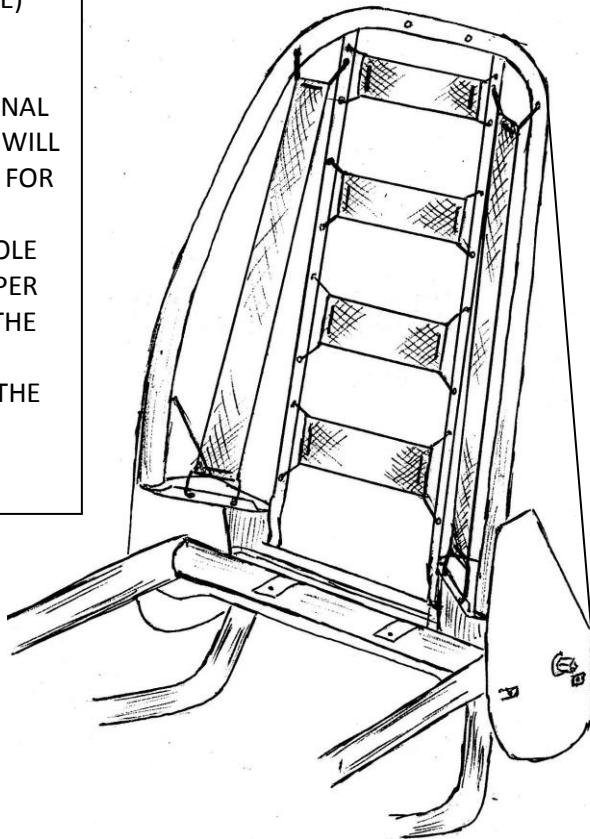

DATE: 07/04/2011 *gw*