



NEWTON COMMERCIAL MORRIS MINOR REAR SEATS FITTING REPLACEMENT SQUAB COVERS





Remove the various screws holding the seat brackets and locking flap. Then using a flat screw driver remove the tacks holding the backboard to the seat frame.



Again using the screw driver, remove the old cover from the frame. When taking the old cover off, note how any wadding or felt is positioned over the horse hair pad.



Inspect the spring frame for any damage and repair as necessary. If the horsehair looks a bit thin in places it may be a good idea to cover it with a layer of felt. Allow enough felt to actually fall over the sides as shown here to give you smooth corners and edges.

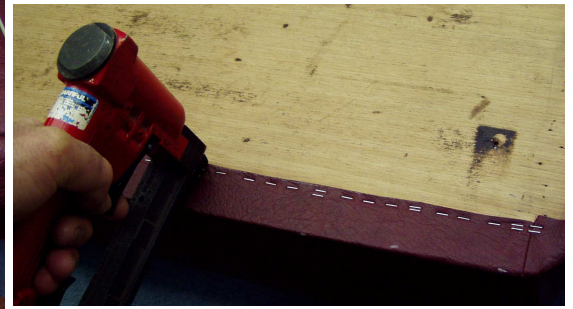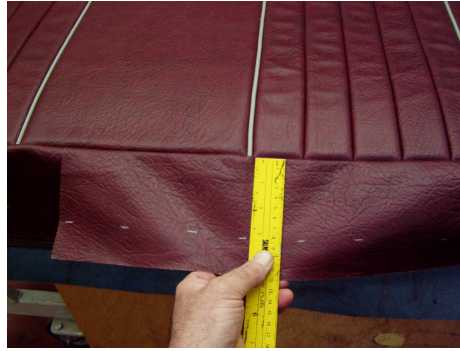

Place the cover over the frame and line up to the middle. The inside of the top piping should be either stapled or tacked into position first. Measure around the old cover skirt to obtain the distance between the piping and the tacks. This will give you the correct tension on the cover when tacking the skirts to the wood. Tack or staple the skirt to the board.




MORRIS MINOR REAR SEATS FITTING REPLACEMENT BASE COVERS



Make sure the spring frame is in order-if the coil springs have collapsed they can be pulled back into shape. Pack the corners with wadding for extra support .

You may wish to cover the old horse hair pad with a layer of felt.

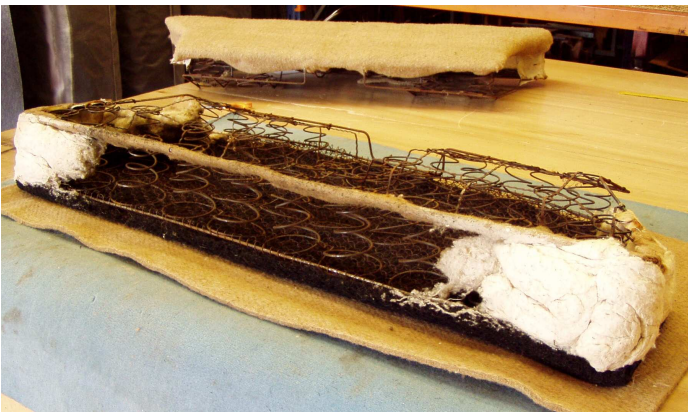

When applying the felt, allow enough material so that the felt overlaps the horse hair to create smooth edges and corners.



Lay the seat cover over the frame, centralize and begin by turning the skirt over the two front corners. Pull the skirt over all edges and then Hog ring through the edges to the second bar in of the seat frame. You will need to pull the cord to actually tighten the skirts at either end.