


VW GOLF MK. I SALOON & CABRIOLET
MOULDED CARPET SET
LHD & RHD

FITTING INSTRUCTIONS

Tools required – Philips screwdriver-scissors-sharp knife-aerosol adhesive.

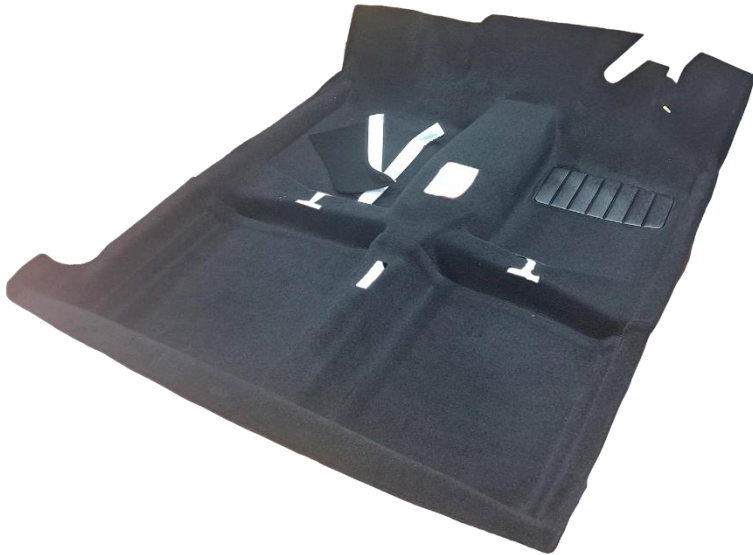

Please, read these instructions before fitting to give yourself an idea of the sequence of fitting.

Firstly, remove all the seats, old carpet and under felt pieces (if not reusing original), the centre console will also need to be removed, you can then fit your new underfelt kit.

As you will see, both front and rear carpets have pre-cut holes and apertures ready for the carpets to fit in place. When you removed your original carpets, you will have removed various clips and capping's that held it in place.

You can now insert the front carpet in the car, pushing the unit up and under the dashboard area. Make sure the whole carpet is pushed into place. It will also be advisable to glue the carpet to the sills and re-fit any plastic clips that you took off previously, before you finally fix the plastic finisher under the draft excluder. Mark the carpet where the holes are in the metal sill so you can locate the clips on the sill plates later. To make a perfect fit you may need to make sure the carpet is pushed into all the corners of the footwell area.

Test fit the scuttle pieces to make sure they are in the correct position. The vinyl that is sewn to the outer edge will bend around the door aperture and eventually be held in place by the draught excluder, you can add a touch of glue if needed.

FITTING THE REAR CARPET SECTION -

Place the rear carpet section down and into place. The areas around the seat slides will need to be cut as these are left untrimmed, mark the carpet, and make a small incision gradually making this bigger so the carpet can eventually be tucked behind the runners so as not to interfere with the seat.

The holes for the rear seat base will also need to be but you will find on the back of the carpet some dimples in the moulding which will indicate where these holes are located.

Apply some adhesive to the top of the sills before finally fitting the plastic sill finishers. Once everything is in place then you can start refitting all the plastic covers and finally the central console and seats.

Happy Motoring!