

ASSEMBLY INSTRUCTIONS
THE CAMBRIDGE KIT

P/N: **UF-KIT-CAMBR**

HARDWARE PROVIDED




1/4-20 X 3/4" HEX BOLTS




1/4-20 FLAT WASHERS




1/4-20 LOCK NUTS

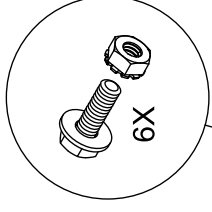

6X

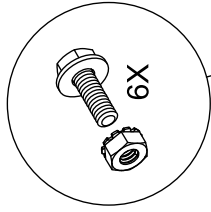

6X

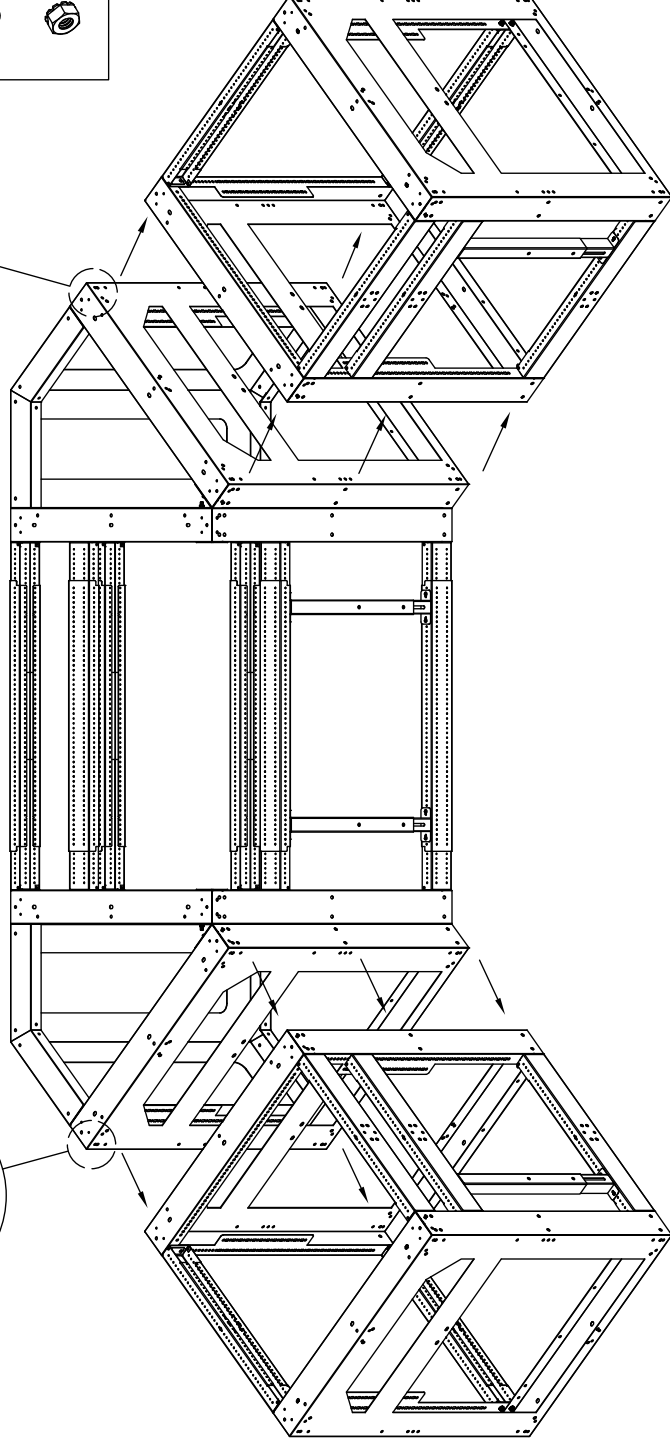

ALL MODULES BOLT TOGETHER AS SHOWN

All installations must be ventilated in compliance with applicable local, state, and federal codes
All adjustments to be based on appliance manufacturer's recommendations and all local building codes