



# ULTRA INSERTS/PEGS

## INSTALLATION GUIDE

**RECOMMENDED TOOLS:** Tape measure, Level, Pencil, Electrical drill, 0.52" Drill bit, and Rubber Mallet.

### PACKAGE CONTENTS

QTY	Description
1 set of 2	Ultra HZ/ST Wine Pegs
1 set of 2	Ultra M8/M10 Inserts



### INSTALLATION STEPS

**IMPORTANT:** These installation instructions have been specifically tailored for PEG/Insert installations into a minimum 3/4" wooden panel application. Please contact our Sales team for more information on other application solutions.

#### STEP 1: MAKE CALCULATIONS

Calculate the distance (see below) between each Ultra Insert & Wine Peg mounting location & mark the proper distance to prepare to cut out the hole for the insert. (**HZ** - 4" of spacing inbetween, **ST**-1 1/4" of spacing inbetween)



#### STEP 2: CUT OUT HOLE FOR ULTRA INSERT

Utilizing a tool of your choice, cut out a hole (diameter: 0.52") for your Ultra insert to be inserted into. (should be a tight fit)



#### STEP 3: PLACE ULTRA INSERT

Utilizing a rubber mallet gently tap your Ultra insert into place. The Ultra Insert must be flush and fully inserted into the backer board.

#### STEP 4: INSTALL WINE PEGS

Install your HZ or ST Wine Pegs by simply placing the Peg into the Ultra Insert and rotating clockwise until snug.

#### STEP 5: ADD WINE BOTTLES & ENJOY!

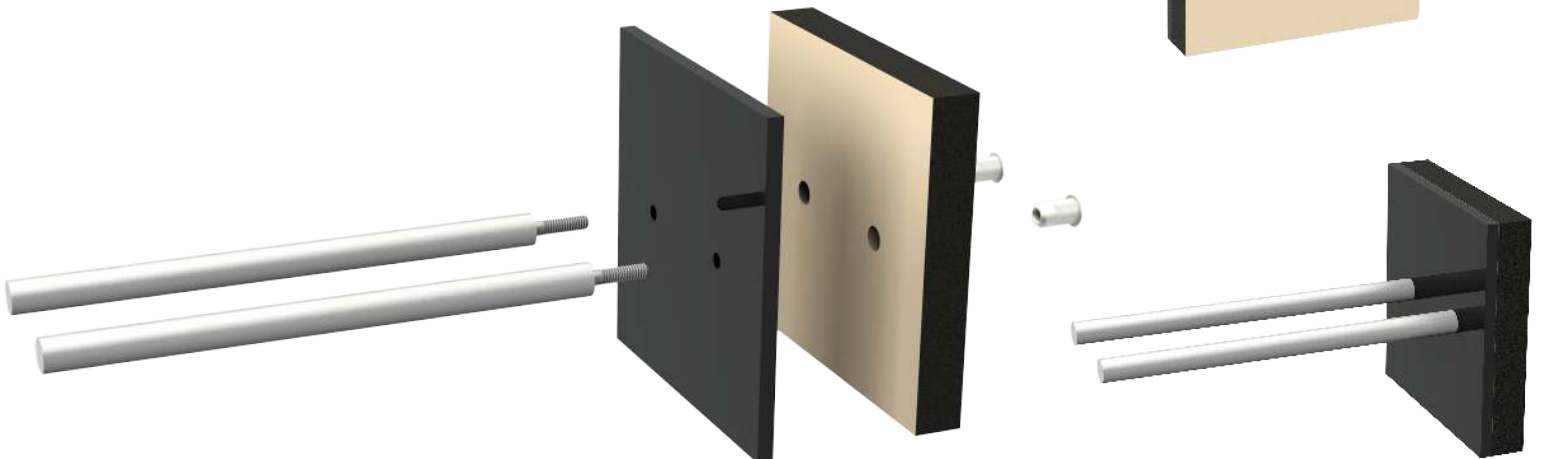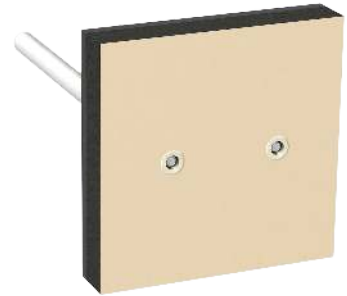

Want to feature your design? Tag @UltraWineRacks on social media.

| 1.800.343.9463