


VINdustry Wine Pegs & Panel Kits

Curved panels installation

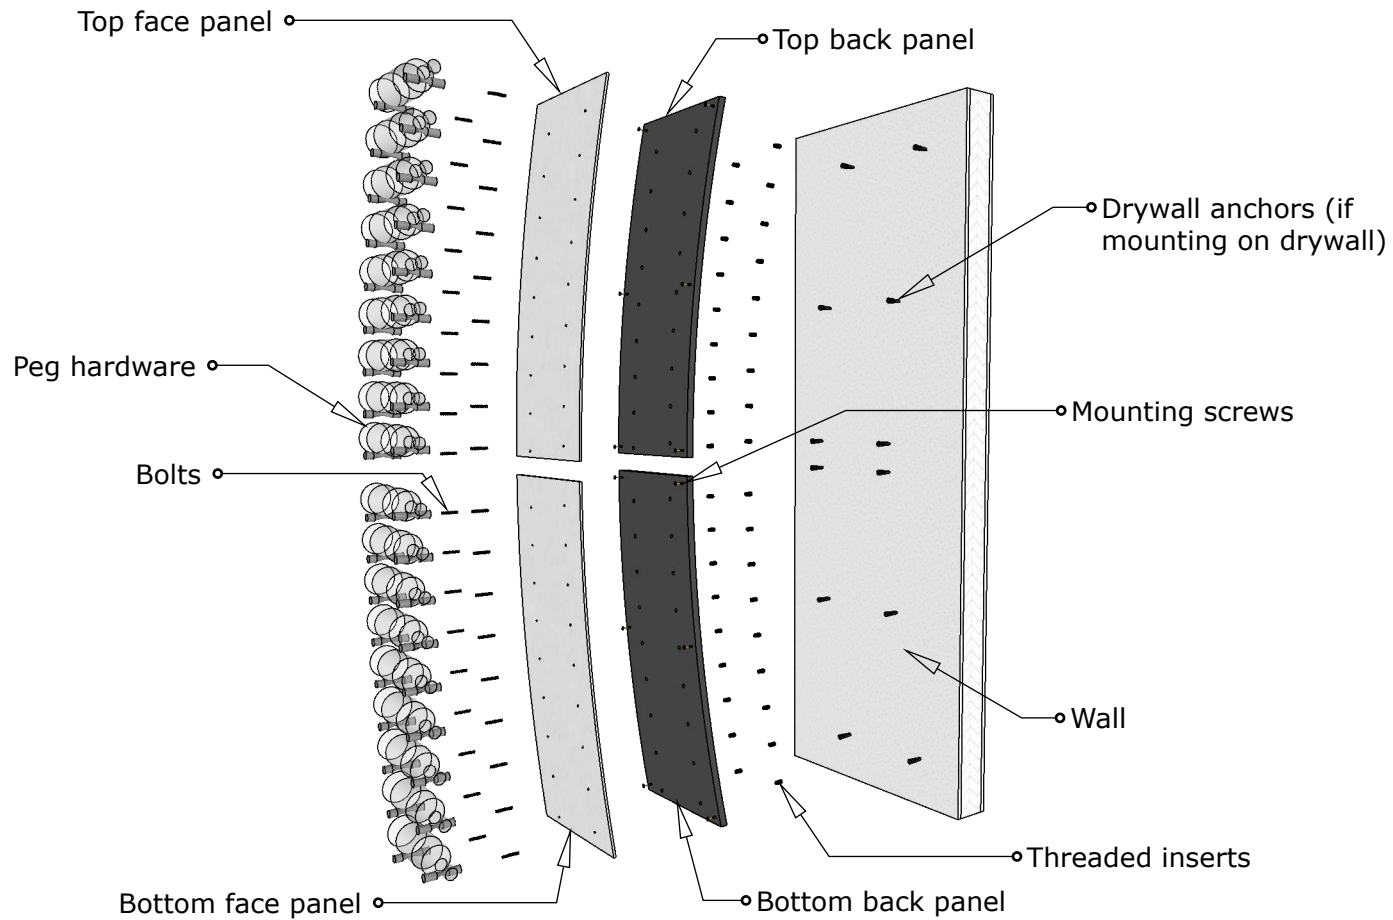

PG. 1 of 4
(parts breakdown)

Blue Grouse Wine Cellars


604.929.3180

1.888.400.CORK(2675)



VINdustry Wine Pegs & Panel Kits


Curved panels installation

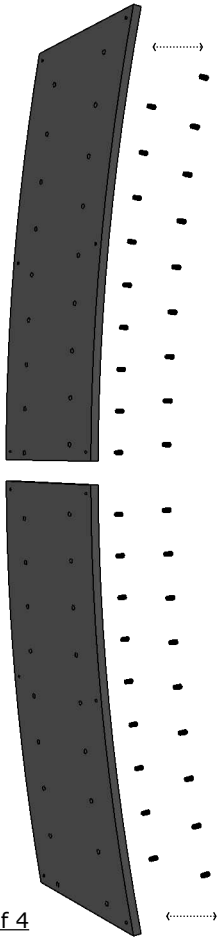

Step 1

Place threaded inserts into holes in back panels (threaded inserts can be placed from either side of the panel, a higher mounting hole on the right means your bottle neck will point right, and vice versa)

PG. 2 of 4
(installation)

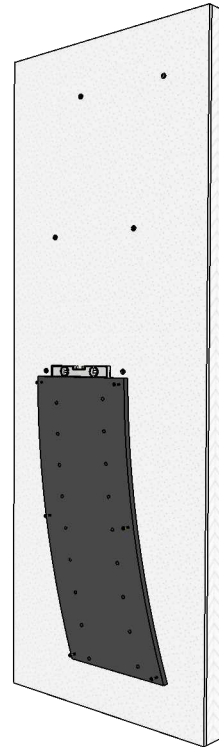

Step 2

Mount the bottom back panel using predrilled mounting holes, use a level to ensure level installation (make sure the side of the panel you placed the threaded inserts into is facing the wall)
If using drywall anchors, install them first on the wall in locations corresponding with predrilled mounting holes on the panel

Blue Grouse Wine Cellars


604.929.3180

1.888.400.CORK(2675)




VINdustry Wine Pegs & Panel Kits

Curved panels installation

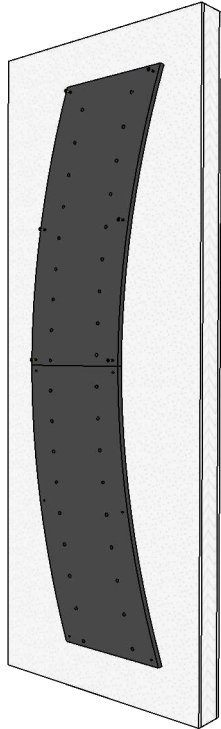

Step 3

Mount the top back panel using predrilled mounting holes as in step 2 (make sure the bottom corners of top panel align with top corners of the bottom panel)

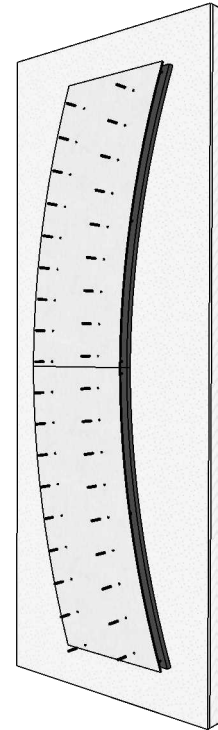

Step 4

Screw bolts into threaded inserts at the top of each panel and fit face panels over (make sure the bolts screw fully into inserts)

Step 5

Screw remaining bolts through face panels into threaded inserts

PG. 3 of 4
(installation)

Blue Grouse Wine Cellars


604.929.3180

1.888.400.CORK(2675)



VINdustry Wine Pegs & Panel Kits

Curved panels installation

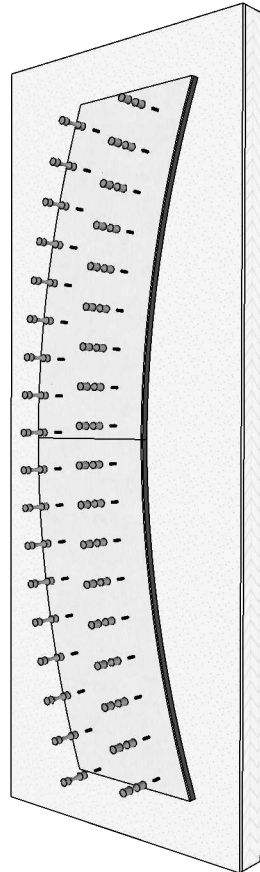

Step 6

Screw pegs onto bolts (make sure the middle seam aligns and face panels are flush then screw pegs fully onto bolts for a tight fit and strong hold, ensure the peg supporting the neck of the bottle is installed higher than the peg supporting the body of the bottle)

PG. 4 of 4
(installation)

Blue Grouse Wine Cellars

604.929.3180

1.888.400.CORK(2675)

