



Installation Instructions: Boost Reference Adapter



Read all instructions before beginning work. Following the instructions in the proper sequence will ensure the best and easiest installation. Contact us at sales@allanglesdesign.com for questions or comments about the installation process.

Caution! Installing this product requires disassembly of some engine and electrical components. If you are not confident you can complete the job safely, have the work performed by a certified technician.




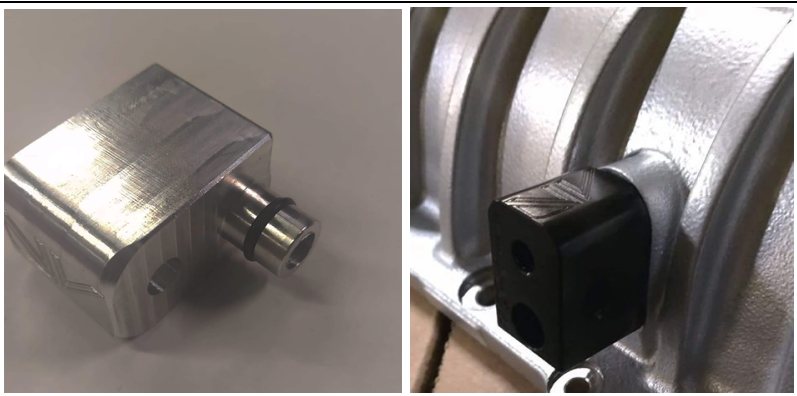

TOOLS REQUIRED:

- T30 Torx bit or Wrench
- 4mm Hex bit or Wrench

KIT CONTENTS:

- 1 x AAD Performance Boost reference adapter
- 1 x Viton O-ring
- 1 x Stainless Steel Button Head Cap Screw

1.	Important: We always recommend disconnecting your battery terminals when installing or modifying anything to do with electrical components.	While these Instructions show the Boost Reference Adapter being installed on a lid removed from the vehicle. You DO NOT need to remove your lids for installation.
2.	Unplug the factory sensor by sliding the red clip back and depressing the tab on the sensor. Pull back on the electrical connector to remove.	

<p>3.</p>	<p>Use your T30 torx to remove the fastener holding the sensor to your blower lid. Then carefully remove your sensor from the lid</p>	
<p>4.</p>	<p>Install the provided Viton O-ring onto your Boost Reference adapter. Once installed we recommend applying a dab of assembly lube or oil to the outside of the O-ring, to ensure it doesn't cut or snag when installing. Install adapter into The supercharger lid.</p>	
<p>5.</p>	<p>Install the factory map sensor into the adapter. Screw bolt in finger tight and tighten down with you 4mm Hex head. Note: DO NOT over tighten the Hex head as you can damage the sensor and threads in the lid. We recommend you put a small dab of blue loctite on the bolt.</p>	
<p>Care and Maintenance: These parts require little or no ongoing care or maintenance. We do recommend that 1-2 weeks after installation you re-check torque on all bolts removed during the assembly process.</p>		



CONGRATULATIONS! You have completed the installation of your AAD Performance Hellcat/Demon/Redeye Boost Reference Adapter. If you have questions or comments about the installation, please email sales@allanglesdesign.com or contact us on our Facebook Page at facebook.com/AllAnglesDesign We sincerely thank you for your purchase and hope you enjoy this and other AAD Performance products.