Commercial Growers Installation & Usage Tips



Installation Tips

Manually:

- 1. Do not lay out in windy conditions
- 2. Place a heavy stone in each corner of starting at end of the roll
- 3. Put a pipe or broom handle through core and slowly unroll
- 4. As you unroll, put plenty of soil on the edge of the entire roll or place 2x4's along both edges to hold in place and prevent wind from getting under the Mulch Organic
- 5. After roll is fully unrolled Remove heavy stones at start









Mechanical Layer (Flat-Bed Layer Recommended):

- 1. Do not lay out in windy conditions
- 2. Take all sway out of 3 point hitch
- 3. Be sure all tension is off of WeedGuard roll
- 4. Trailing press wheels must be 90 ° vertical
- 5. Trailing press wheels must ride on the outer edge (2"-4") of the roll



Row furrow must not be too deep

Call for information about Raised Bed Layers)










After pulling out some Mulch Organc for set-up, put soil on to hold in place



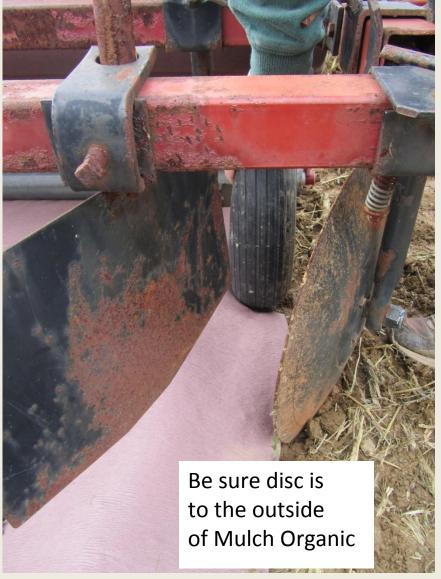









Depending on weather, soil moisture, rainfall rates, etc Mulch Organic begins to decompose at the soil line first.


To prevent wind from lifting and tearing edges, place additional soil along edges as needed









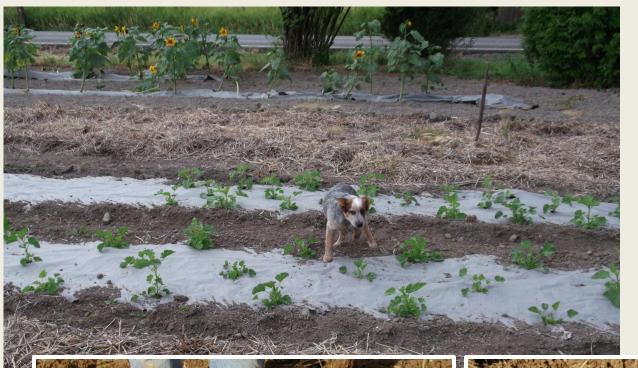


A lighter weight dog can usually walk on the Mulch Organic ..

It is OK for humans to walk on "creped" MO but we don't recommend this







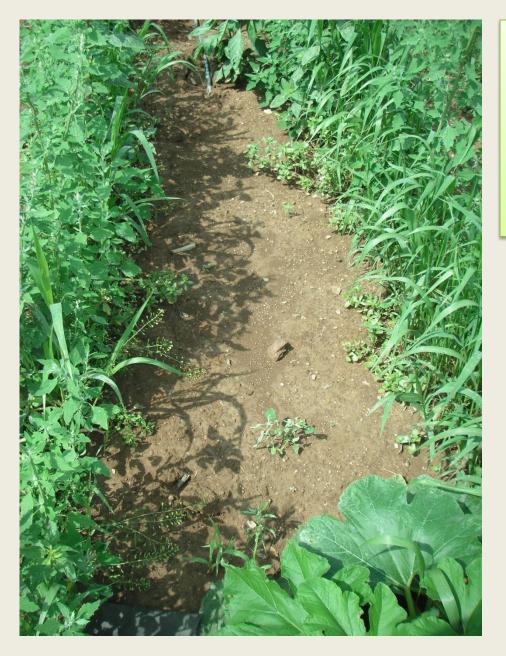

NOTE:

There is often a "ghosting effect" (continued weed prevention) in the area that was once covered by the Mulch Organic



The lettuce above is a second planting on an area that had been covered with MO new planting is just compost and direct seeded

