

# Monstar Order Picker Series Assembly Instructions

## STEP ONE

Check Contents of your parcel.

- 1 x Backleg
  - 1 x Front Stile
  - 1 x Bottom Rail
  - 2 x Platform braces
  - 1 x Platform
  - 2 x Top Handrail
  - 2 x Rear handrail Post
  - 1 x Rear Handrail
  - Hardware pack
- (See right)



## STEP TWO

Fit Backleg to Platform

Align hole in the Platform side and hole in the backleg.



Insert M10x60 bolt and D25 washer through platform side.

Fit Square Washer and sleeve between platform side rail and backleg

Fit D25 washer and nyloc nut to bolt.

Do not tighten at this step

Complete other side

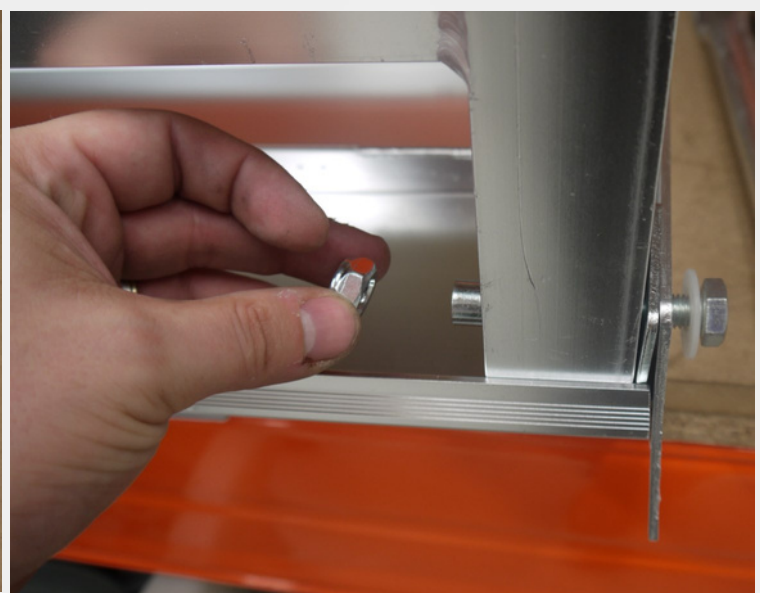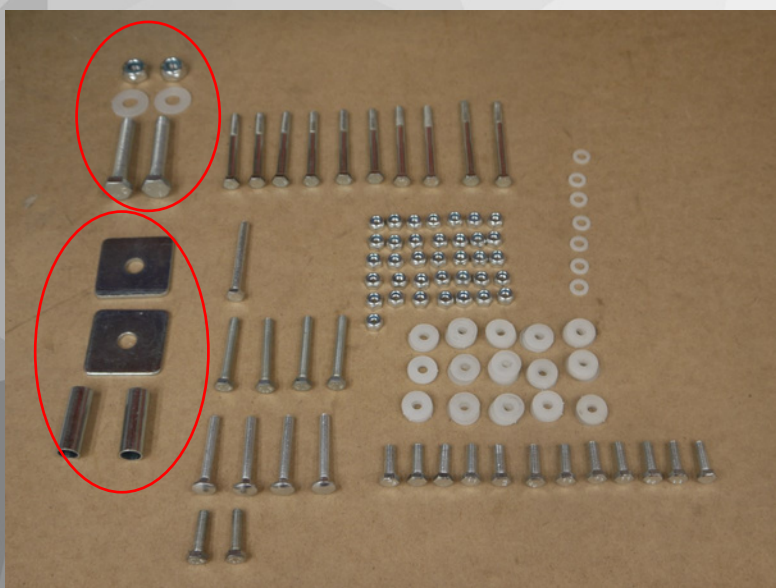

### STEP THREE

Fit Front Stile to Platform

Align holes in the Platform side and hole in Front Stile

Insert M6 x 20 bolt and D18 washer through Platform side and Front Stile

(Do not do the Front Hole this is done at a later step)

Fit D12 washer and Nyloc Nut—Do not tighten at this step

Complete other side



### STEP FOUR

Fit Bottom Rail

With Front Stile and Back Leg in position align holes of bottom rail and back leg.

Insert M6x60 bolt and D18 washer through bottom rail and backleg



Fit D18 Washer and Nyloc nut to bolt

Align holes in Bottom Rail and Front Stile

Insert M6x20 bolt and D18 washer through bottom rail and Front Stile

Fit D18 Washer and Nyloc nut to bolt

Complete other side

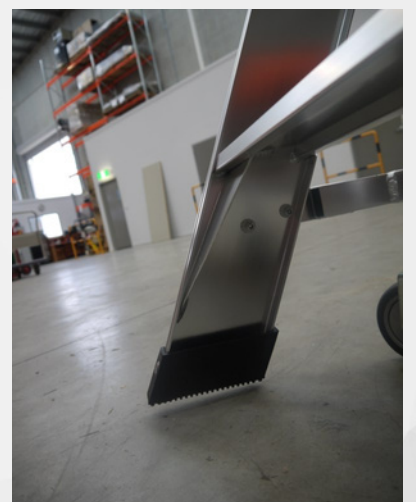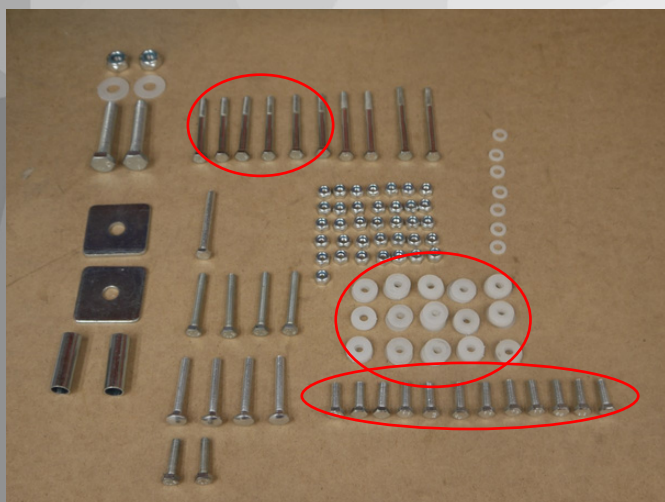

## STEP FIVE

Fit Platform Brace Connection

Align Platform brace with holes in Platform Side and Front Stile


Insert M6x20 bolt and D18 washer through Brace and Platform Side

Fit D18 Washer and Nyloc to bolt

Insert M6x20 bolt and D18 washer through Brace and Front Stile

Fit Nyloc nut to bolt

Complete other side

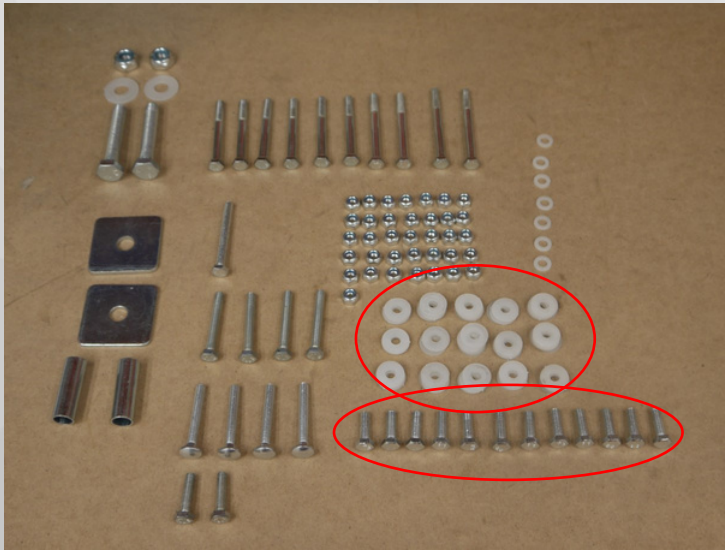

## STEP SIX

Firmly Tighten all nuts and bolts from earlier steps

## STEP SEVEN

Fit Rear Handrail and Rear Handrail posts

Align holes in the Platform side, Rear Handrail post and Rear Handrail

Ensure kickplate is positioned at rear of platform

Insert M6x70 bolt and D18 washer through Platform Side, Rear Handrail post and Rear Handrail

Fit D18 Washer any Nyloc nut

Insert M6x65 bolt and D18 washer through rear handrail post and rear handrail

Fit D18 washer and nyloc nut,

Insert M6x20 bolt and D18 washer through rear hand rail post and platform Fit

D18 washer and Nyloc Nut to Bolt

Complete other side

Firmly tighten all bolts and nyloc nuts



## STEP EIGHT

### Fit Top Handrail

Align Top Handrail with holes in rear handrail post, platform side and Front Stile

Insert M6x45 bolt and D18 washer through rear handrail post and top handrail (if you are unhappy with the tightness of the fit a second hole can be drilled to put an extra bolt through)

Fit D18 washer and Nyloc nut to bolt

Insert M6x25 bolt and D18 washer through Top Handrail, Platform Side and Front Stile

Fit D12 Washer and Nyloc Nut to bolt

(The following step is not required on 2 and 3 step units)

Insert M6x20 bolt and D18 Washer through Top Handrail and Front Stile

Fit D18 Washer and Nyloc Nut to Bolt

Complete other side

Firmly tighten all nuts and bolts

