

Dartboard Cabinet Easy Installation Instructions

TOOLS REQUIRED:


- Phillips head screwdriver or electric screwdriver
- Level
- Mounting hardware (provided)
- Tape measure
- Nail or marker

WALL ANCHORS:


A wall with studs is the most common type of wall to mount the cabinet.

1. Locate a stud and use wood screws or sheet metal type screws to secure the dartboard.
2. If a stud cannot be located or is not in the proper location, use an anchor that is suitable for the type of wall.


Some common anchors are:

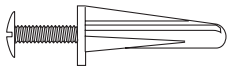

Plastic - Drill a snug hole in drywall and push the anchor in up to the head. When the screw is screwed into the anchor, the plastic will expand, locking the anchor in place. Do not use on thin panelling.

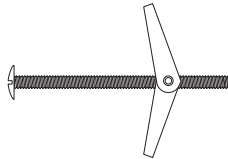

Toggle Bolt - Drill hole through wall. Hole must be large enough for the wings to pass through. Insert screw through the holes in the dartboard and thread the toggle wings just onto the screw. Fold the wings back and push through the hole until the wings spring open. Pull back on the screw to hold wings against the inside of the wall and tighten screw.

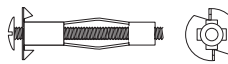

Hollow Wall Anchor - Drill a snug hole through the wall. Tap anchor into the hole until the prongs on the underside of the head are seated securely into the wall. Turn screw in and apply pressure to keep the anchor head from turning. Tighten screw until resistance is felt. Do not over tighten. Turn screw out to remove. Anchor will stay and screw can be replaced.

Other methods are available. Consult a hardware store if questions arise.

MOUNTING CABINET FOR STEEL TIP DARTBOARD:

1. Choose a location that has at least 10 feet of open floor space in front of the board. Use a wall stud for mounting whenever possible.
2. Prep the cabinet. Locate the four mounting holes on the back of the cabinet. Puncture the material in front of the holes. This will make locating the holes quicker when the cabinet is on the wall.
3. Two people are recommended for this step. Place the cabinet on the wall. Measure 68" (173cm) from the bottom of the "U-shaped" channel (See Diagram A), located on the dartboard hanging bracket, to the floor (See Diagram B).
4. Level the cabinet.
5. Recheck your measurements. Use a marker or nail to mark the position of the cabinet through the four mounting holes onto the wall. Remove the cabinet.
6. Drill four pilot holes on the marks created in Step 5.
7. If using plastic anchors: drill the holes so the anchors fit snugly. Push anchors into place.
(Continue to back for further instructions)

Diagram A:


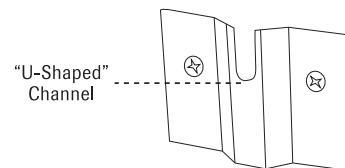


Diagram B:

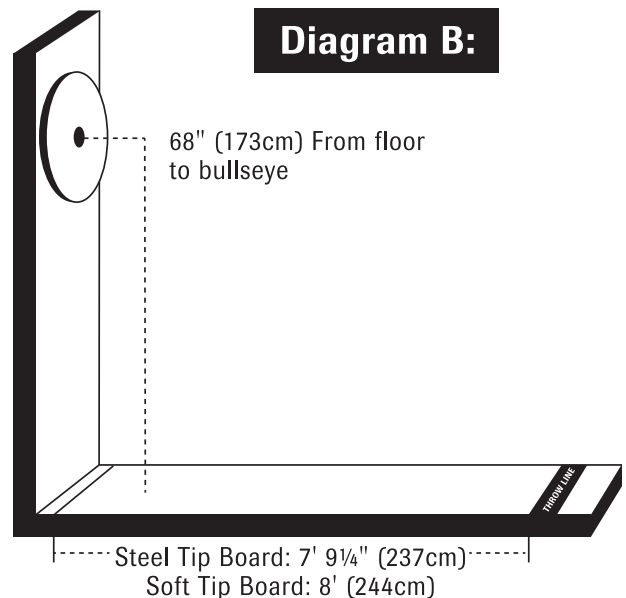


Dartboard Cabinet Easy Installation Instructions, Con't.

- Line up dartboard over anchors. Screw cabinet into place. The screws will expand the anchors.

MOUNTING CABINET FOR SOFT TIP DARTBOARD:

- Choose a location that has at least 10 feet of open floor space in front of the board. Use a wall stud for mounting whenever possible.
- Prep the cabinet. Locate the four mounting holes on the back of the cabinet. Puncture the material in front of the holes. This will make locating the holes quicker when the cabinet is on the wall. Remove the metal bracket located in the center of the cabinet if provided.
- Two people are recommended for this step. Place the cabinet on the wall approximately 68" (173cm) from the floor. Center the soft tip dartboard in the cabinet.
- Raise or lower the cabinet/board until the center of the bullseye is 68" (173cm) from the floor.
- Level the cabinet and recheck your measurements. The center of the bullseye should be 68" (173cm) from the floor.
- Holding the cabinet firmly in place remove the dartboard.
- Recheck your measurements, use a marker or nail to mark the position of the cabinet through the four mounting holes onto the wall. Remove the cabinet.
- Drill four pilot holes on the marks created in Step 7.
- If using plastic anchors: drill the holes so the anchors fit snugly. Push anchors into place.
- Line up dartboard over anchors. Screw cabinet into place. The screws will expand the anchors.

Diagram C:

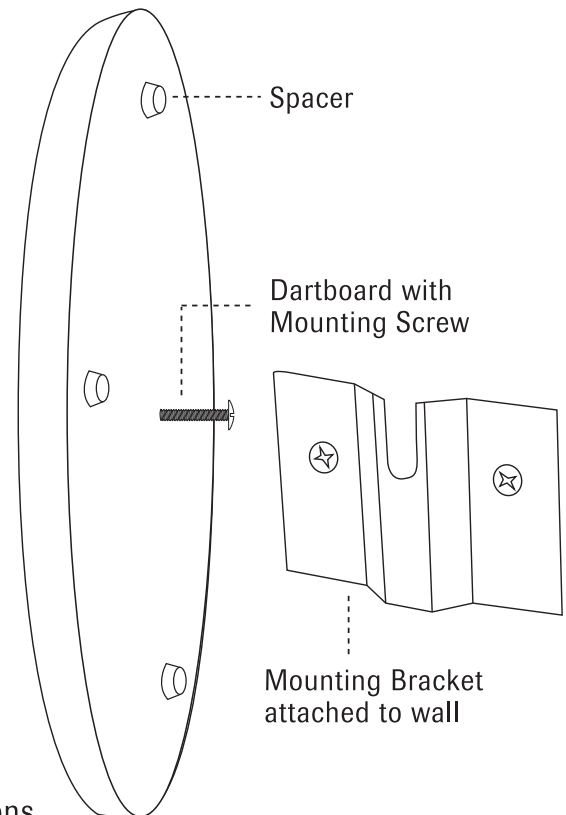

MOUNTING SOFT TIP DARTBOARD: Follow mounting instructions included with soft tip dartboard.

MOUNTING STEEL TIP DARTBOARD: Skip step 1 & 2 if dartboard not included. (If mounting an electronic dartboard please see included mounting instructions.)

- Position the spacers evenly around the outside edge of the back of the board. Keep the spacers near the edge and secure with nails or screws provided.
- The back of the dartboard will have a mark or small hole in the center of the dartboard. Turn the mounting screw into the mark. Tighten but leave a small gap between the screw head and the board. The gap will allow the screw head to slip inside the slot of the mounting bracket (see Diagram C). You may need to adjust the tightness of the screw to create a snug fit.
- Place a toe line 7' 9¼" (237cm) from the face of the board for the throwing distance. Adhesive tape or masking tape, 2' long by 2½" wide, may be used.
- After the board is mounted, the bullseye should be 68" (173cm) above the floor.

