


This adapter replaces the alloy bracket that is typically used to hold RandoBags to your saddle. This enables you to attach the RandoBag 2.2 or other smaller bags, directly onto most bicycle saddle rails, thus saving weight.

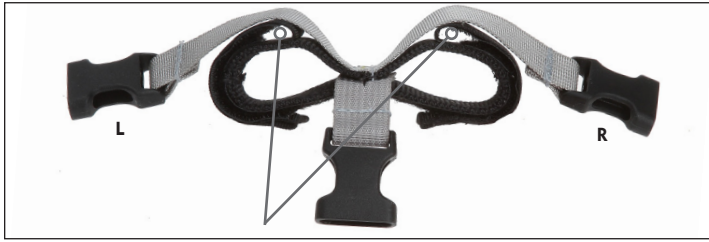

STEP 1 Attach this "figure 8" part of the adapter to the rails of your saddle using the Velcro tabs. The silver webbing should be on top with the buckles hanging to the sides. The center silver web should be pointing towards the rear tire.



STEP 2 Attach the triangle spreader bars to the seatpost and tighten securely, to keep it from rotating. The purpose of the bars is to prevent the bag from swinging forward and rubbing against the back of your

legs. **STEP 3** Slip the thick pair of Velcro *loop* tabs (soft fuzzy, #1 on DTS Overview photo), which are sewn to each bag, through the big loops of the figure 8.



STEP 4 Slip the thin Velcro *hook* (the Velcro half with the tiny sharp fingers) straps through the plastic-like rectangular Uniloops at found on triangle spreader bars (sewn with silver colored web). Don't let the Uniloops slide up — keep them at the bottom of the bag.

Then stick both halves of the Velcro back onto itself (see next photo for clarity on that).

DTS OVERVIEW

eoGEAR Dual Tab System — Shown to the right are the steps for attaching the tabs to a bracket (or piggy-backing a smaller pouch onto a larger bag).

1. Insert the heavy Velcro loop male tab through the female webbing loops or slots found on the bracket or host bag.
2. Adhere the tab to the back side of the bag.
3. Adhere the thin Velcro hook to the heavy male tab Velcro loop tab as shown.



STEP 5 Attach the male ends of the horizontal compression strap to the L & R female buckles in Step 1 photo.

STEP 8 Attached to these straps are plastic strap keepers, which keep the loose ends of webbing from hanging down, so it doesn't get caught into the spokes of your wheel. **Tuck them in please!**



STEP 5 Only larger bags (> 2.2) have an "Upside Down Y" compression strap. Clip the pair of male ends with the black webbing (found near the bottom corners of the bag), to the female A & B buckles on the triangle as seen in Step 2 photo.

STEP 6 And finally, with larger bags only, clip the upper end of the "Upside Down Y" strap (silver end) to the female buckle centered on the figure 8. **Cinch this strap snugly, so the bag doesn't drag on your rear tire.**

