Product Description


This phone jack module is for use with alarm system control panel as a means of connecting to the in-building telephone lines.

Installation Instruction

The phone jack module may be secured to the desired location in two ways:

- 1. With the double-sided adhesive foam tape provided.
- 2. By opening the module cover and securing the screw provided in the center cavity and then replacing the module cover.

For wiring connections, see the wiring diagram below:

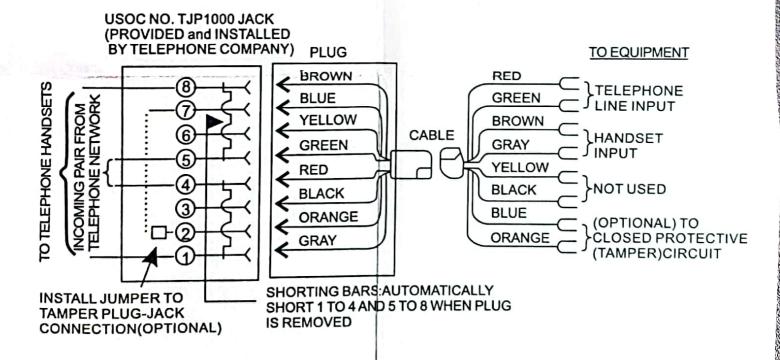

PLEASE READ THESE SAFETY INSTRUCTIONS

- 1. Never install telephone wiring during a lighting storm.
- 2. Never install telephone jacks in wet locations unless the jack is specifically designed for use in the wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 4. Use caution when installing or modifying telephone lines.

