

EVERLAST CLIMBING INDUSTRIES, INC.


INSTALLATION INSTRUCTIONS FOR GROPERZ™ HAND HOLDS



INSTALLATION INSTRUCTIONS:

(Please read all instructions thoroughly before starting to install)

1. Place Groperz™ Hand Hold over desired hole (T-nut) in wall, lining up the hand hold with the hole in the climbing wall.
2. Insert bolt through Groperz™ Hand Hold and into the climbing wall.
3. Using an Allen Wrench (included), gently start threading the bolt into the T-nut. (Take care not to cross-thread the T-nuts.)
4. If you feel resistance while starting to thread the bolt, immediately stop, remove the bolt and readjust the hand hold and bolt angle.
5. When the bolt threads are started properly, continue threading the bolt until it becomes tight, then give another 3/4 of a turn.

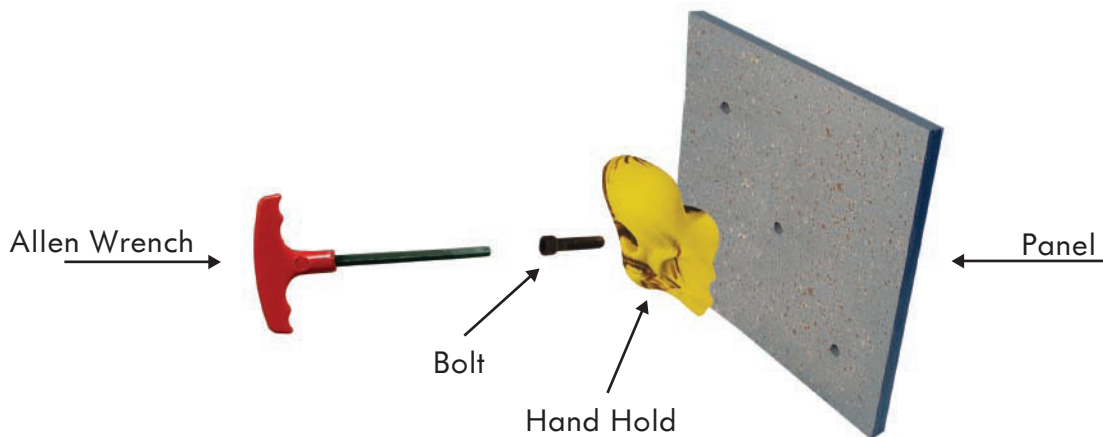

REMOVING AND MOVING GROPERZ™ HAND HOLDS:

1. Using the Allen Wrench, remove the bolt by turning it counter-clockwise.
2. When moving Groperz™ Hand Holds to T-nuts that have never been used, it is important to always follow installation instructions carefully.

HINTS:

1. Your climbing wall will be more useful and interesting if all types of holds are spread out along the climbing wall.
2. Separate the Groperz™ Hand Holds by colors and sizes.
3. Distribute each color of Hand Holds evenly on each panel.
4. Clean Groperz™ Hand Holds in dishwasher as needed. Let air dry.



THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL IS ESSENTIAL AND IS YOUR RESPONSIBILITY. PLEASE REFER TO THE SAFETY, CARE AND MAINTENANCE INSTRUCTIONS.