

Everything you need to build your very own Thermory Barrel Sauna is right there in front of you. If it looks like a lot, it is. If it seems too complicated to assemble, it isn't.

These instructions are specifically written to guide you through each step with ease. And if you need additional encouragement, you can scan the code on the back of this quide to see how it's done.

The Thermory Barrel Sauna No54 is designed for up to two people and is outfitted with a window. That's plenty of room for you and the friends helping you put this together. But if you want to enjoy the first steam all by yourself, we understand.

Installation Guide

Barrel №54

The Wait Is Over.

We truly appreciate the opportunity to share our love of sauna culture with you. And if there's anything we can do to make your sauna experience better, please don't hesitate to let us know. If not, just relax and enjoy.







SUSTAINABLE

THERMALLY MODIFIED WOOD DURABILITY

DIMENSIONAL STABILITY

/ CHEMICAL







BARRELS

Installation guide Barrel Nº54

BARRELS

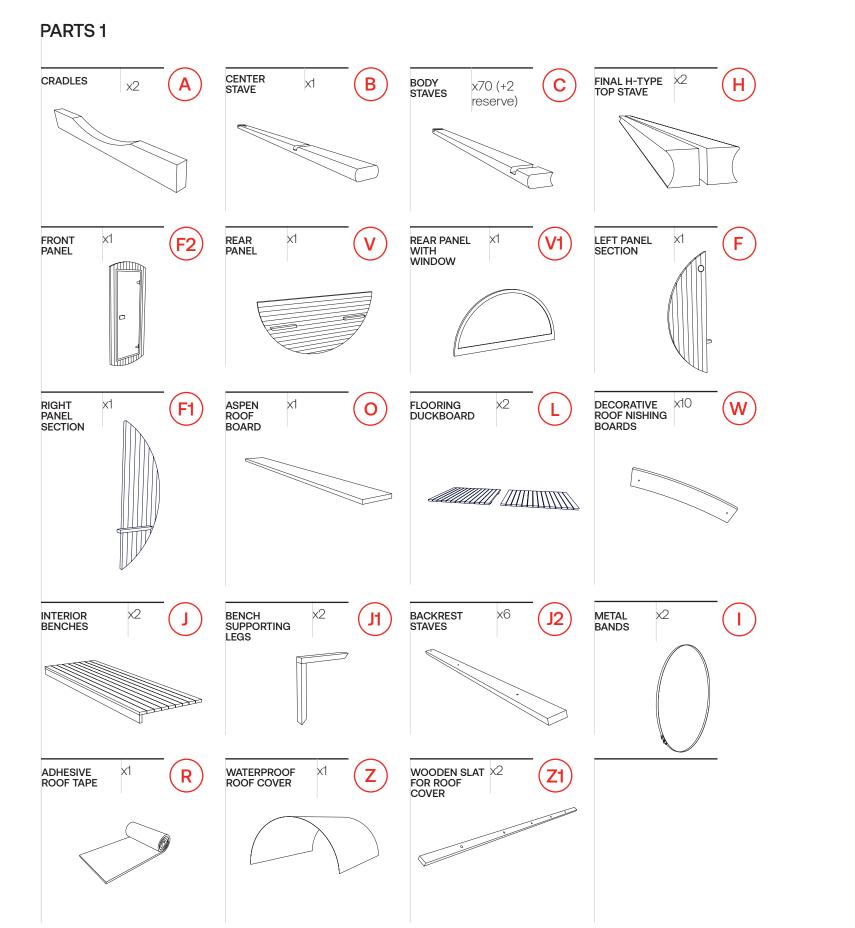

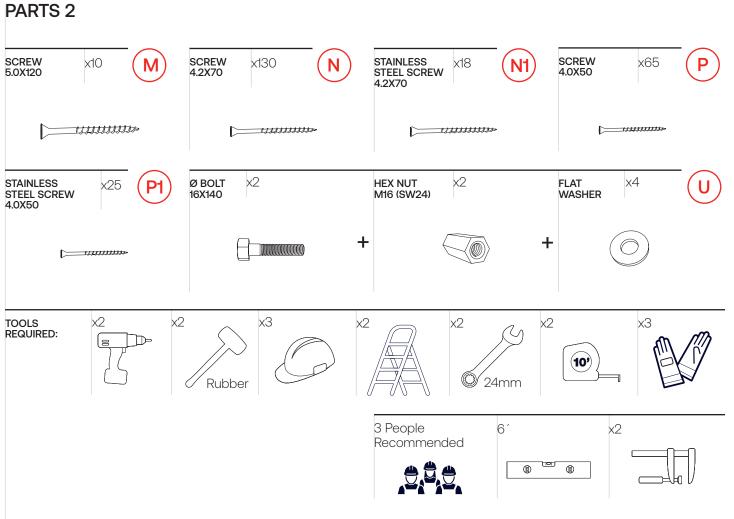


STEP ZERO

Before you begin, be sure the sauna will fit in your chosen location.

Approximately L x W x H of 6' x 7' x 7' is ideal. Overall dimensions are shown here.

Be sure the site is level and free of standing water after rainfall.

Concrete, pavers or crushed stone is preferred.

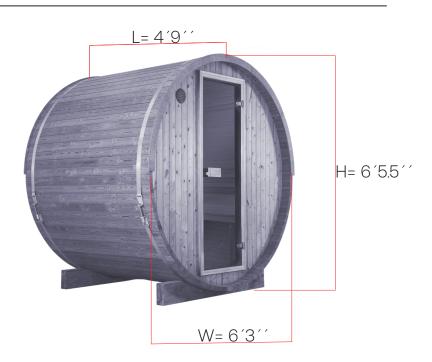

BARRELS


BARRELS

V

M

С

STEP ONE

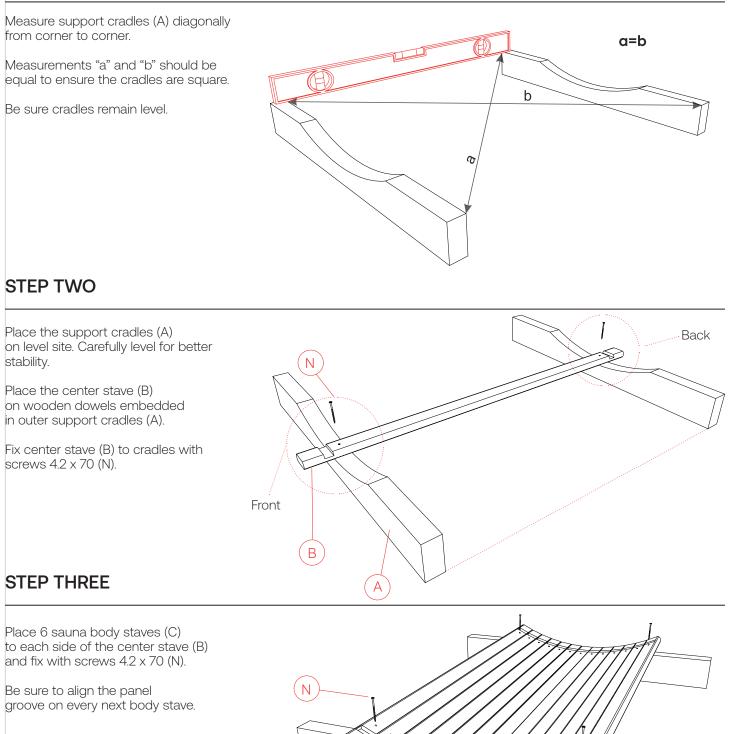

STEP FOUR

Place door panel (F2) in front slot. Be sure panel is centered, leveled, completely seated. Attach side panels (F, F1) using 4 5.0 x 120 (M) screws and 2 4.2 x 70 (N1) stainless steel screws.

Place rear panel (V) with bench supports facing interior.


Confirm width of rear panel (V) matches combined width of left panel section (F), front panel (F2) and right panel section (F1). These panels must be completely seated into the floor panel.


STEP FIVE

Place body staves (C) until the halfway point. Place rear panel with window (V1) on rear panel (V), fix by 2 screws 5.0 x 120 (M).

and fix with screws 4.2 x 70 (N).

Be sure to align the panel

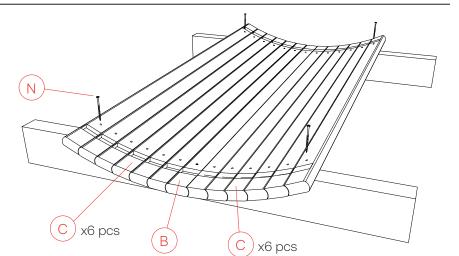

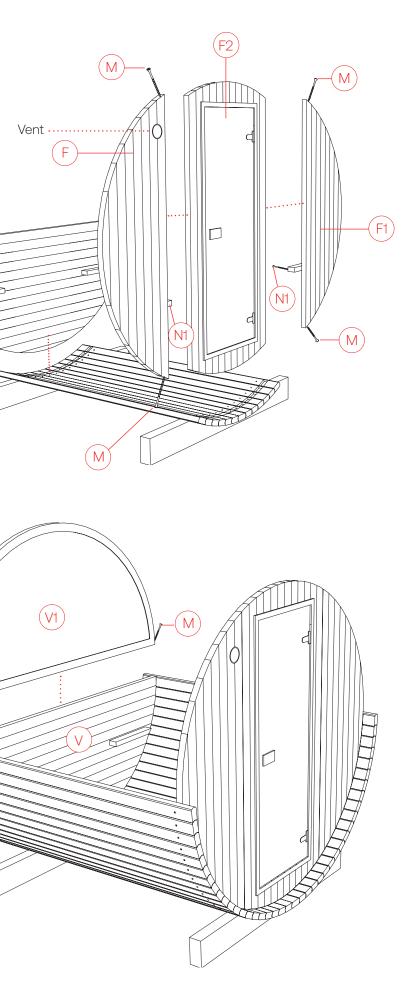

BARRELS

Installation guide Barrel Nº54

WARNING!


С

(N)

STEP SIX

Continue placing body staves (C) tightly on both sides of the sauna using rubber mallet, while fixing body staves on the front panel with 4.2×70 screws and rear window panel with 4.0 x 50 screws to prevent glass breakage.

To finish the roof top joint, use top stave (H).

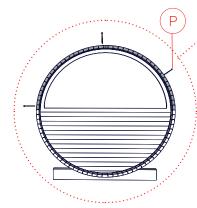

STEP SEVEN


Install steel bands (I) by wrapping bands around barrel prior to connecting with bolts and nuts (U).

Place steel bands evenly around barrel, covering screw heads.

Measure from steel band to barrel edge to ensure the steel band is even.

Cover roof with roof tape. Rub and smooth with pressure to ensure adhesion.

Install interior aspen roof trim (O) with 4.0 x 50 (P1) stainless steel screws.

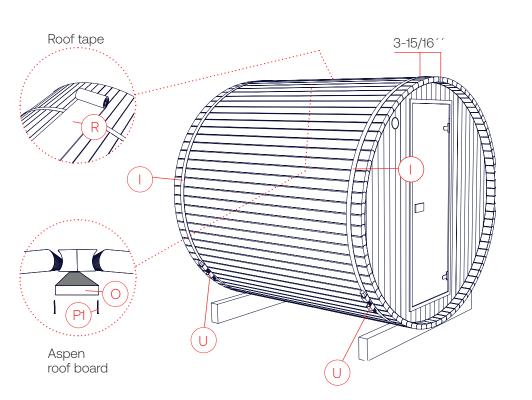


Use shorter screw 4.0 x 50 (P) for rear panel V1 otherwise ΉÌ the window will be damaged! $\left(C \right)$

STEP EIGHT

Attach interior supporting leg (J1) to the bench (J), install two sauna benches on wall mounts using stainless steel screws 4.2 x 70 (N1).


Hold the seat and leg assembly tight to the sauna wall. Using a level, make sure the bench seat is level from front to back. This will ensure proper placement.


Install backrests (J2) at your chosen height using stainless steel screw 4.0 x 50 (P1).

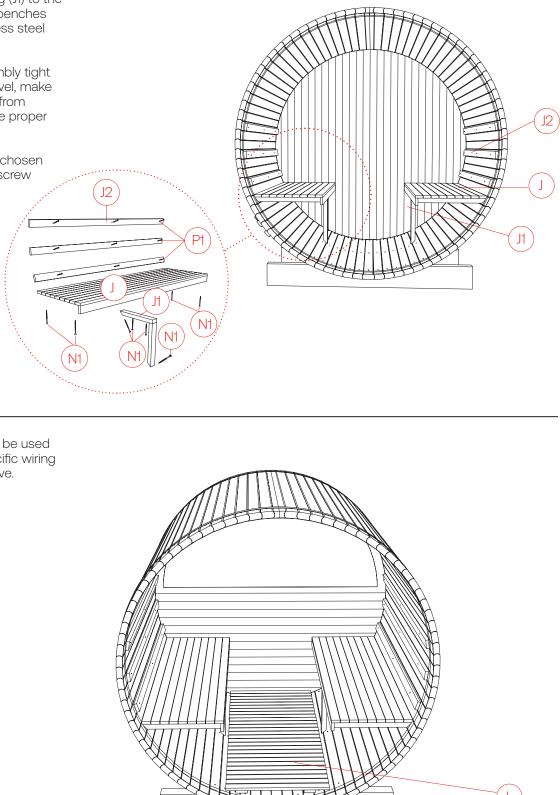

STEP NINE

Flooring duckboards (L) can be used for wiring runs, confirm specific wiring runs needed for chosen stove.



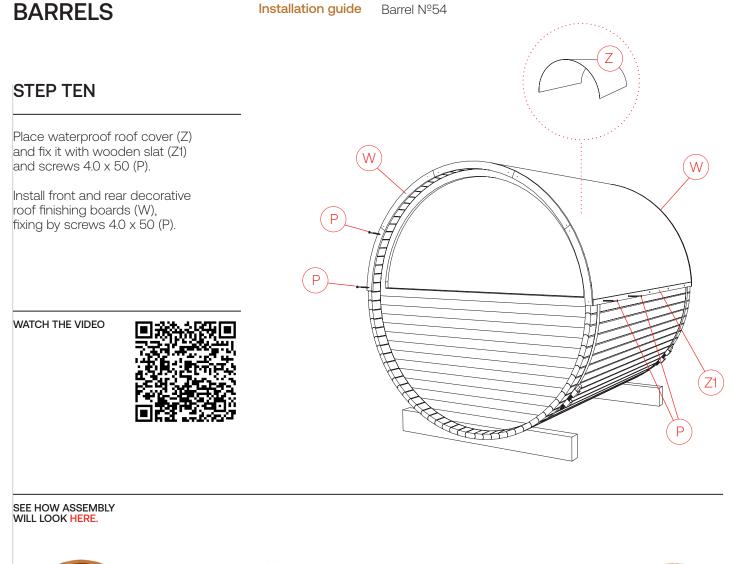



Thermory USA - Denver 537 W. Highlands Ranch Pkwy, Ste. 114 Highlands Ranch, CO 80129 720.759.7268 support@thermoryusa.com

Thermory USA - Buffalo 56 Harvester Ave, Ste. 1-201 Batavia, NY 14020 585.591.6590 support@thermoryusa.com



