

Sauna Backrest Assembly Instructions




Tools Needed:

- Tape Measure
- Level
- Electric Drill
- 3/32" drill bit
- Countersink drill bit


Fasteners & Torx driver bit included:

- 1 1/2" screws for backrest assembly and mounting supports to wall


1. Line up horizontal pieces evenly against a flat surface, with finished rounded edges facing down.

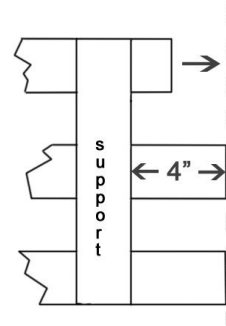

2. Pre-drill 9 screw holes with 3/32" bit. Drill thru support then half way into horizontal piece, be careful not to drill thru to finished rounded side. Insert screws in numbered order.

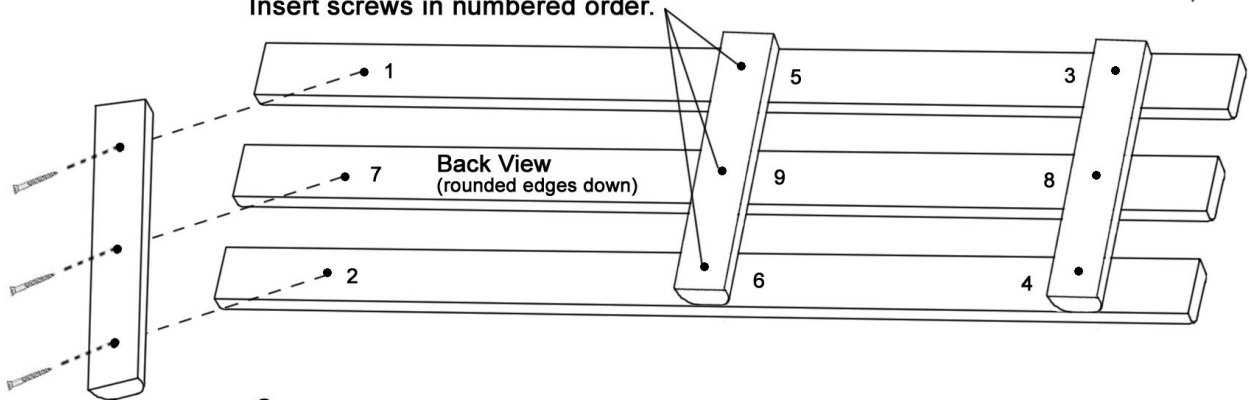

3. On front side, pre-drill 6 screw holes for mounting supports to wall. Countersink deep enough so head of screw is about 1/8" below surface so there are no exposed hot fasteners to touch. Center backrest on wall 12" to 14" above top bench. Fasten one screw then check with a level before finishing.

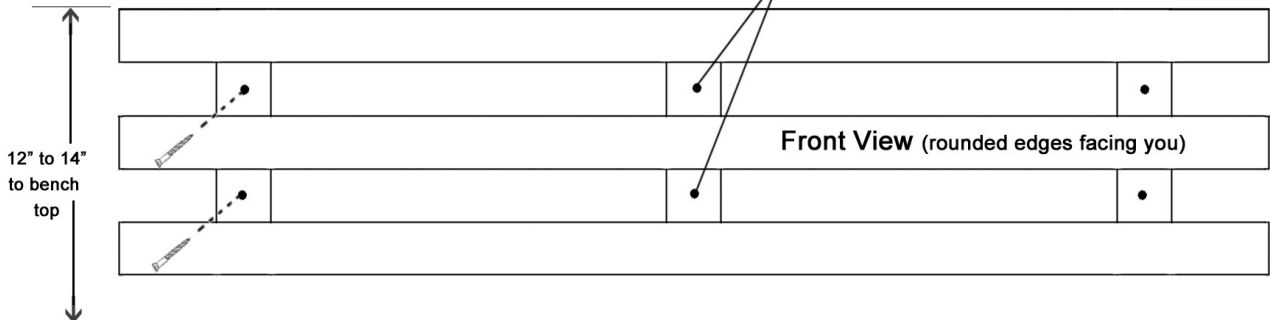

Z:/ssc/docs/diagrams-install/backrest rev.01/09/09