


Begin by installing the Commsled on the rear of your Invisio® PTT using the original mounting screws. Ensure the lanyards are attached in the correct position, and are on top of the Commsled itself.

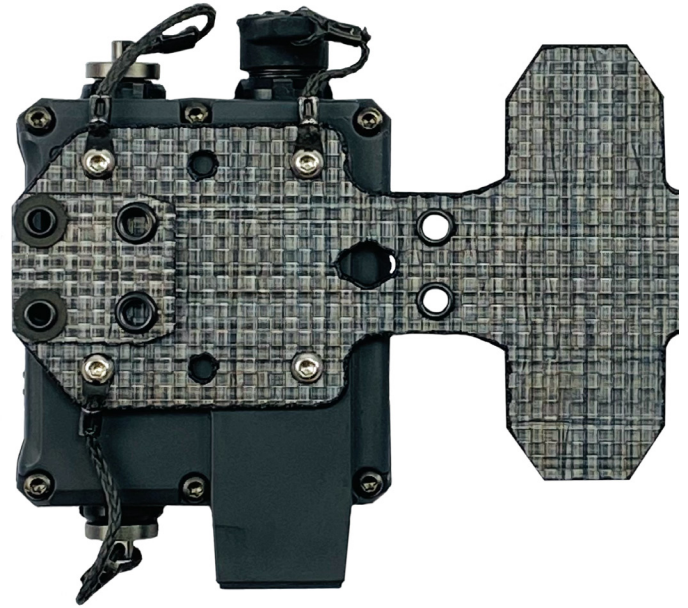

Next route the shockcord through the two holes in the center of the Commsled in the manner shown to the right.

Next, insert the Commsled into the MOLLE/PALS webbing closest to the outside edge of your carrier, starting with the top and then weaving the bottom tabs into the corresponding slots.



972.265.9711
 sales@axladvanced.com
 P.O. Box 267 120 E FM 544
 Murphy TX
 DUNS 098133124
 CAGE 89BC4

Next, use knots or a toaster/tensioner to set the desired tension of your Commsled. If it is necessary to cut away the excess, be sure to burn the ends with a lighter.



Correctly mounted Commsled with Invisio® V60 shown on a Spiritus Systems® LV119 Overt

972.265.9711
 sales@axladvanced.com
 P.O. Box 267 120 E FM 544
 Murphy TX
 DUNS 098133124
 CAGE 89BC4