



NUTSOF


HELMET SCRIM

INSTALLATION MANUAL

x4 Tethering tabs




32" Bungee cord

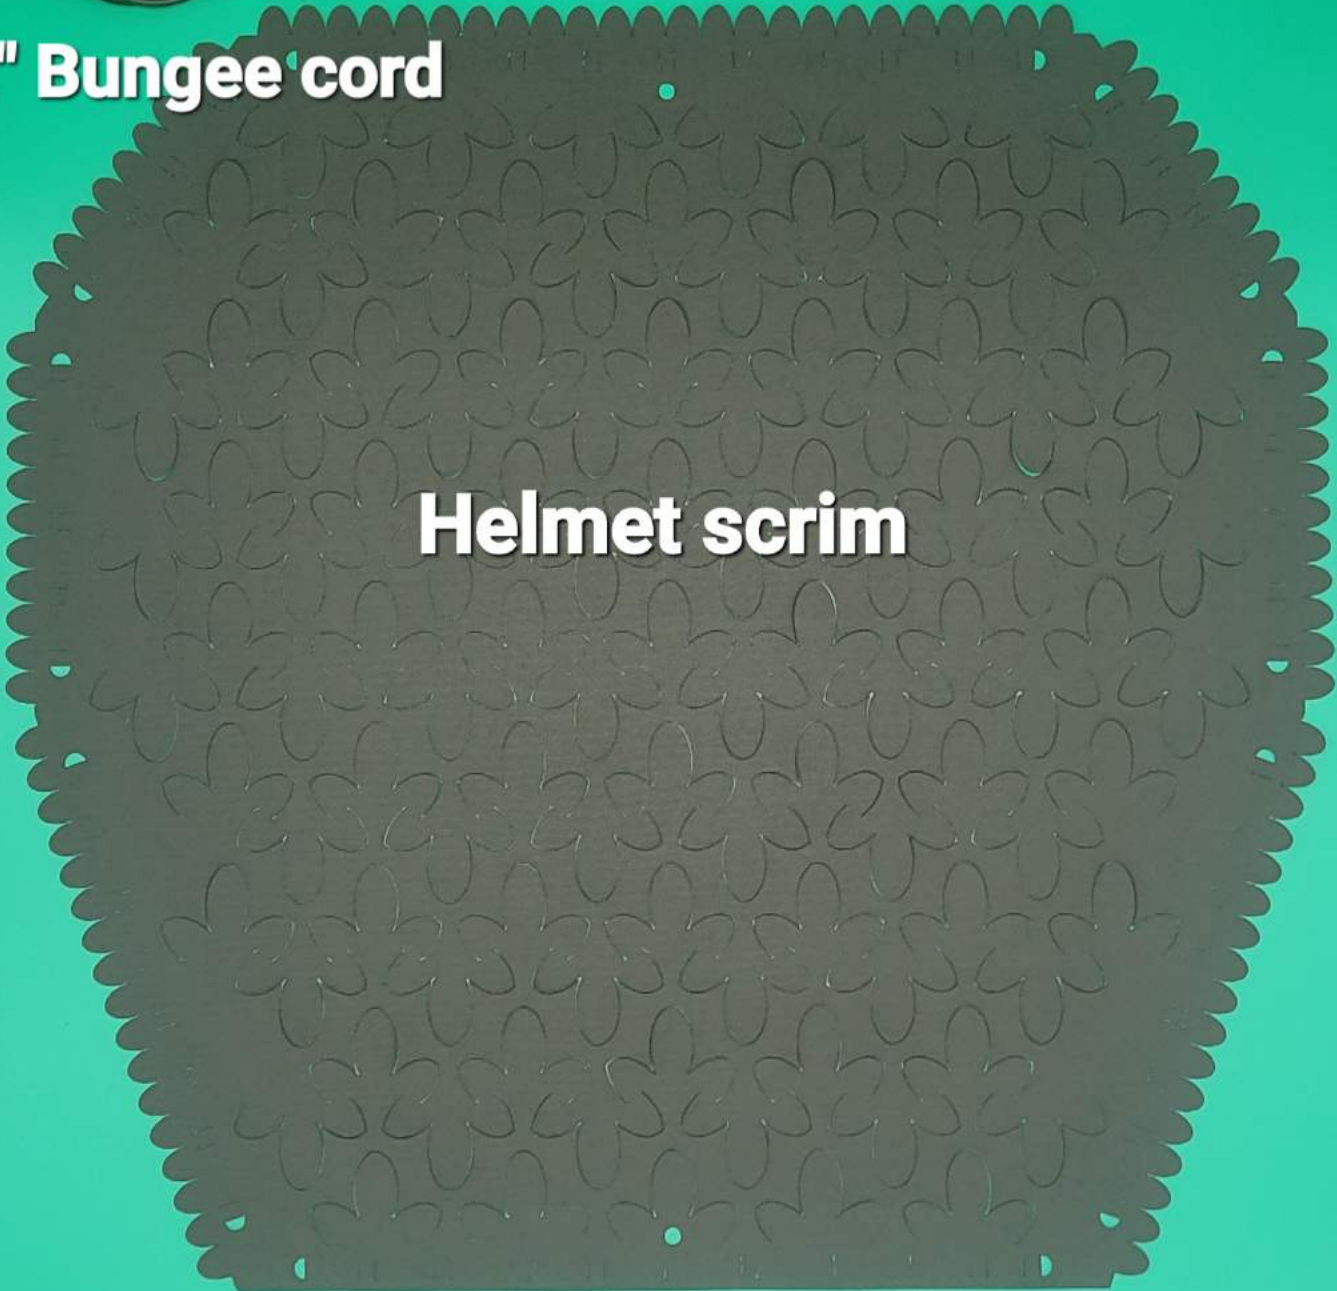

Helmet scrim




Start here (flat side)

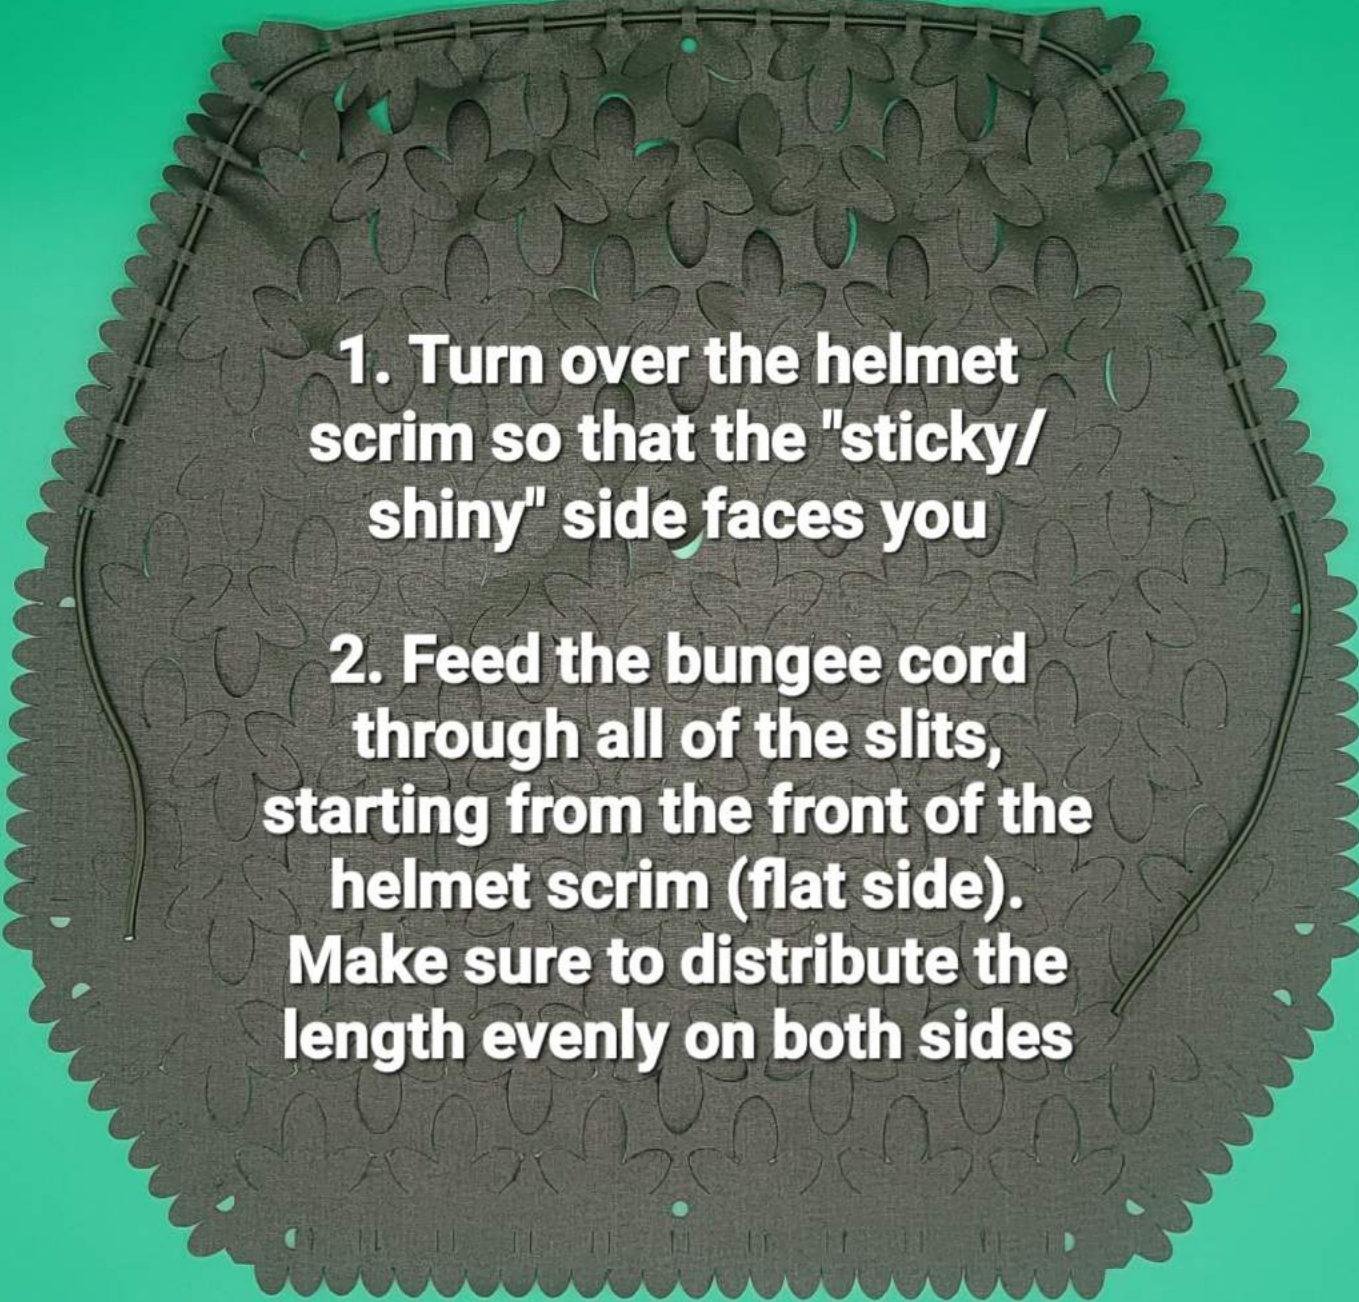


**1. Turn over the helmet
scrim so that the "sticky/
shiny" side faces you**

**2. Feed the bungee cord
through all of the slits,
starting from the front of the
helmet scrim (flat side).
Make sure to distribute the
length evenly on both sides**

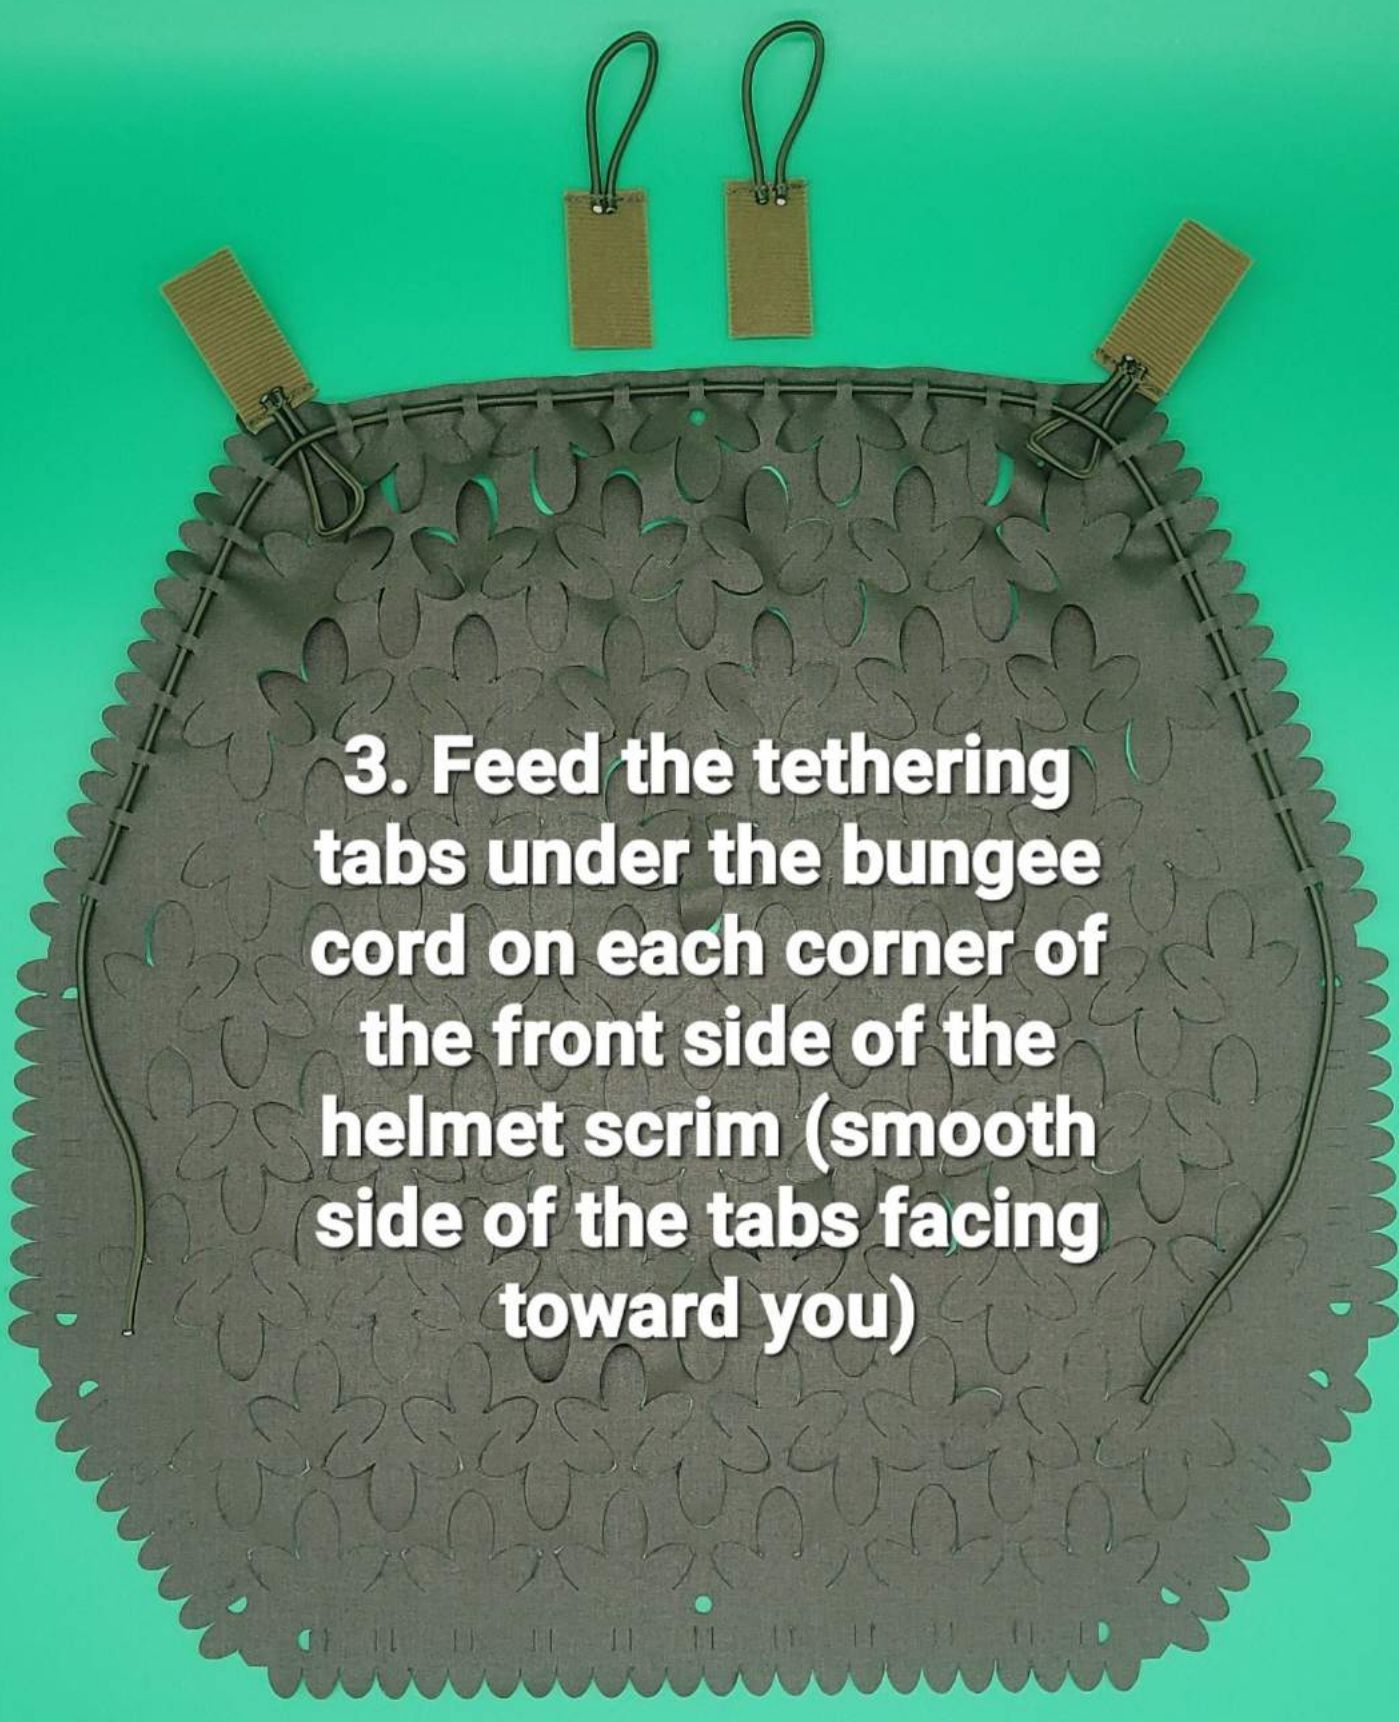A circular, perforated helmet scrim is shown against a teal background. The scrim has a scalloped edge and a repeating pattern of small, teardrop-shaped holes. A black bungee cord is stretched across the top edge of the scrim. Four brown, rectangular tethering tabs are attached to the top edge of the scrim. Two of these tabs are held in place by metal binder clips. The text "3. Feed the tethering tabs under the bungee cord on each corner of the front side of the helmet scrim (smooth side of the tabs facing toward you)" is overlaid on the center of the scrim.

3. Feed the tethering tabs under the bungee cord on each corner of the front side of the helmet scrim (smooth side of the tabs facing toward you)

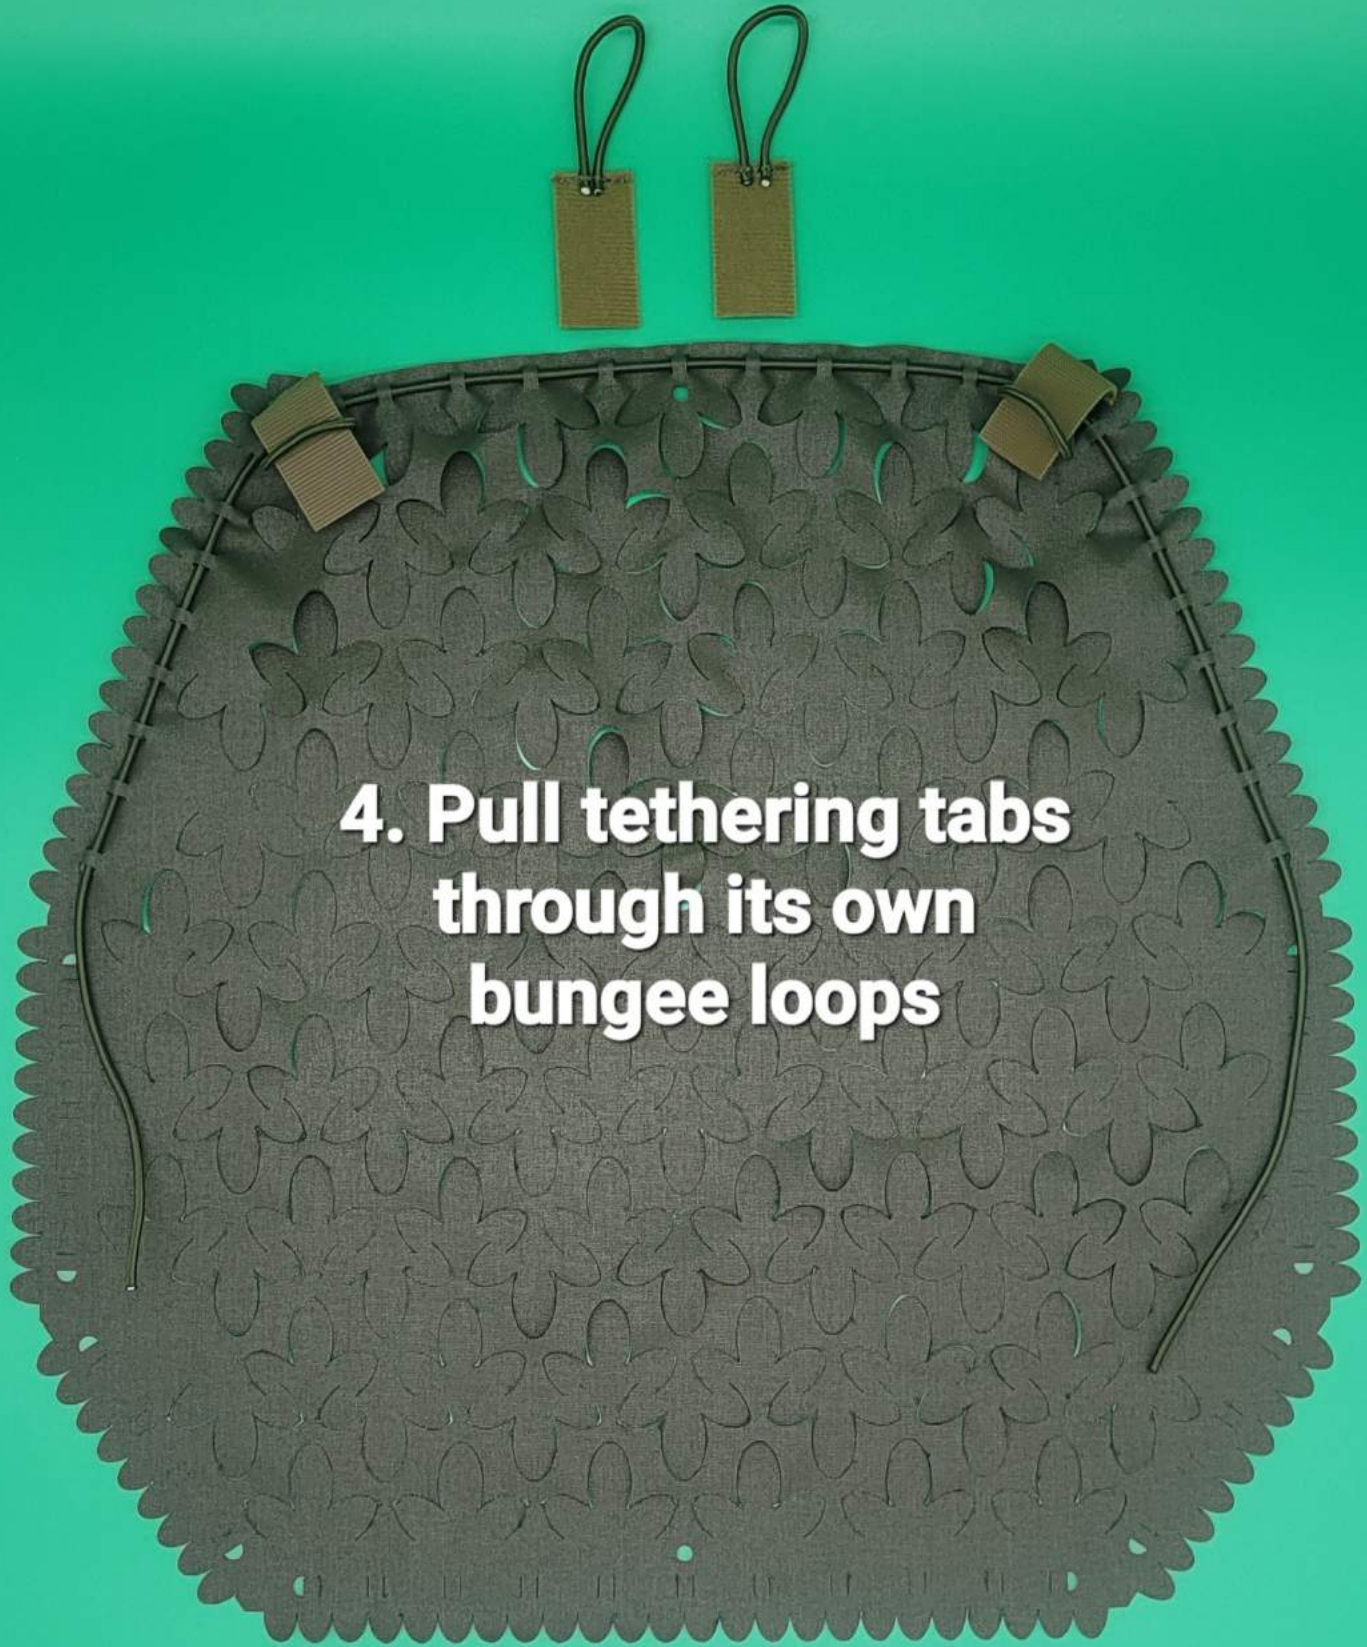


**4. Pull tethering tabs
through its own
bungee loops**




**5. Continue feeding
the bungee cord until
you reach the marked
slits**





**6. Repeat step 3 & 4 for the
backside of the helmet
scrim**



A circular helmet scrim made of a dark, textured fabric with a pattern of small, overlapping leaf-like shapes. A bungee cord is threaded through the fabric, forming a grid of knots. Four tan, ribbed straps are attached to the outer edge of the scrim, one at each corner. The entire assembly is set against a solid teal background.

7. Keep feeding the bungee cord through the slits and tie a overhand knot at the center of the backside of the helmet scrim

**8. Undo the front
bungee hooks on the
helmet**



**9. Remove front & rear
padding inside the
helmet**



Center



**10. Install helmet scrim
from the front by
stowing the bungee
hooks**



**11. Put the tethering
tabs where the pads
would normally be**



**12. Reinstall the front
pad**

**13. Pull the helmet scrim
to the back until it covers
the surface of helmet**



**14. Repeat step 10,11
and 12 for the rear of
the helmet**



Installation completed

