


6/12™ Modular Pocket Technology

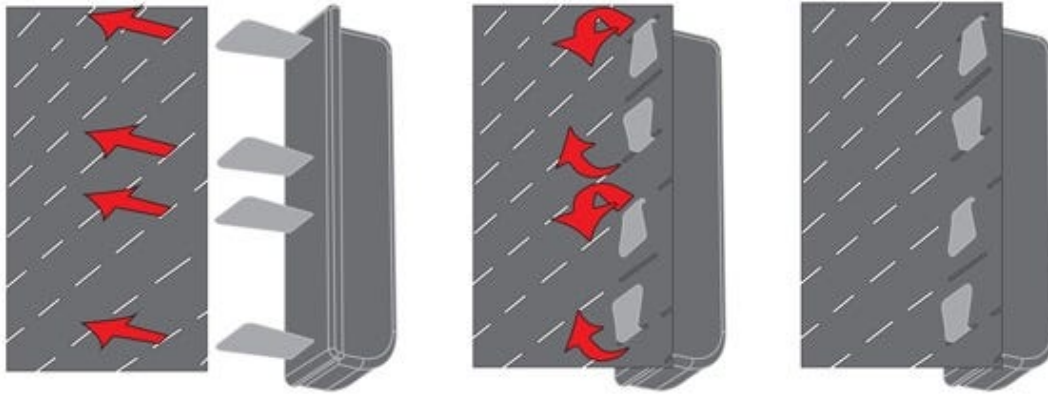


Pocket Attachment Tabs Quickly
Slide into the 6/12™ Field

The Attachment Tabs
Fold into Place

Pocket is Now
Secured in Place

6/9™ Modular Pocket Technology

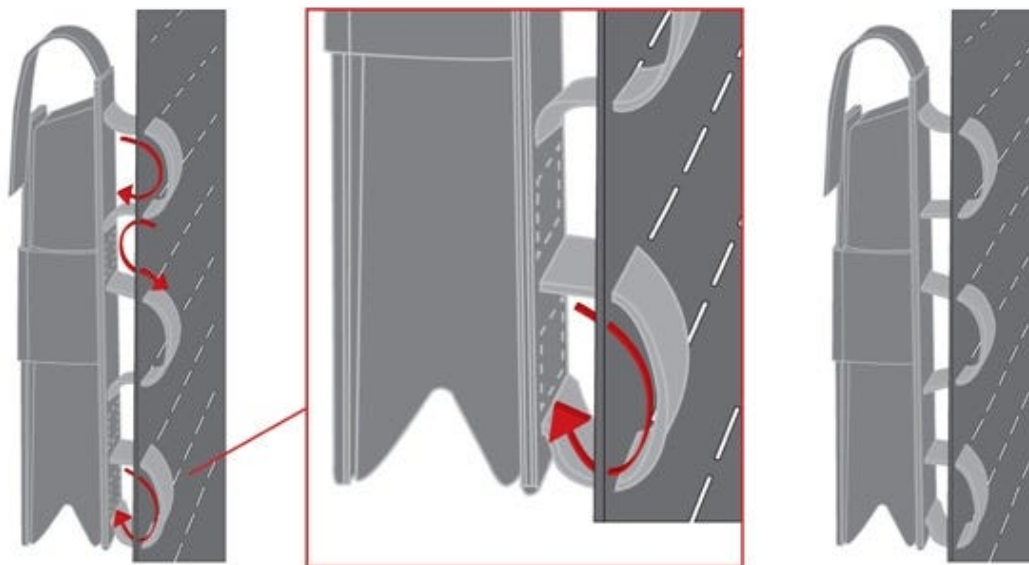

Weave 6/9™ Attachment
Strap into the 6/12™ Field

Ensure End of 6/9™ Strap is
Inserted Completely Upward
in the Last Slot of the Pocket

Pocket is Now
Secured in Place