

Installation and Care Instructions

Door Sill Entry


Please read all instructions before installation.

1. **Tools and Materials Needed**

- 50/50 Mix isopropyl alcohol/water
- Scratch resistant cloth
- 1500 watt hair dryer*(If necessary)(DO NOT use heat gun)

2. **Installation Preparation**

- Apply alcohol and water cleaning mixture to a scratch resistant cloth. Do not apply cleaning mixture directly to vehicle surfaces.
- Clean installation surface area thoroughly and wipe dry immediately with a new clean cloth as shown in Figure 1(Driver side Shown).
- Ensure parts AND vehicle surface are between 70°F and 110°F at time of installation. *If necessary a hair dryer may be used to reach desired temperature.

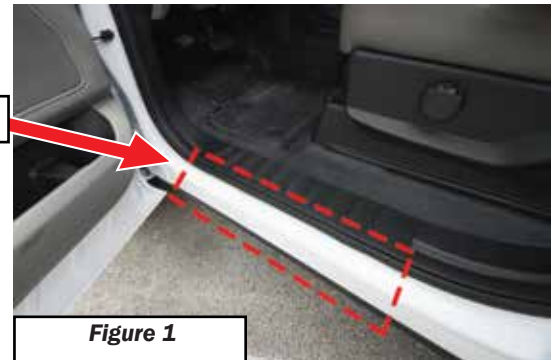

3. **Installation**

- Before peeling adhesive liner, dry fit parts on installation surface to check for proper fit and placement as shown in figure 2.

