
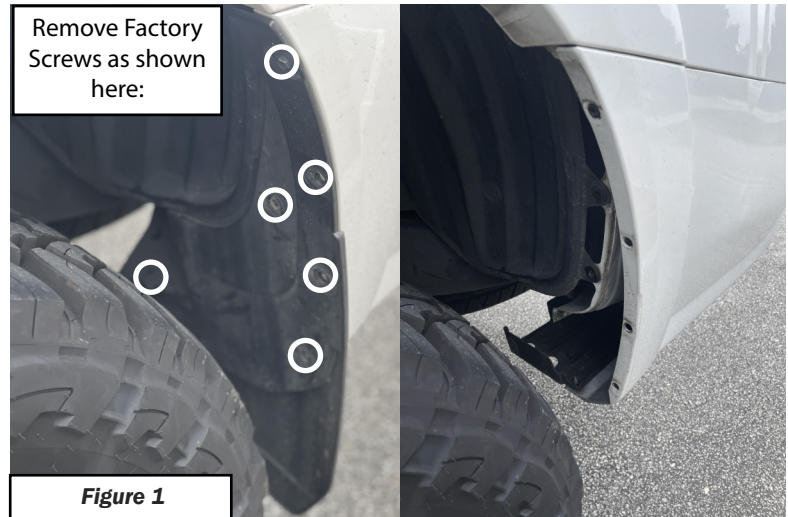


Installation and Care Instructions (5th Gen) 4Runner Rear Mud Flap Delete Kit

Please read all instructions before installation.

Part SKU: **RUN038**

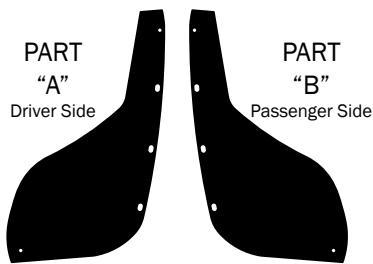

1. **Tools and Materials Needed**

- 10mm wrench or socket
- 6 Nylon Retainers(Included)
- 2 metal screws(Existing Factory Screws)

2. **Installation**

- Carefully detach the original rear mud flap, keeping two metal screws aside for later use. (**Figure 1**)
- Attach the TUFSKINZ mud flap delete panel with the textured side facing outward towards the tire. Use the retained factory metal screws for the top and bottom holes, and insert the provided nylon retainers into the three central holes. These will need to be pushed in firmly to seat properly.
- Upon completion, your installation should resemble the image below. (**Figure 2**)

