

Installation and Care Instructions

TACOMA(4TH GEN) Door Sill Protection Overlays

Please read all instructions before installation.

1. **Tools and Materials Needed**

- 50/50 Mix isopropyl alcohol/water
- Scratch resistant cloth
- 1500 watt hair dryer
(If necessary, **DO NOT use heat gun)*

2. **Installation Preparation**

- Pop off the existing OE plastic door sill piece.
- Apply alcohol and water cleaning mixture to a scratch resistant cloth. Do not apply cleaning mixture directly to vehicle surfaces.
- Clean installation surface area thoroughly and wipe dry immediately with a new clean cloth.
- Ensure parts AND vehicle surface are between 70°F and 110°F at time of installation.
**If necessary a hairdryer may be used to reach desired temperature.*

3. **Installation**

- Before peeling off the adhesive liner, dry fit parts on installation surface to check for proper fit and placement.
- For the top piece, peel down the top inch of the adhesive liner and align just under the cutouts and gradually peel back and work down as seen in **Figure 1**.
- Snap the OE plastic door sill piece back in place as seen in **Figure 2** and repeat all steps for each sill.

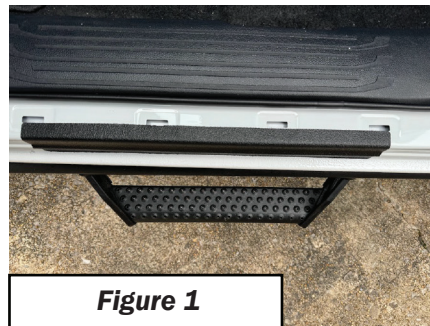


Figure 1

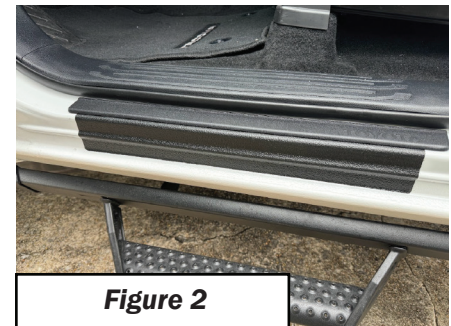


Figure 2

[Click for Product Listing](#)

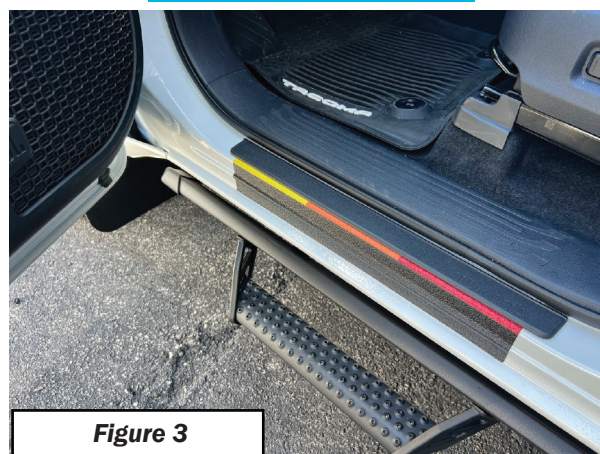


Figure 3