

Installation and Care Instructions Tacoma Mud Flaps(Rear)

Please read all instructions before installation.

here:


1. **Tools and Materials Needed**

- 3/8" Socket Wrench
- 10mm Socket Wrench(For Factory Screws)
- 2 1.25inch Screws(Included)
- 2 Spacers(Included)

2. **Installation Preparation**

Remove factory screws, see Figure 1 for location



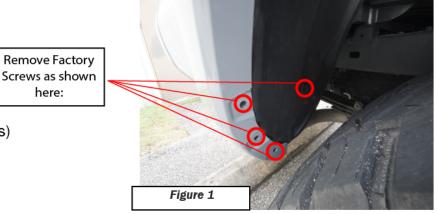

3. Installation

- Attach the screw and spacer provided, as seen in Figure 2 **Do not over tighten**
- Attach the remaining 3 factory screws, as seen in Figure 3 **Do not over tighten **
- Tighten each screw so it's snug, be careful not to over tighten Repeat steps for other side.

