

605.496.3538

#### Cadillac CTS-V & ZL1 Flex Fuel Installation Guide







605.496.3538

### Step 1: Install 3/8 to -6an adapter on stock rail







605.496.3538

# Step 2: Put the 1-180 female fitting on the adapter you just installed







605.496.3538

### Step 3. Ground (eyelet) to head or chassis ground









605.496.3538

# Step 4: Plug Power into EVAP connector and solenoid

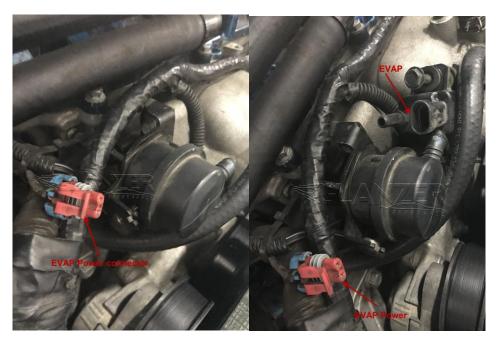

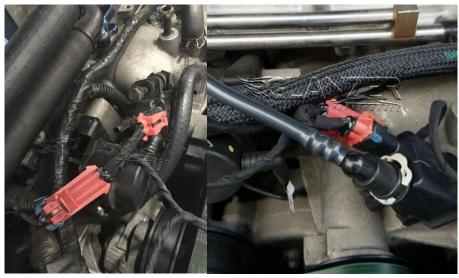




605.496.3538

## Step 5: Route blue wire to ECM.

#### **CTSV**

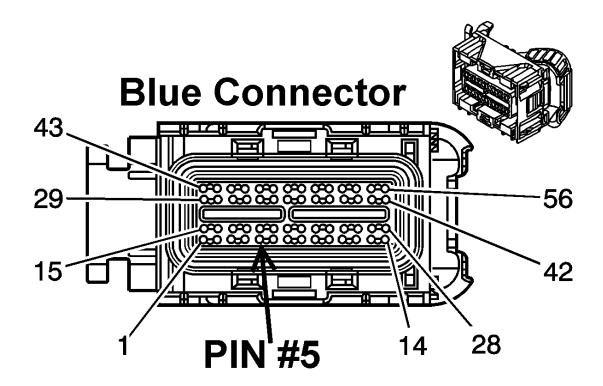

NOTE: MAKE SURE ALL FITTINGS ARE TIGHT BEFORE PRIMING FUEL SYSTEM AND STARTING VEHICLE.