


# FD83BKHRN INSTALL GUIDE

**PLUG & PLAY CARGO CAMERA SWITCHER WHEN FACTORY REAR CAMERA IS PRESENT**

**COMPATIBLE WITH BOTH THE SYNC 2 AND SYNC 3 8" SCREENS**

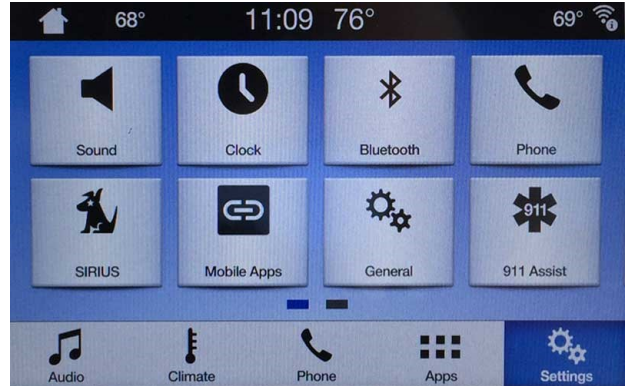

- Step 1) Remove radio bezel and factory screen.
- Step 2) Disconnect factory connector from the screen. Plug in the T-harness provided into the back of the factory screen. Plug the opposite end back onto the factory harness of the vehicle. (see diagram below)
- Step 3) Connect the red wire of the switch and the camera's power to ACC 12v and mount switch.
- Step 4) Plug the Yellow RCA end into the cargo camera's RCA.
- Step 5) Reinstall the factory screen and bezel.
- Step 6) Start the vehicle. If cargo camera is desired, You MUST flip the switch to the on position before placing the vehicle in reverse. Failure to do so may result in a split image on the screen.

