



Installation Instructions for the following Kits:

NISS-3HT



- A** Instructions/warning sticker
- B** Remote Start Module
- C** Green Loop - (see note below)
- D** BCM T-harnesses
- E** Starter wire - ONLY USED ON THE "NISS-3HT-1w" KITS
- F** Ground wire


Harness Installation

1. Use the chart on page 2 to locate your vehicle's BCM
2. Leave the Remote Start Module unplugged from the harness
3. Remove necessary panels, trim, or instrument cluster in order to gain access to your BCM module
4. Install all of the BCM T-Harnesses - make sure they are connected securely

GREEN LOOP INSTRUCTIONS

If your vehicle year is **highlighted in green** on the chart, you will **NEED** to cut the GREEN LOOP and connect the green pigtail wire to pin 29 of the Gray BCM connector

If your vehicle requires it, cut the GREEN LOOP and connect the GREEN pigtail wire to PIN 29 of the Gray BCM connector (the wire color will vary)

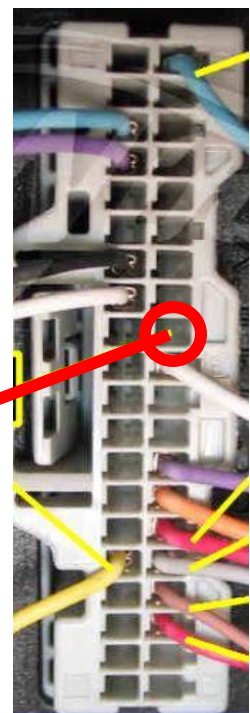

VEHICLE	18	17	16	15	14	13	12	11	10	09	08	07	BCM LOCATION
EX35							X	X	X	X	X		Passenger Kick Panel
EX37						X							Passenger Kick Panel
FX35							X	X	X	X			Passenger Kick Panel
FX50						X	X	X	X	X			Passenger Kick Panel
G25							X	X					Passenger Kick Panel
G35											X	X	Passenger Kick Panel
G37						X	X	X	X	X	X		Passenger Kick Panel
Q60				X	X								Passenger Kick Panel
QX50		X	X	X	X								Passenger Kick Panel
QX70		X	X	X	X								Passenger Kick Panel
370z	X	X	X	X	X	X	X	X	X	X			Passenger Kick Panel
Altima							X	X	X	X	X	X	Behind Instrument Cluster
GT-R			X	X	X	X	X	X	X	X			Passenger Kick Panel
Maxima					X	X	X	X	X	X			Behind Instrument Cluster
Murano					X	X	X	X	X	X			Behind Instrument Cluster

Module Programming

*** Make sure EVERY key FOB except ONE is at least 10ft away from the vehicle BEFORE proceeding***

- Plug the RED connector into the Remote Start Module
- Press and HOLD the button on the side of the Remote Start Module
- Plug in the BLUE connector while still holding the button in
- The light on the module will turn **ORANGE** - Release button - The light will now turn solid **RED**
- Press the Unlock button on your key FOB - the light will flash orange
- Insert the Key FOB into the key port
- **Press and hold the brake pedal for 15 seconds (or until the light flashes green for 3 seconds)**
- The light will go off and programming is complete
- Remove the key FOB from the key port
- Test the Remote Start by pressing the lock button 3 times on your key FOB. (make sure all the doors, hood and hatch are closed) 3 more presses will turn Remote Start off.

If the chart shows your BCM to be located behind the instrument cluster, take care not to scratch it when removing it. Typically there is only one connector (some vehicles have two) on the back of it that will need to be disconnected.

Generally, the bezel around the cluster will just pop off, but there may be a couple screws securing it into place. Likewise, there may be some trim overlapping the bezel that will need to be removed.

If you have questions about accessing your BCM, please visit our Youtube channel for installation videos. The URL is on the paperwork provided with the kit, or we have a link on the homepage of our website.