



Installation Instructions for Series 1 and Series 2 Heavy Duty Bypass Track and Hardware Kit

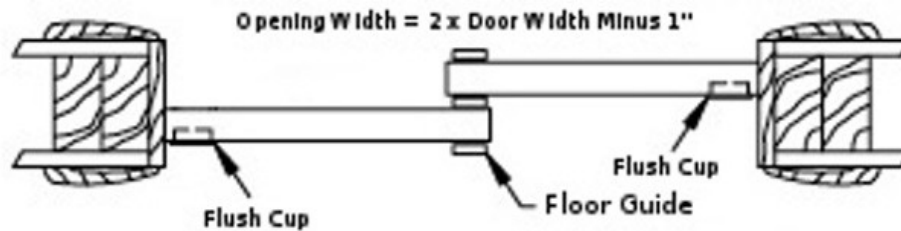

- 1) Cut the tracks down to fit your opening. Install the tracks onto the header. Recommended screws to use would be 1 1/4" pan head screws.
- 2) Attach door plates onto top of doors 2" from edge with lock tabs on the same side.

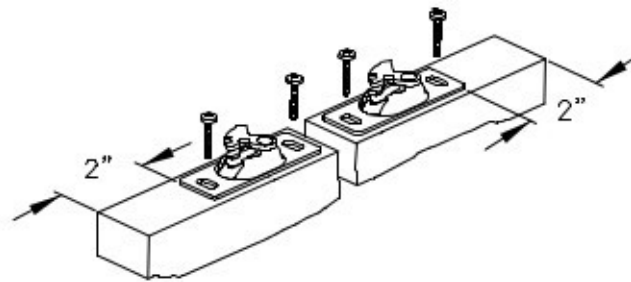

- 3) Insert the rollers into the tracks, two rollers in each track.
- 4) Mount door by locating door plate under adjusting bolt of hanger and fitting door until bolt slides into seat of door plate. Repeat with other hangers / door plates. Adjust hangers for height and plumb with jamb.
- 5) Slide both doors to one side of the opening. Place the floor guide between the doors (adjusting the width of it to accommodate the thickness of your doors) and attach the floor guide to the floor.

