

# MORTISE MOUNT- CT-51 (Mortise)

## K.N. CROWDER MFG. INC.

1220 BURLOAK DRIVE - BURLINGTON, ONTARIO - CANADA, L7L 6B3  
 TELEPHONE: 905-315-9788 — FAX: 905-315-8090 — TOLL FREE FAX: 1-800-567-0123  
 WEBSITE: www.kncrowder.com — E-MAIL: customerservice@kncrowder.com

## K.N. CROWDER INC.


210 EIGHTH STREET SOUTH - LEWISTON, NEW YORK - U.S.A. 14092  
 TELEPHONE: 1-716-754-8247 — TOLL FREE FAX: 1-800-567-0123



## AUTOMATIC DOOR BOTTOMS

### TRIMMING

Up to 6" (3" only for 24" length) may be cut off from lock side.

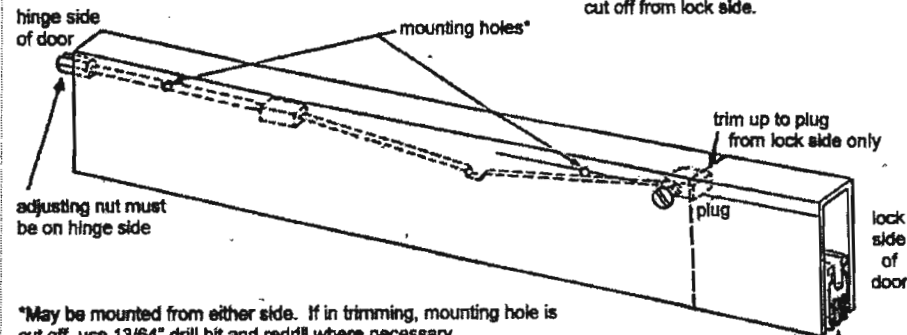

\*May be mounted from either side. If in trimming, mounting hole is cut off, use 13/64" drill bit and redrill where necessary.

**NOTE:** Presser Plate moves laterally approximately 3/8". Ensure that presser plate is extended fully to lock side, before trimming.

**SEMI-MORTISED AND FULL MORTISED:** Cut to full width of door.  
**SURFACE MOUNTED:** Fits between stops. (Allow 1/16" clearance at both ends between housing and stop).

### HOW TO INSTALL

For semi-mortised and mortised application, doors must be prepared in advance. See drawings for proper cut-out dimensions.

Semi-mortised and mortised should be trimmed to full width of door and fit between jambs.

Surface mounted must be mounted on face of door between stops. Leave 1/16" clearance on both ends.

All Automatic Door Bottoms must be installed with adjusting nut on hinge side. Place in proper position before making adjustments.

### FINAL ADJUSTMENT

Turn hex adjusting nut in or out and close door until insert makes contact with sill. A compressed seal is not recommended, nor is it necessary and will inhibit proper operation. Neoprene should simply make contact with sill.

CT-51

9/16" (14.3 mm)

1-1/2" (38.1 mm)

