


Series 1 HBP Heavy Duty Pocket Door Track and Hardware Kit Installation Instructions

Use with one sliding door weighing up to 250-lbs.

Note: Track must be level and square with jamb. Door must be sealed on all 6 sides.

1) Attach door plates (100) onto top of doors 2" from edge with lock tabs on the same side.

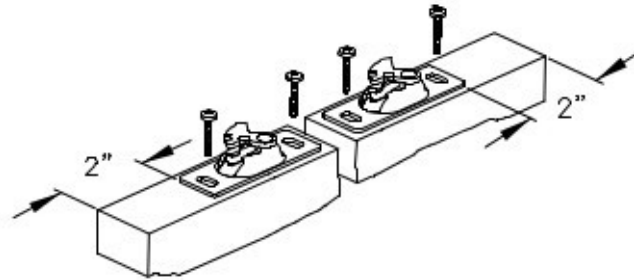

2) Insert hanger (100-1) into track alternating wheel positions for even weight distribution.

3) Mount door by locating door plate (100) under adjusting bolt of hanger (100-1) and fitting door until bolt slides into seat of door plate (100). Repeat with other hanger / door plate. Adjust hangers (100-1) for height and plumb with jamb.

4) Attach guide at bottom of opening and adjust so door is centered in opening.

