


Series 2 HBP Heavy Duty Pocket Door Track and Hardware Kit Installation Instructions

Use with one sliding door weighing up to 200-lbs.

Note: Track must be level and square with jamb. Door must be sealed on all 6 sides.

1) Attach door plates onto top of doors 2" from edge with lock tabs on the same side.

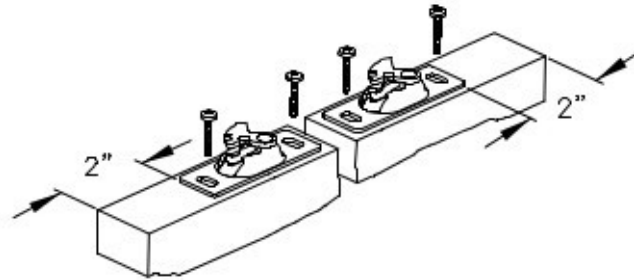

2) Insert hanger into track alternating wheel positions for even weight distribution.

3) Mount door by locating door plate under adjusting bolt of hanger and fitting door until bolt slides into seat of door plate. Repeat with other hanger / door plate. Adjust hangers for height and plumb with jamb.

4) Attach guide at bottom of opening and adjust so door is centered in opening.

