INSTRUCTION SHEET



-J02898 Kit Number 59032-03Y REV. 6-16-2003

XB CARBON FIBER CHIN FAIRING

General

This kit fits all 2003 and later XB9R, XB9S, XB9SL, XB12R and XB12S model motorcycles.

NOTES

See the Service Parts illustration for a list of items contained in this kit.

A Service Manual for your model motorcycle is available from your local Buell Dealer.

AWARNING

The rider's safety depends upon the correct installation of this kit. Follow the procedures listed in this instruction sheet and in the appropriate Service Manual. If the procedures are not within your capabilities, or if you do not have the correct tools, have your Harley-Davidson Dealer perform the installation. Failure to follow instructions could result in death or serious injury.

Removal

Refer to the appropriate Service Manual for the chin fairing removal procedure. The two front original equipment fasteners will be re-used in the installation of the new kit.

Installation

 See Service Parts illustration. Position fairing (1) and loosely install front fasteners (2) and washers (4). Use LOCTITE 272 on all fasteners.

NOTE

Turn wheel full right or left for easier access to center fasteners.

 Loosely install the right side of the chin fairing by threading first the front fastener (2) and washer (4) through the mounting hole of the chin fairing and the spacer (3) on the backside of the chin fairing and then the remaining back fasteners.

NOTE

Start with the fastener that is closest to the front.

- 4. Repeat step 2 on the left side of the chin fairing.
- 5. Tigten all fasteners (2) to 36-48 in-lbs (4-5 Nm).


Part No. 59032-03Y

XB CARBON FIBER CHIN FAIRING

Date 6/03

Service Parts



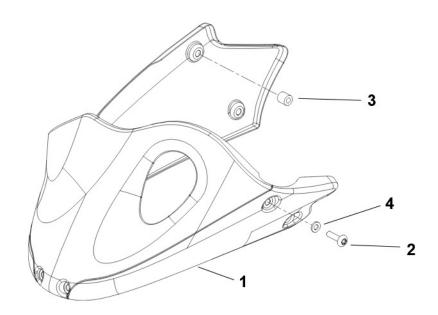

Kit Number 59032-03Y

Item	Description	Part No.
1	Chin Fairing	59032-03Y
2	1/4-20 x 1" Torx Screw	5239
3	1/4" ID x 1/2" OD x 1/2" Spacer	5850
4	1/4" ID x Black Nylon Washer	7017

-J02898 2 of 2