



INSTRUCTIONS

1. Flex the 40" thin head spar first thru the loops behind the Turtle's eyes, then down into the hem along the outside edge of the turtle's head to the end of the seem.

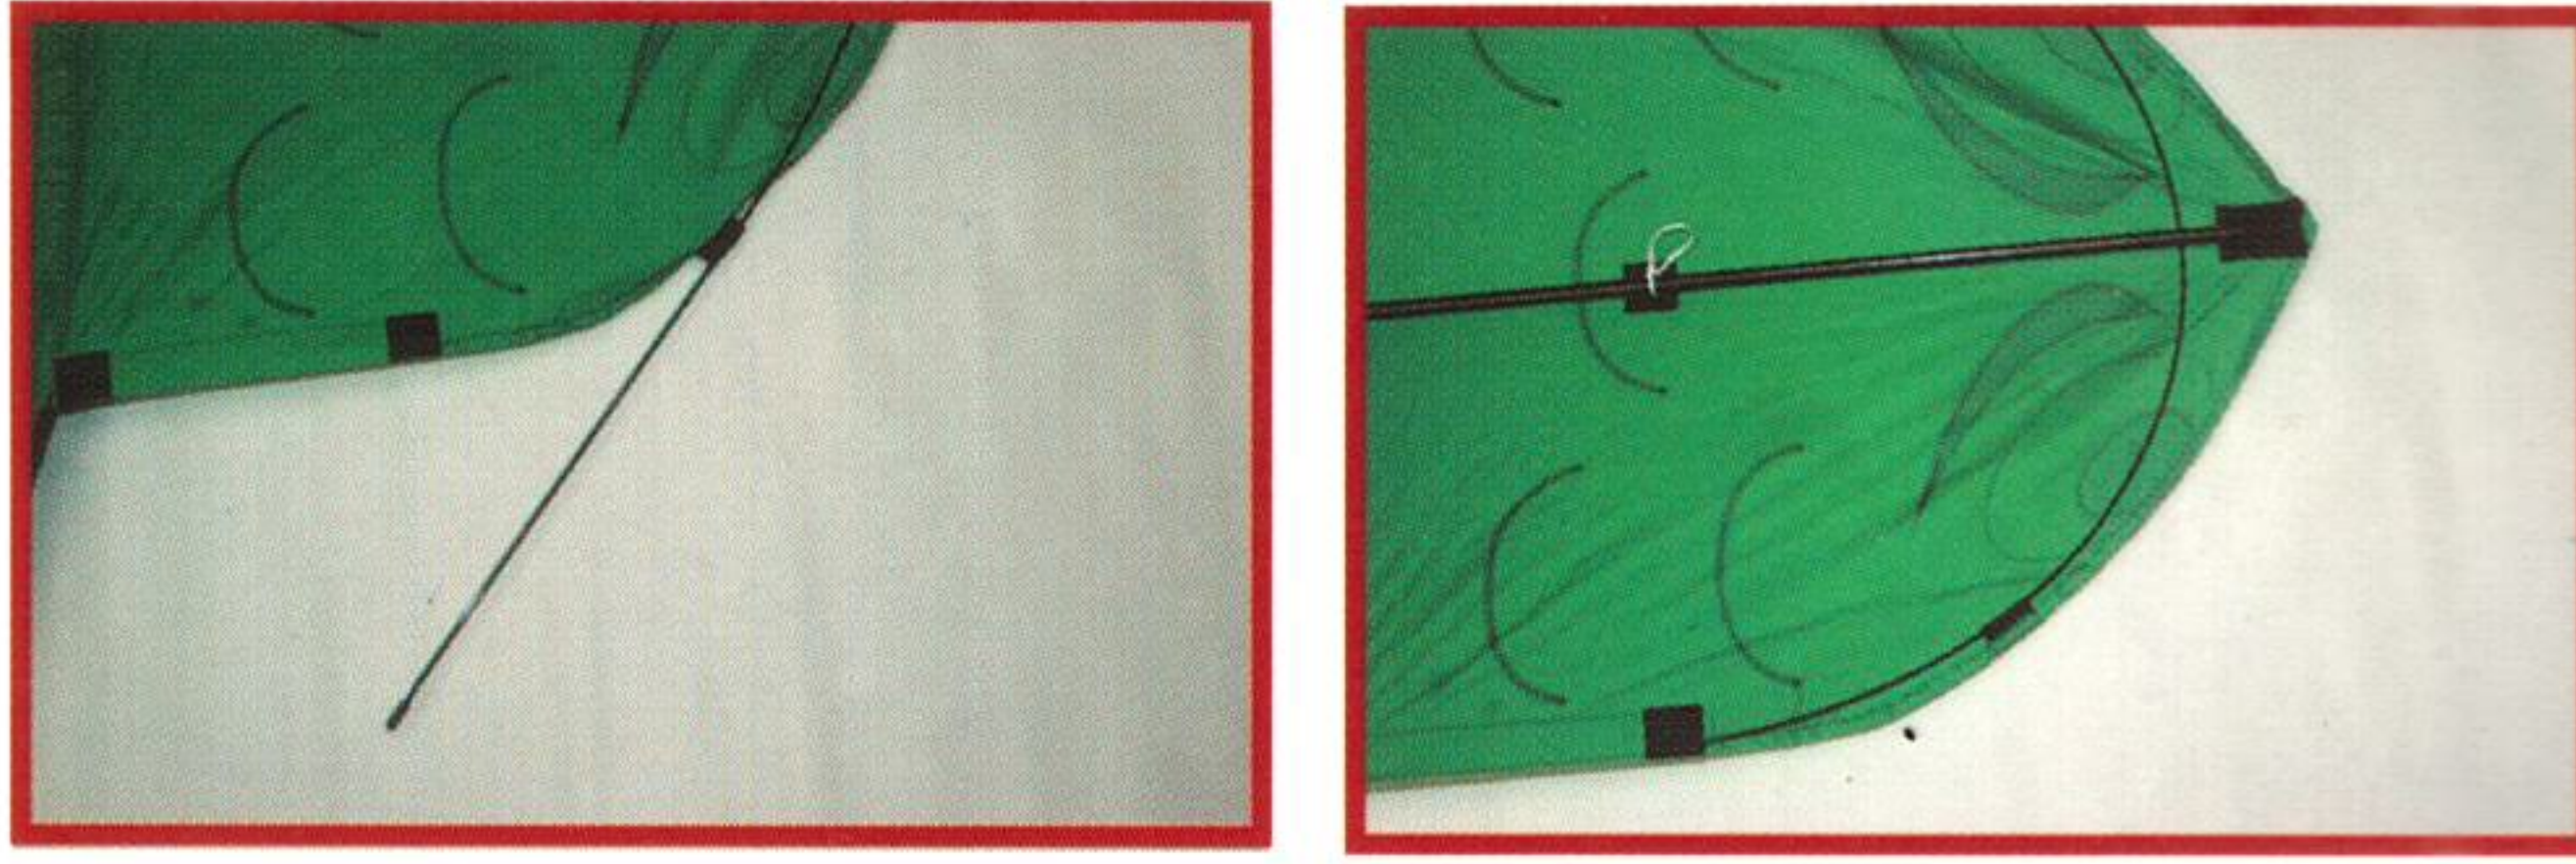

2. Connect the top and lower sections of the center verticle spine that are already attach to kite's bridle. Slide bottom end of the connected spar thru the bottom pocket at the Turtle's tail. Next slide the top of the verticle spar into the top pocket at the Turtle's nose. Now flip the velcro over the bottom of the spar and secure the spine into place.

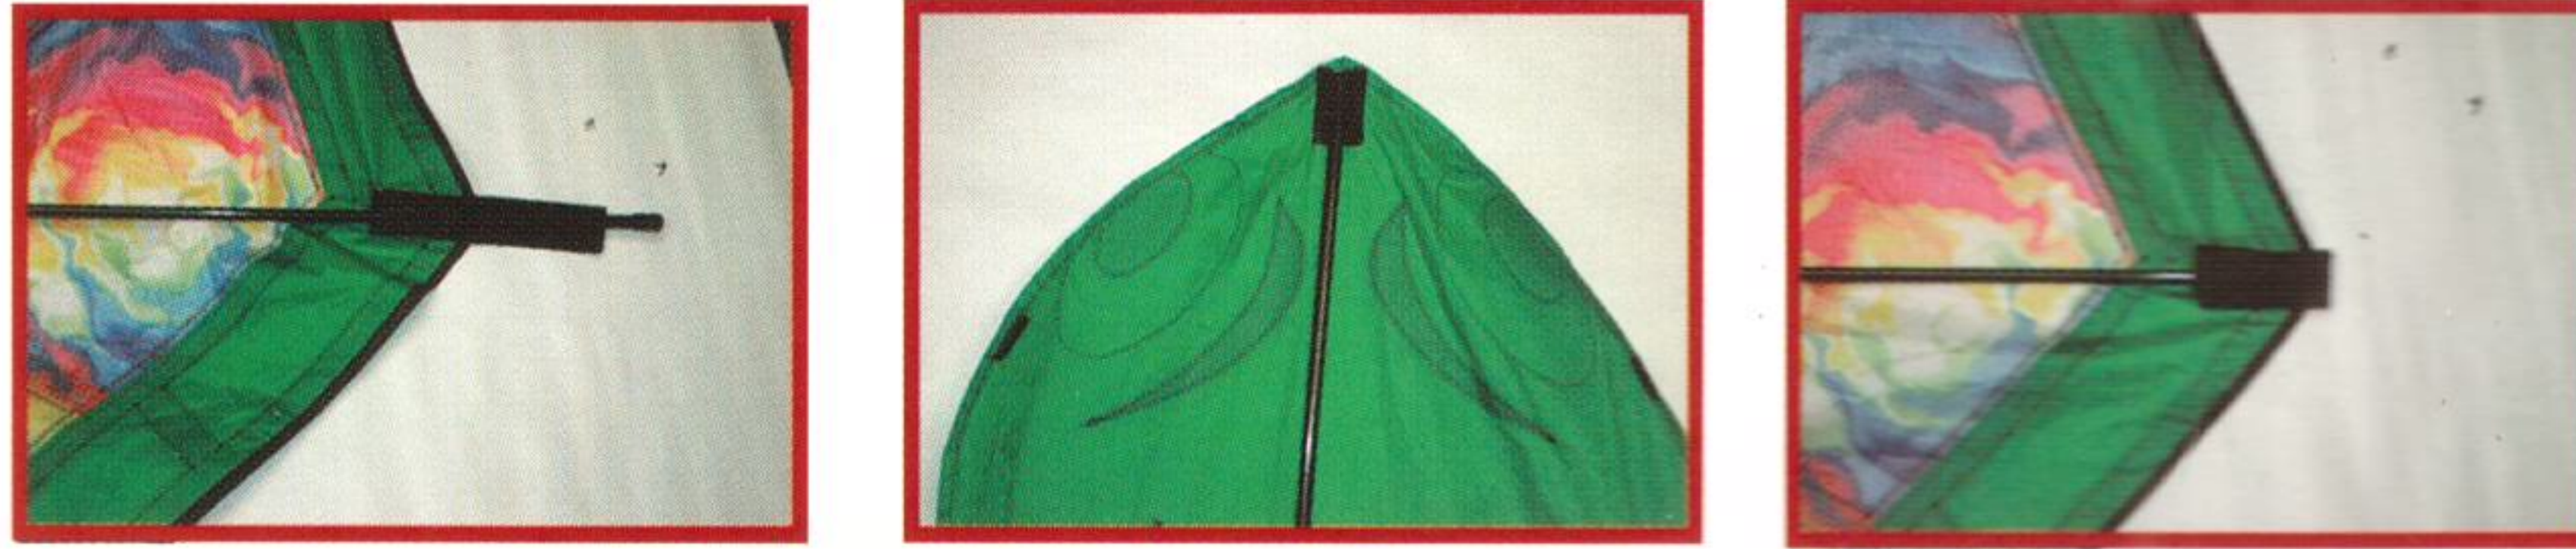

3. Slide the ferruled end of one of the 20" spar with connector into the opening of the left upper fin hem. Connect the ferrule to the spar that is already located in the upper fin. Slide the unferruled end into the center dihedral located on the kite's spine. Repeat this step with the right upper fin.



4. Connect the 30" cross spar to the connectors on each of the top fin spars.

5. Slide the capped end of one of the 41" lower fin spars into the left lower fin hem and slide to the end. Insert the other end of the spar into the lower center dihedral on the kite's spine. Repeat this step with the right lower fin.




6. Attach flight line to tow loop on bridle.

Your 10' Turtle is now ready to fly!

LAUNCHING

With the wind at your back, have a friend walk 50' downwind and lift the kite over their head. With the nose pointing up and the keel or bridle facing you, pull any slack out of the line and grasp it securely. Give your friend a signal and swiftly pull back on the line as your friend lets go of the kite. Pull in on the line hand over hand until the kite is airborne. Once it catches wind, gently let line out and your kite will climb in the sky!

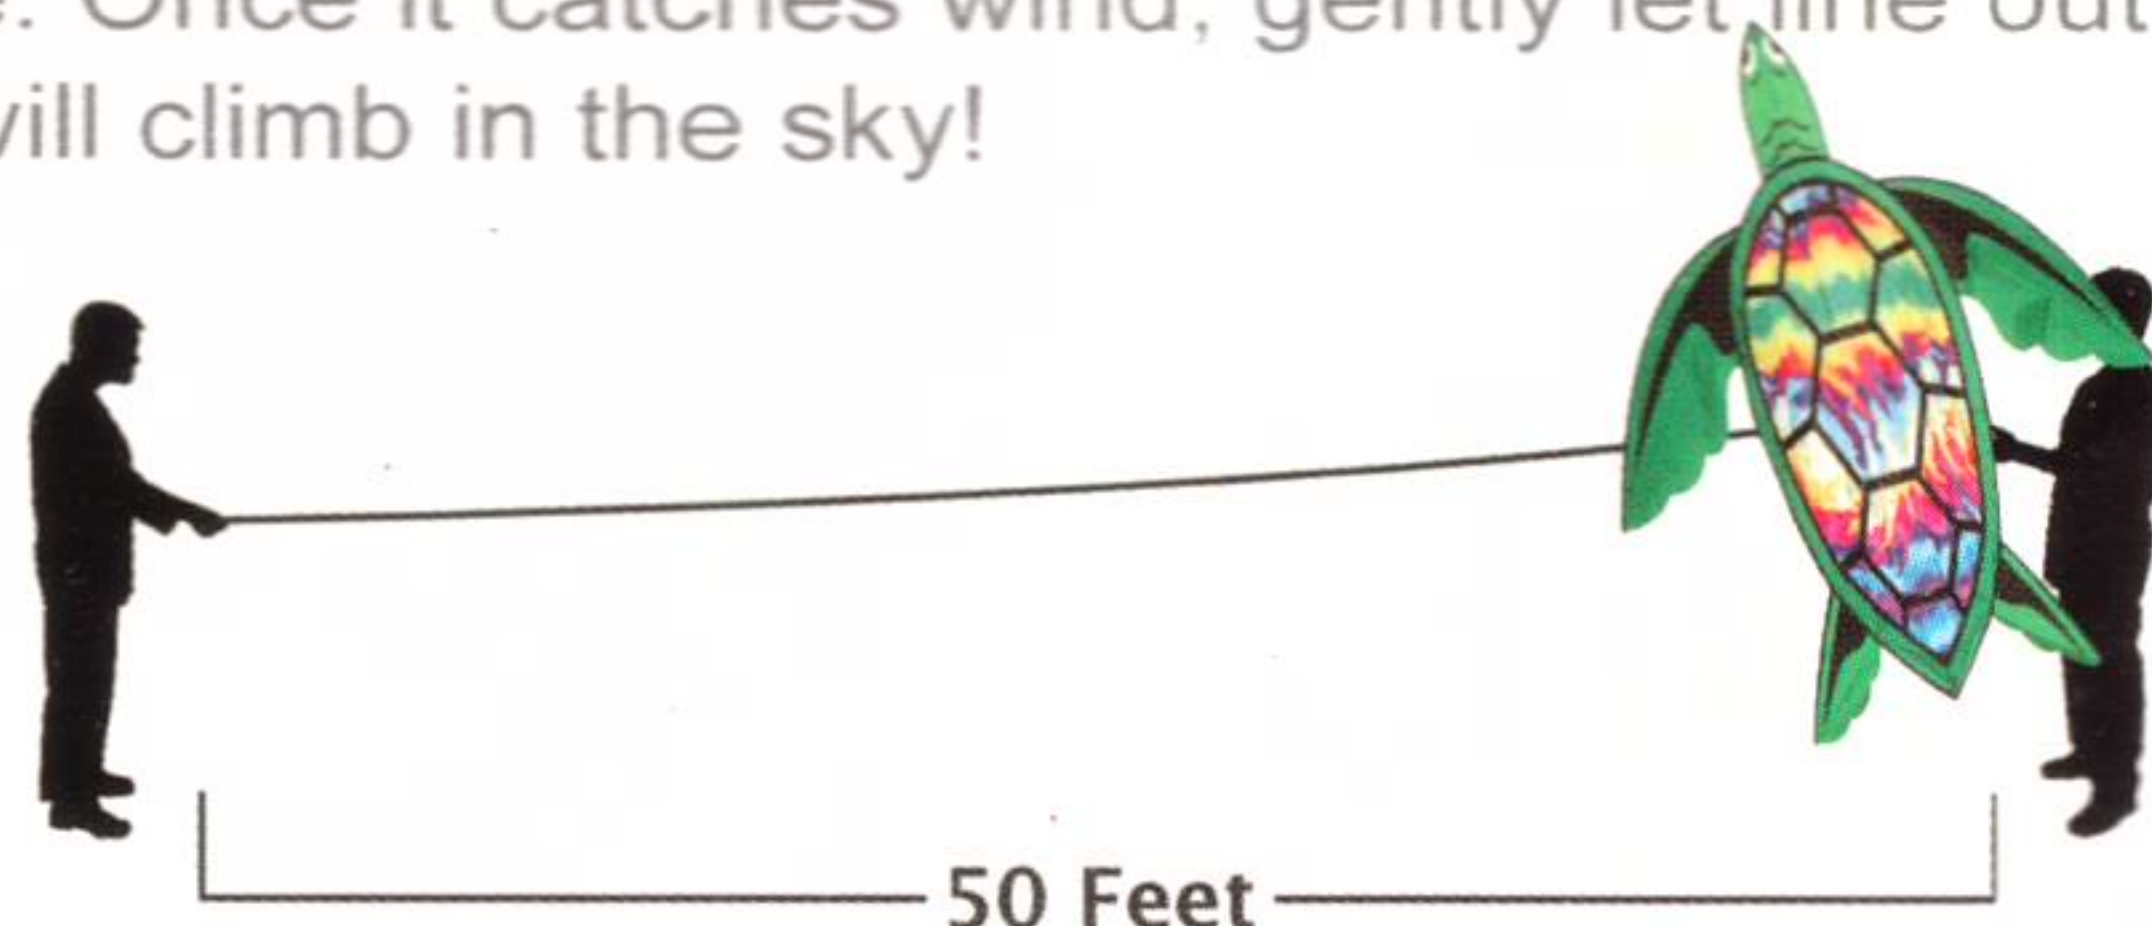

50 Feet