


SheltaPod

If you purchased your SheltaPod in 2020 with the zip close front feature then here's how to secure your pod in driveway mode.

Recommended guyline positions when in use

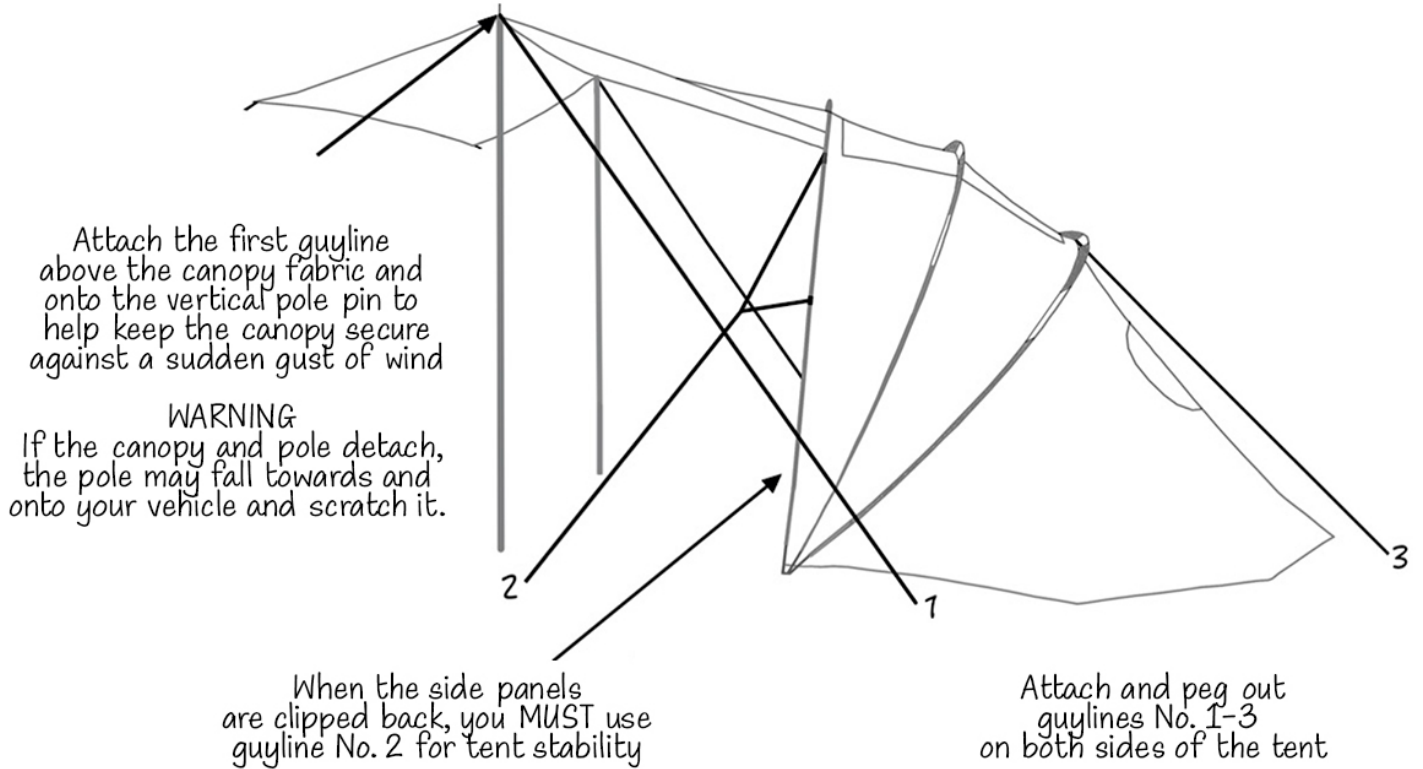

Drive-Away Procedure

Step 3 - Detach the sun canopy from the vehicle, roll up the canopy fabric (roll under rather than over) and secure above the tent doorway using the clips provided

Step 1 - Extend and peg down the side panels on both sides of the tent

Step 4 - Zip down front panel.
Option to peg into the ground.

Step 2 - Attach and peg down guylines No 2-4 on both sides of the tent

