


# sheltaPod


## Recommended guyline positions when in use

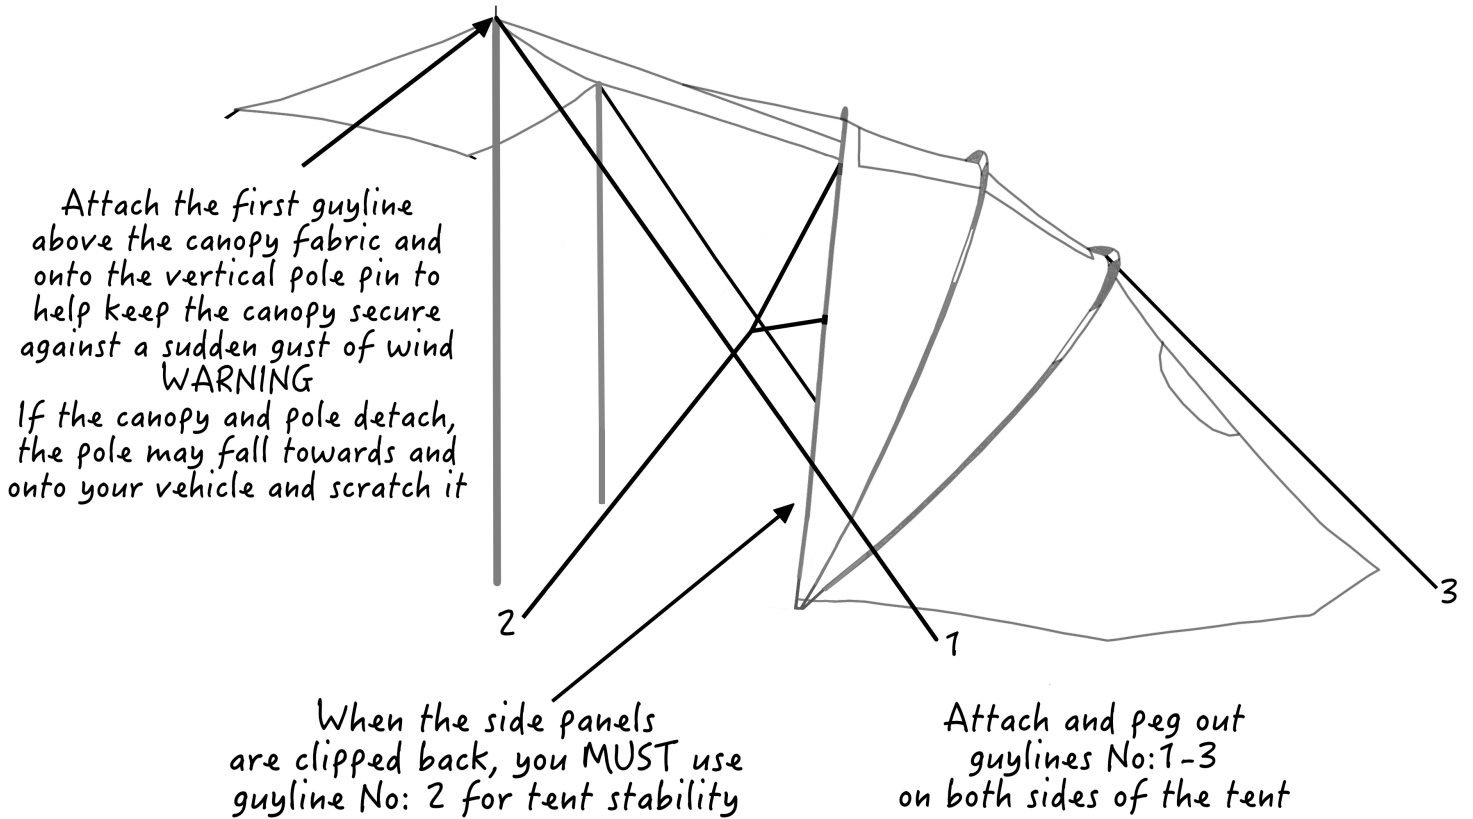

## Drive-Away Procedure


Step 3 - Detach the sun canopy from the vehicle, roll up the canopy fabric and secure above the tent doorway using the clips provided

Step 1 - Extend and peg down the side panels on both sides of the tent

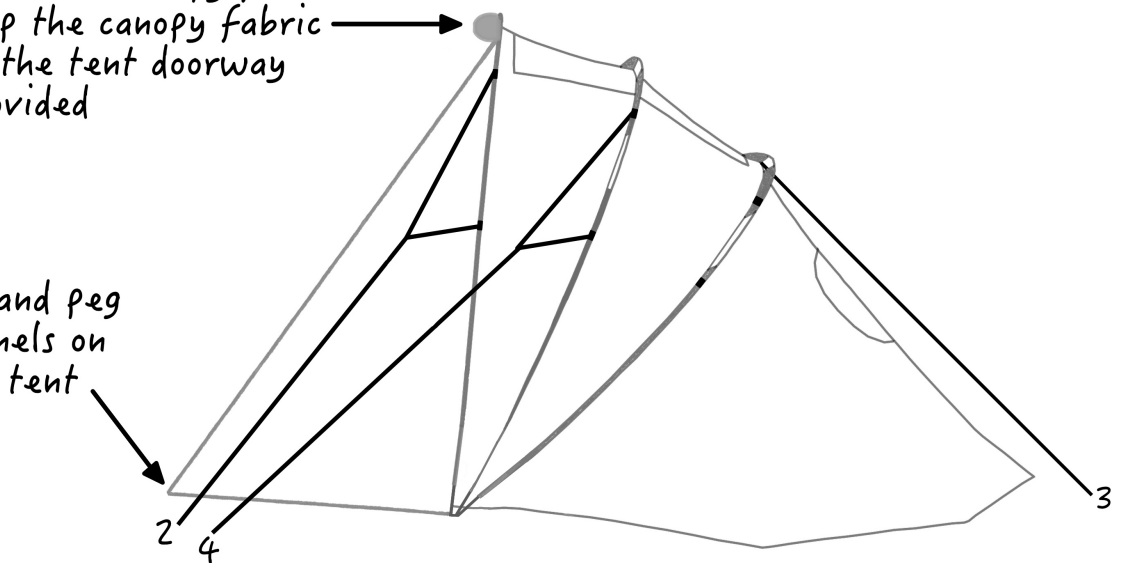

## Drive-Away Procedure for windy locations


Step 2 - Remove all the poles from the sun canopy and lay attachment edge onto the ground. Peg securely into the ground using the webbing straps at points A & B

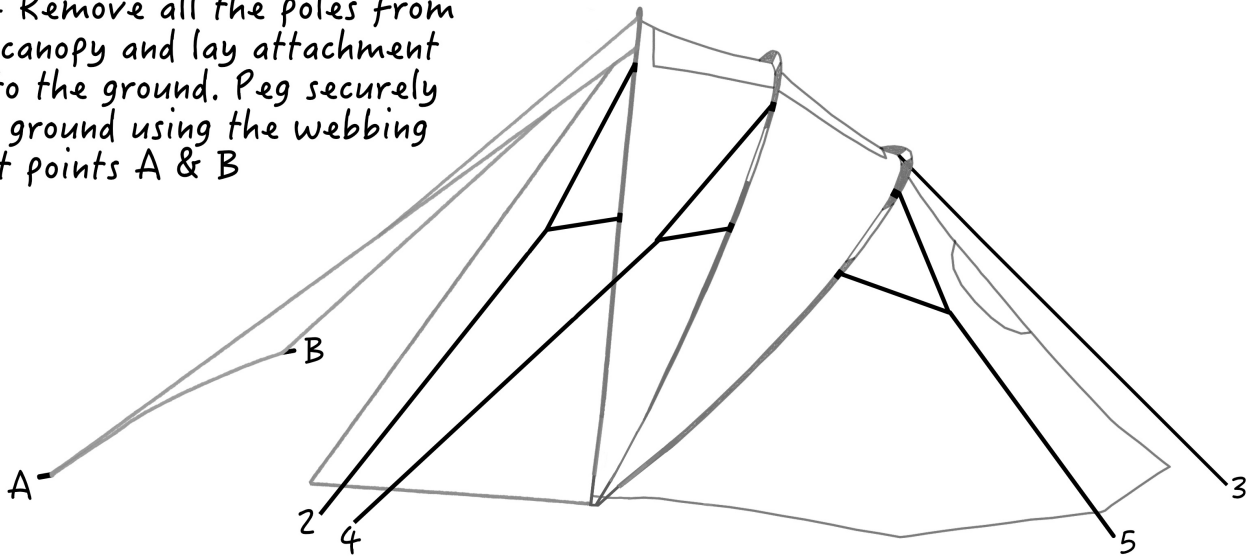

Step 1 - Attach and peg down guylines No:2-5 on both sides of the tent

## Drive-Away Procedure if location is sheltered from the wind

Step 2 - fold down the sun canopy & attach to the vertical poles using the velcro straps

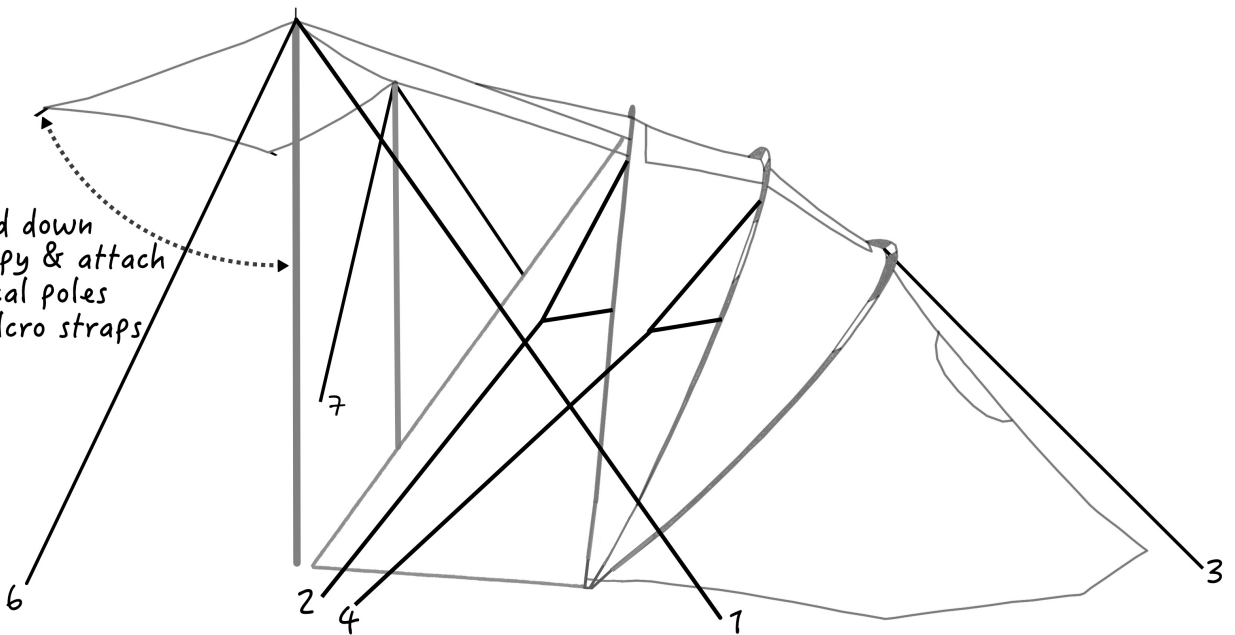

Step 1 - Attach and peg out guylines No:1-4 on both sides of the tent

In addition, attach extra guylines No:6 & 7 to the vertical poles and peg towards the front and back of vehicle