
Set Up Instructions

20T-CANOPY TENT

Step 1: Remove frame from bag and place on level ground.




Step 3: Place canopy tent over the frame with graphic side out. Make sure the top of the canopy is centered on the frame and aligned over the corners of frame.


Step 4: Wrap Velcro straps of canopy around all 4 sides of frame.



Step 5: Wrap Velcro straps of canopy around all 4 corners of frame.

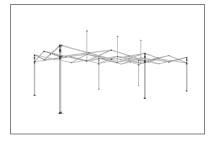

Step 6: Lift the 2 adjacent outer legs and slide out the inner legs until the button snap-locks into the hole of the outer leg. Repeat on opposite 2 legs until fully extended.

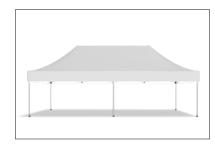


Step 7: Turn the handle in the center of the frame to extend and tighten tent into full position.



Step 8: Complete.



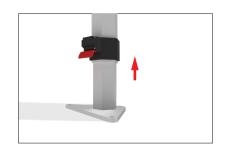






Set Up Instructions

20TFH-FULL AND HALF WALLS


Step 1: Attach top of full wall to bottom of canopy valence with Velcro. Attach sides of full wall to frame using the Velcro straps.

Step 2: Attach Velcro straps all the way down the frame on both sides to secure into place.

Step 3: Full wall assembled.

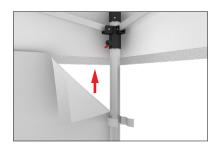

Step 5: Attach half wall to frame with Velcro strap just above push button lock. Repeat this front and back for each side wall.

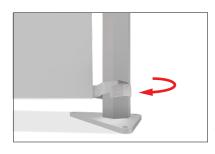

Step 6: Attach Velcro straps all the way down the frame on both sides to secure into place.



Step 7: Half walls assembled.

