


# Set Up Instructions

## DNA CURTAIN STORAGE

**Step 1:** Insert the pole into the pocket opening of the fabric

**Step 2:** Fasten the clamp fittings to both ends of the rod with screws.

**Step 3:** Attach curtain rod clamps to the corners of each light box.

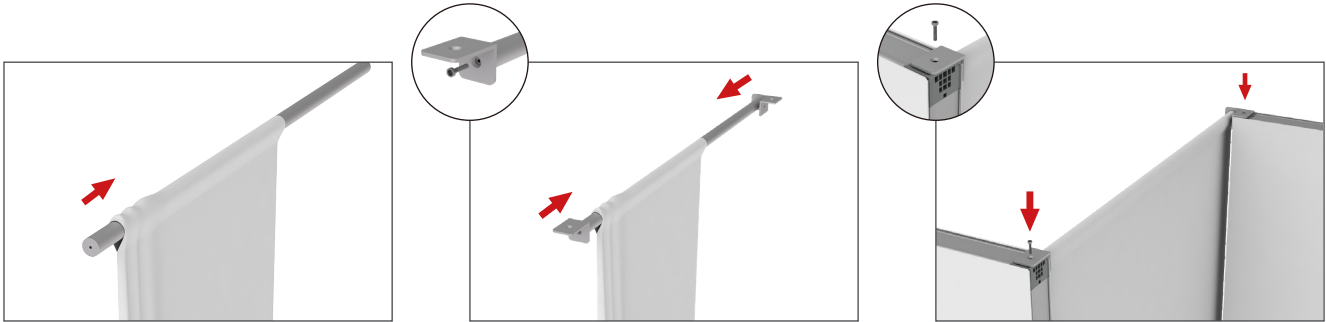

**Step 4:** Complete.

