

## **Set Up Instructions**

## **OF-23FE DISPLAY**


**Step 1:** Carefully remove frame and graphic from nylon bag.



**Step 3:** Lock all hooks between front and back hubs.





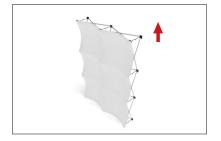





WARNING BEFORE COLLAPSING THE FRAME:

Step 1: Both graphic end caps must be detached from end cap brackets before collapsing frame.

Step 2: **To avoid damage to the frame**, all hooks must be unhooked and separated from each other.

Once this is done the frame should begin to collapse under its own weight without much effort.





## LIGHTS:

(OPTIONAL) Attach lights to top of frame by sliding the plastic "x block" under the rear pole and over the front pole.

