


# Set Up Instructions

# OF-33FE DISPLAY


**Step 1:** Carefully remove frame and graphic from nylon bag.



**Step 2:** Ensure “adjustable feet” of frame are on the floor. Pull up display into upright position.

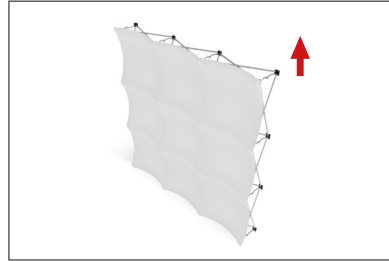

**Step 3:** Lock all hooks between front and back hubs.

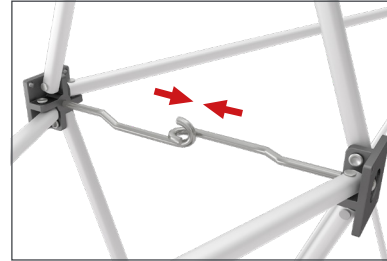

**Step 4:** If supplied with fabric end caps, wrap Velcro fabric edges around all end cap brackets on both sides. Pull past edge if needed to make taut.




## WARNING BEFORE COLLAPSING THE FRAME:

Step 1: Both graphic end caps must be detached from end cap brackets before collapsing frame.

Step 2: **To avoid damage to the frame**, all hooks must be unhooked and separated from each other.

Once this is done the frame should begin to collapse under its own weight without much effort.

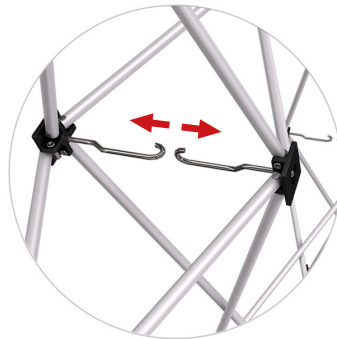

## LIGHTS:

(OPTIONAL) Attach lights to top of frame by sliding the plastic “x block” under the rear pole and over the front pole.

