


Set Up Instructions

WFA + Monitor


Step 1: Follow instructions to prebuild WaterFall frame.

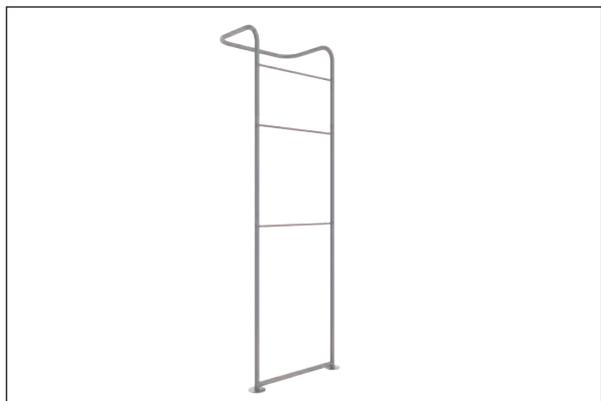


Step 2: Attach the horizontal clamp with the black monitor bracket. Install at a height that will be suitable for the final monitor position.



Step 3: Remove the black monitor bracket.

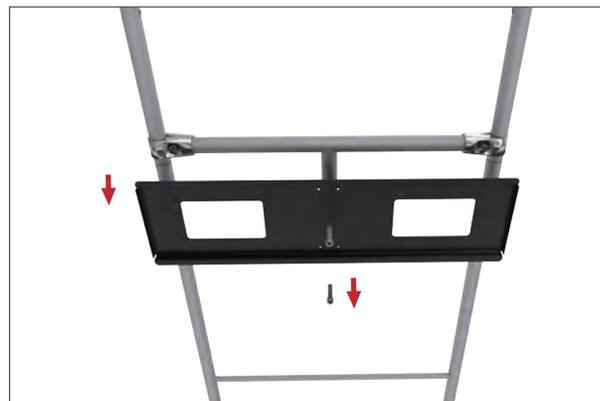

Step 4: Fit the fabric over the completed frame. Locate the screw holes on the horizontal clamp bar (for the monitor bracket to mount) and pierce the fabric to reveal holes.

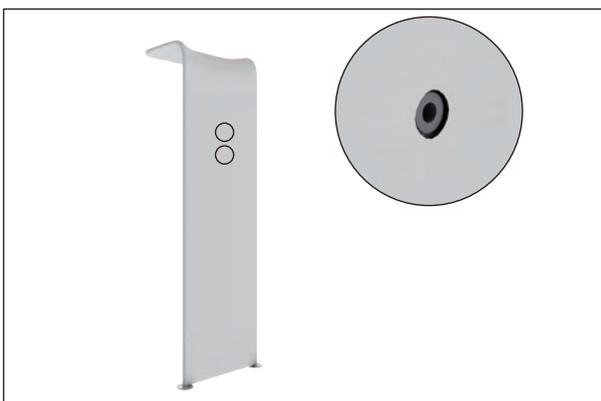

Step 5: Reinstall the black TV bracket.



Step 6: Install the hanging brackets onto the back of the monitor. You can also adjust the height of the monitor by moving the position of the brackets up or down using the different holes in the bracket.



Step 7: Hang the monitor onto the waterfall mount and lock into position with set screws.

