

## Technical Data Sheet

### Heritage 8021 Installing or Replacing the Ceramic Baffle

Date: 4/26/2005

Page: 1 of 1

**MATERIALS REQUIRED:**


3120-020 Ceramic Baffle Board

**TOOLS REQUIRED:**

Work Gloves

Safety Glasses or Goggles

**BEFORE YOU BEGIN:** Allow the stove to cool to room temperature.

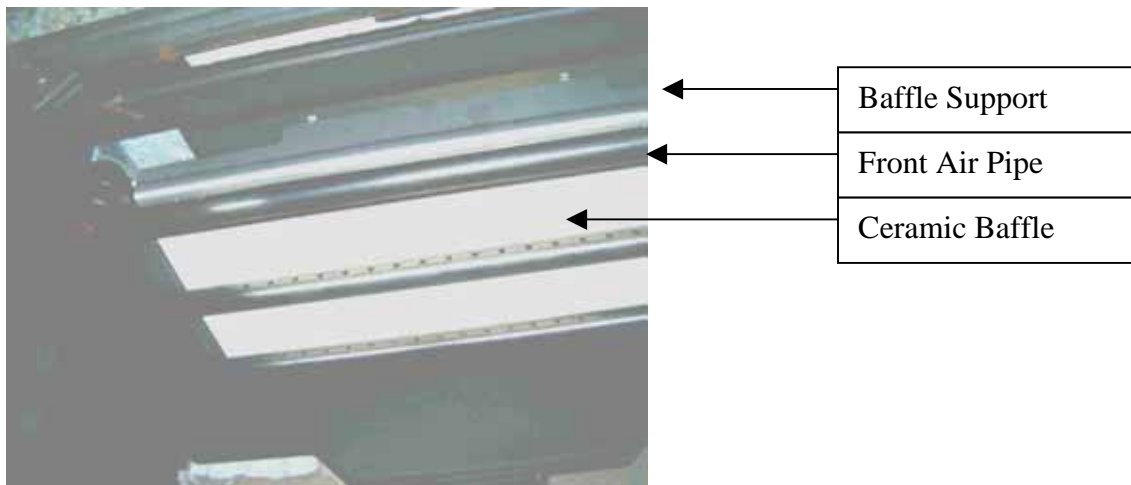

**Photo #1** – The Top of the Heritage Firebox

**PROCEDURE:**

- 1) If the old board is still in the stove and needs to be replaced, break it apart and remove it in smaller pieces. Use your gloves and safety glasses when handling the pieces.
- 2) Place the new baffle in the firebox. Slide it up between the first and middle secondary air pipes. Allow it to drop down so it rests on top of the secondary air pipes and between the left and right sides of the secondary air manifold as shown in Photo #1. Make sure the indented edge of the board is placed down and to the front (it will rest on the stainless steel baffle support).
- 3) Make sure the front baffle support is positioned as shown in Photo #1. The support rests on the front most secondary air pipe with the flanges on the left and right side of the support piece facing front and the support dropping down behind the pipe.