


How to Set Up HD Truck Modules for HDCON-16PIN

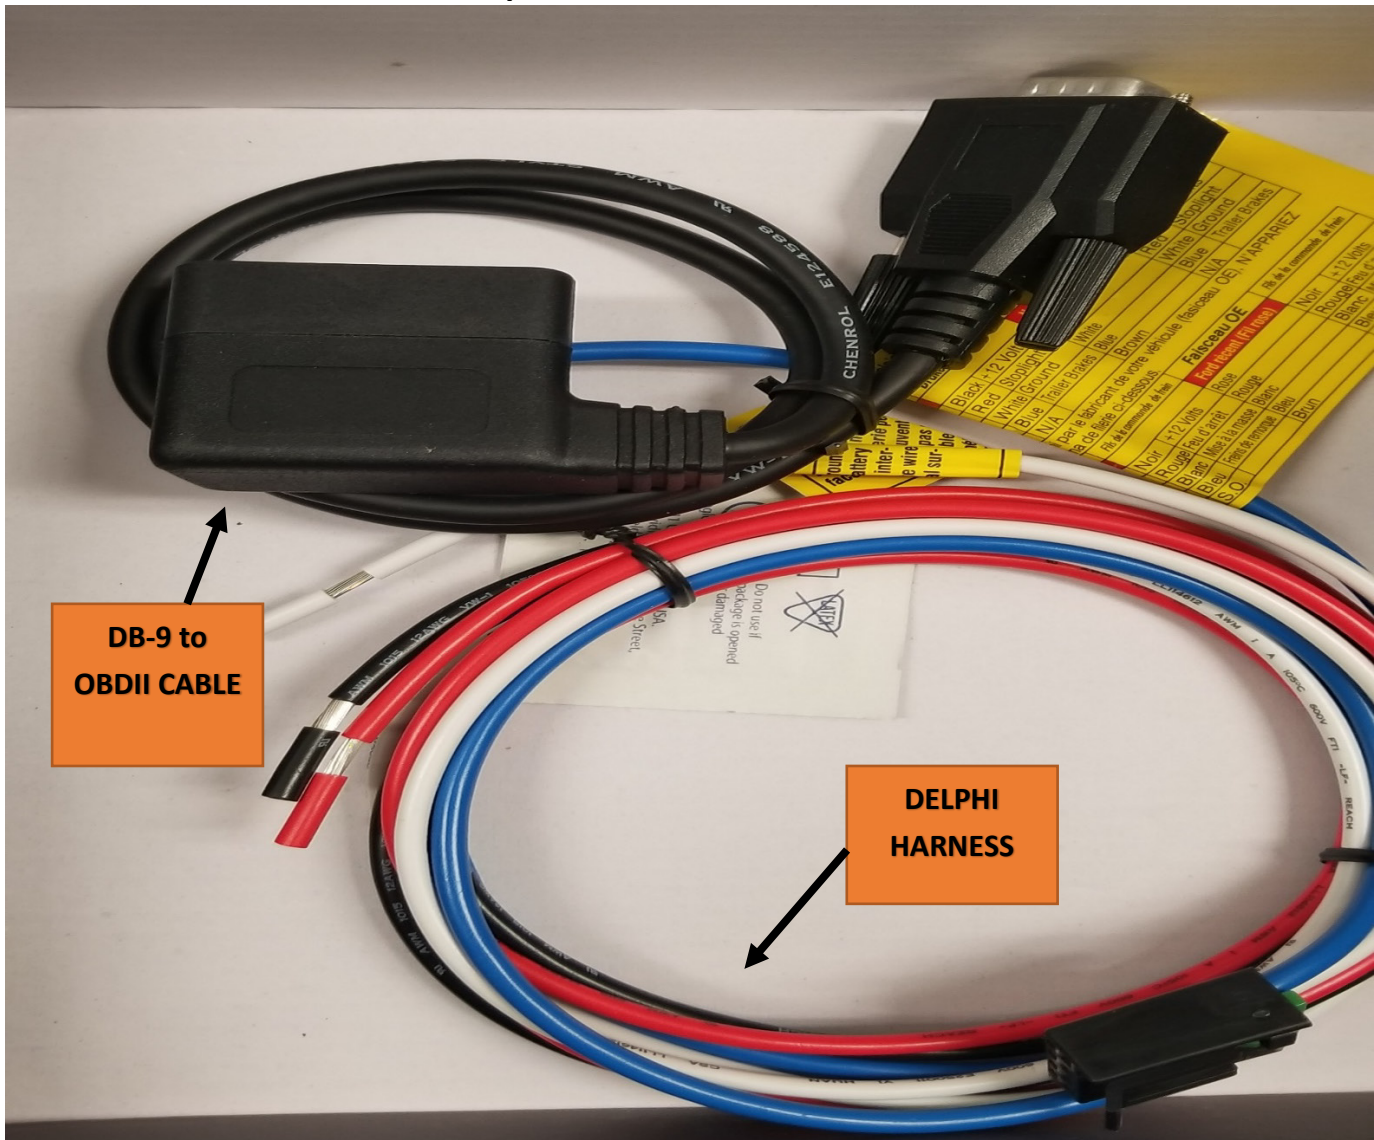

DB-9 to
OBDII CABLE

DELPHI
HARNESS

DireLink (DL-100 & DL-200NE) Includes the following Harness and Cable:


One (1) Delphi Harness

One (1) DB-9 to OBDII Cable.

If you plan to use the DireLink 200NE or DL-100 for **non-heavy-duty vehicles**, you will need the regular DB-9 to OBDII cable included in the DireLink box.

Above picture shows the harness and cable included in the DireLink 200NE or DL-100 box.

How to Set Up HD Truck Modules for HDCON-16PIN

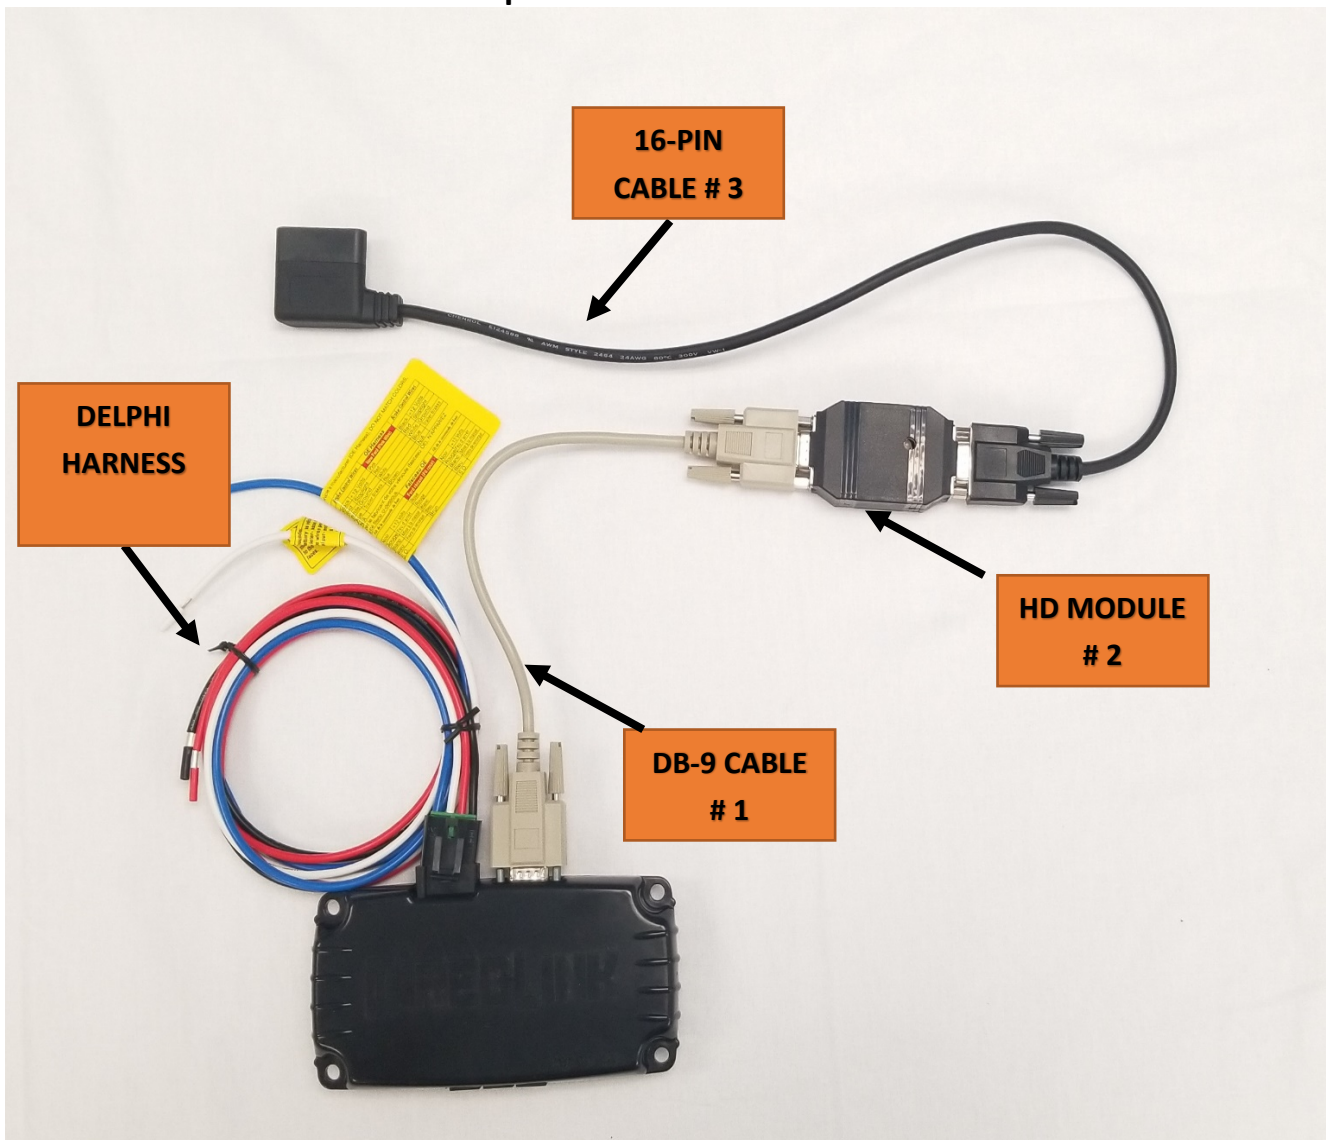

Your Heavy-Duty Truck Module Kit Includes the following items:

One (#1) DB-9 Female to DB-9 Male Cable.

One (#2) HD Truck Module.

One (#3) 16-Pin HD Truck Cable (Part# 81A-HD-16PIN-250).

****NOTE: This is not the same as DB-9 to OBDII cable included in the DL-100 OR DL-200NE Box****

When using the DireLink 200NE or DL-100 for your Heady Duty Truck, please be sure to use ALL items in the HD Truck Module Kit (HDCON-16PIN)

- Above picture shows how the HD Truck Module Kit should be connected to the DireLink Brake Controller

For assistance with you DireLink trailer brake controller, please call 800-938-8766 or email inforvbrakes@tuson.com