


SPRI PLYO BOX ASSEMBLY

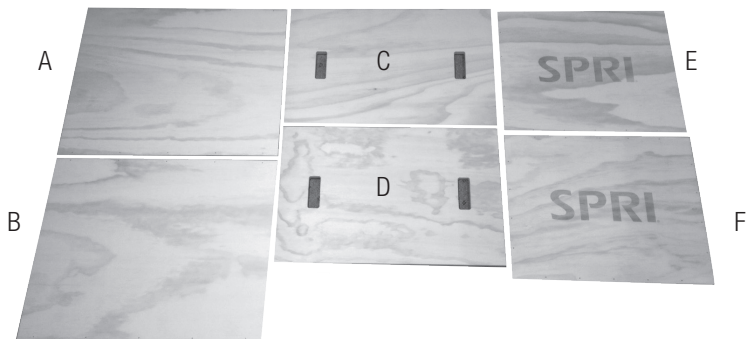


Product contents included

-Tools needed: Phillips-head drill/driver

Step 1


Screw long side panel (A) to handle panel (C).

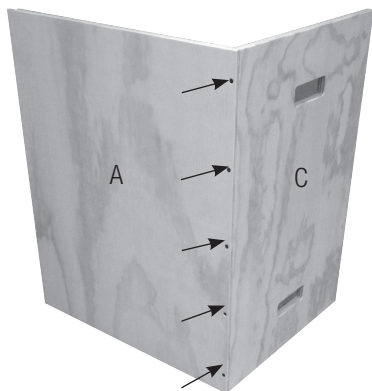

ASSEMBLY, CONTINUED

Step 2


Screw long side panel (B) to handle panel (C).

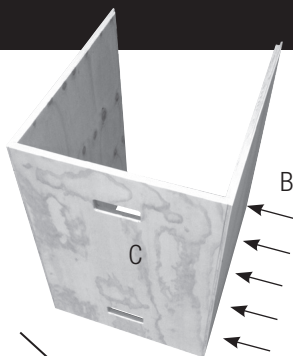

Step 3

Position both logo panels (E & F) in place as shown.


Do not add any screws at this time.

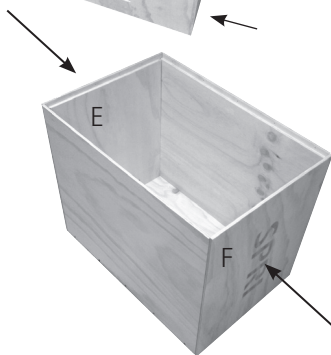

Step 4

Place handle panel (D) to construction. Ensure all parts are a tight fit.

Add all remaining screws. Ensure all panels are secure, aligned and flush.

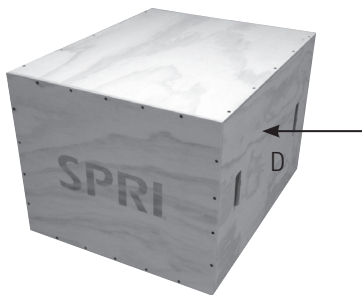

SPRI

All exercise programs come with inherent risks. Consult your health care professional before beginning this or any exercise program.

© & TM 2017 GaiaM Americas, Inc. All Rights Reserved. SPRI is a registered trademark of GaiaM Americas, Inc. Manufactured and distributed under license by Fit for Life LLC, Louisville, CO 80027-2452. **MADE IN CHINA.**

SKU 05-6059AINT